

How to input single ended signal to DRV595

Please confirm if following plan is correct, and advice "Recommended Maximum Input Voltage Swing" .

