

According to "Print", the result and some figure output. Simulation data is not the same as "print out data". It always outputs the same figure as follows;



■Switch On Distance vs Adj Code ■Switch Off Distance vs Adj Code

Operating Values				
#	Name	Value	Description	
1.	ADJ Code	1.0	ADJ code setting	-
2.	BOM Count	3	Total Foot Print Area of BOM components	
3.	Closest target frequency (MHz)	15.01	Frequency at closest target distance	
4.	Closest target	3.123	Inductance at closest target distance	