



AWR1642 SOP Flashing Mode



Reset (NRST) or Power OFF/ON



Remove ONLY SOP2

AWR1642 SOP Functional Mode



Reset (NRST) or Power OFF/ON