
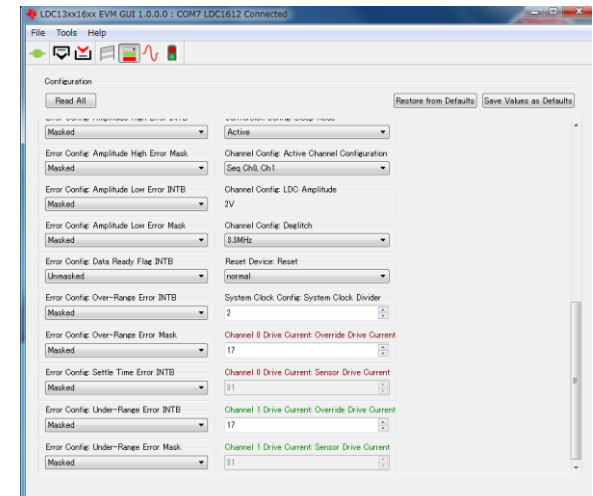
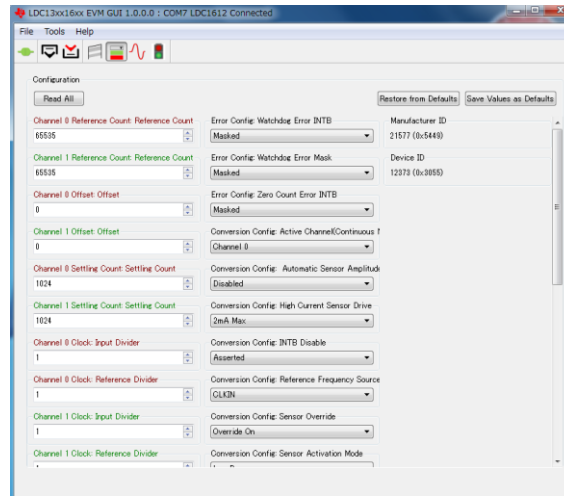
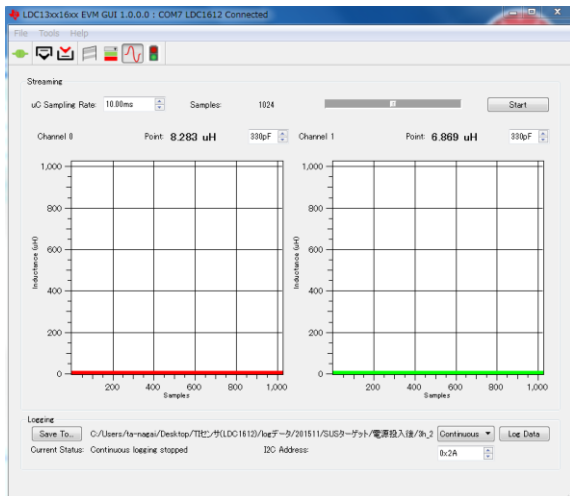


LDC1612EVM / Inductance log without target

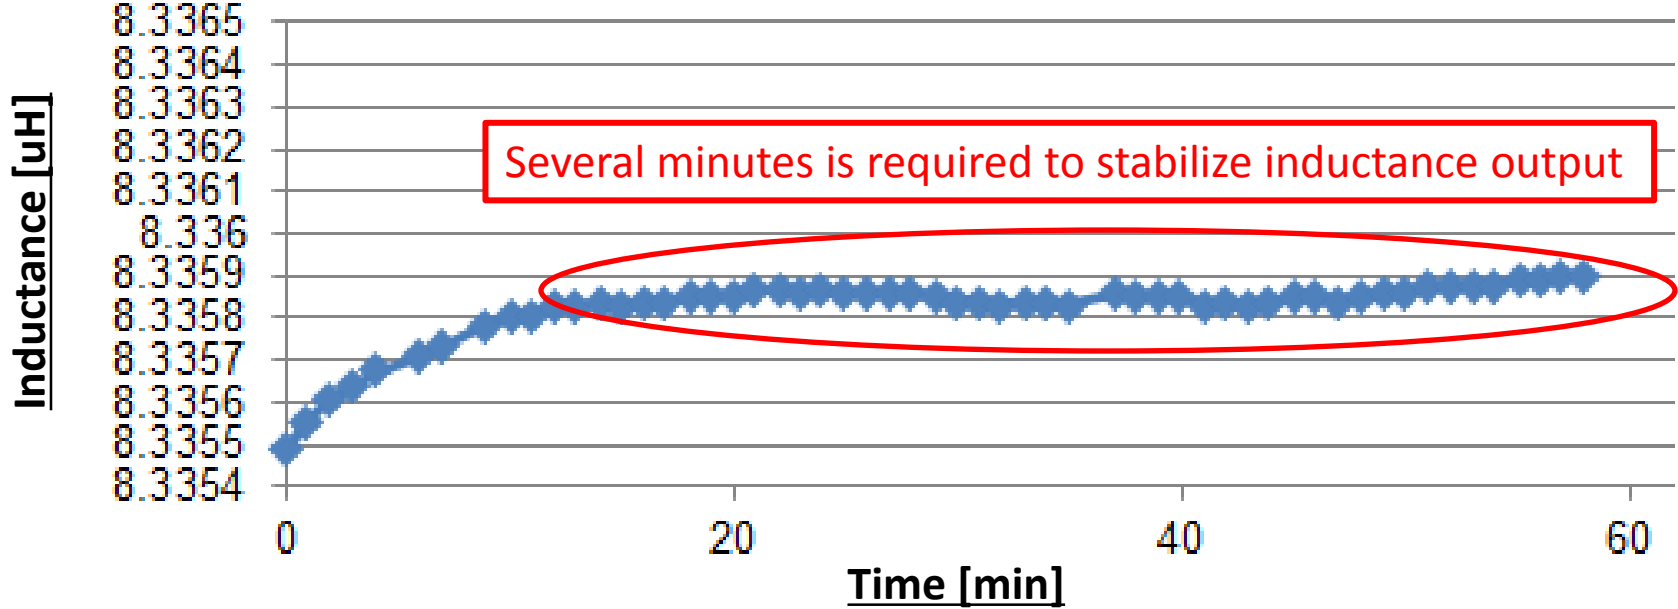

All setting is default at GUI.