



## Insertion and return loss before LMH0397

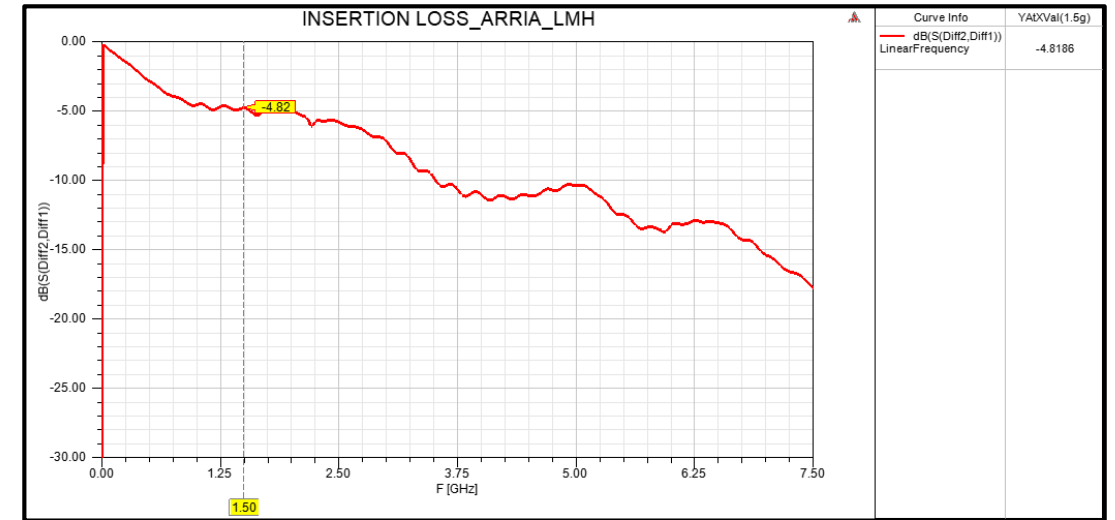

## Insertion and return loss after LMH0397(measured at BNC connector)

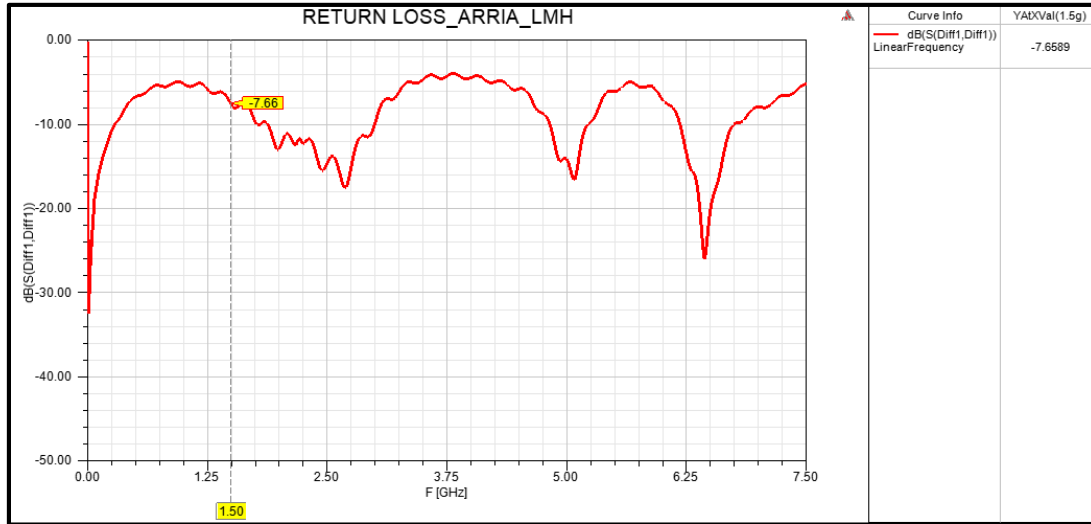