



Jumper	Comments
JMP1	1-2 = Use FET 2-3 = Bypass FET
JMP2	1-2 = Use FET 2-3 = Bypass FET
JMP3	1-2 = Current Mode 2-3 = Voltage Mode
JMP4	1-2 = No Load (Voltage Mode) 2-3 = Load (Current Mode)
JMP5	1-2 = Current Mode 2-3 = Use Charge Pump
JMP6	Charge Pump (Voltage Mode): 1-2 = Use Buffer 2-3 = Bypass Buffer
JMP7	1-2 = No Charge Pump CLK 2-3 = Charge Pump CLK = SPI_SCK
JMP8	1-2 = 2-Wire RTD 2-3 = 3-Wire RTD

Title		
Size	Number	Revision
C		
Date:	19-Sep-2011	Sheet of
File:	C:\Documents and Settings\at0282827\MY Documents\TI Precision Amplifiers\XTR108EVM\USB_XTR108EVM-USB_C.ddb	