


Download image BSL with BSLDEMO

By Gary Gao

1. Download the scripser http://software-dl.ti.com/msp430/msp430_public_sw/mcu/msp430/MSPBSL_Scripser/latest/index_FDS.html
2. Install the scripser
3. Find the EXE folder like below

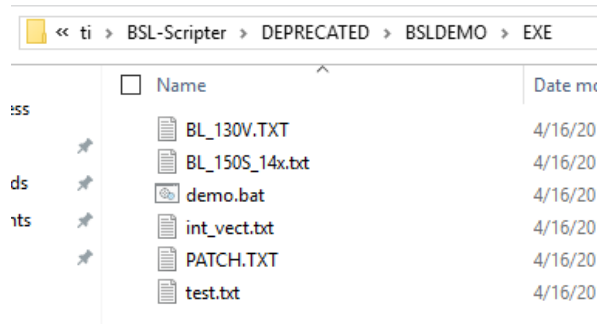

4. Extract the BSLDEMO.zip and get the BSLDEMO.exe. Put the BSLDEMO.exe to the folder named “EXE”
5. Change the name “test.txt” for your image name that you want to download, in the file named “demo.bat” at the line of 11. (Copy your image file into the same folder)
6. Change the COM port number based on your MSP-FET on your PC in the file named “demo.bat” at the line of 12
7. Connect MSP-FET with device like below

Table 3. Connection of MSP-FET and MSP430FR5739 LaunchPad™ Development Kit

Pin	MSP-FET	MSP430FR5739 LaunchPad™ Development Kit	Jumper Wire Color
TEST	Pin 8	TEST	White
RESET	Pin 11	RST	Brown
BSL-RX	Pin 14	P2.1/RXD	Orange
BSL-TX	Pin 12	P2.0/TXD	Yellow
V _{cc}	Pin 2	VCC	Red
GND	Pin 9	GND	Black

8. Double click “demo. bat” to execute it.