



In CCS make sure:

1. `--printf_support` is set to full and `--float_operations_allowed` is set to all

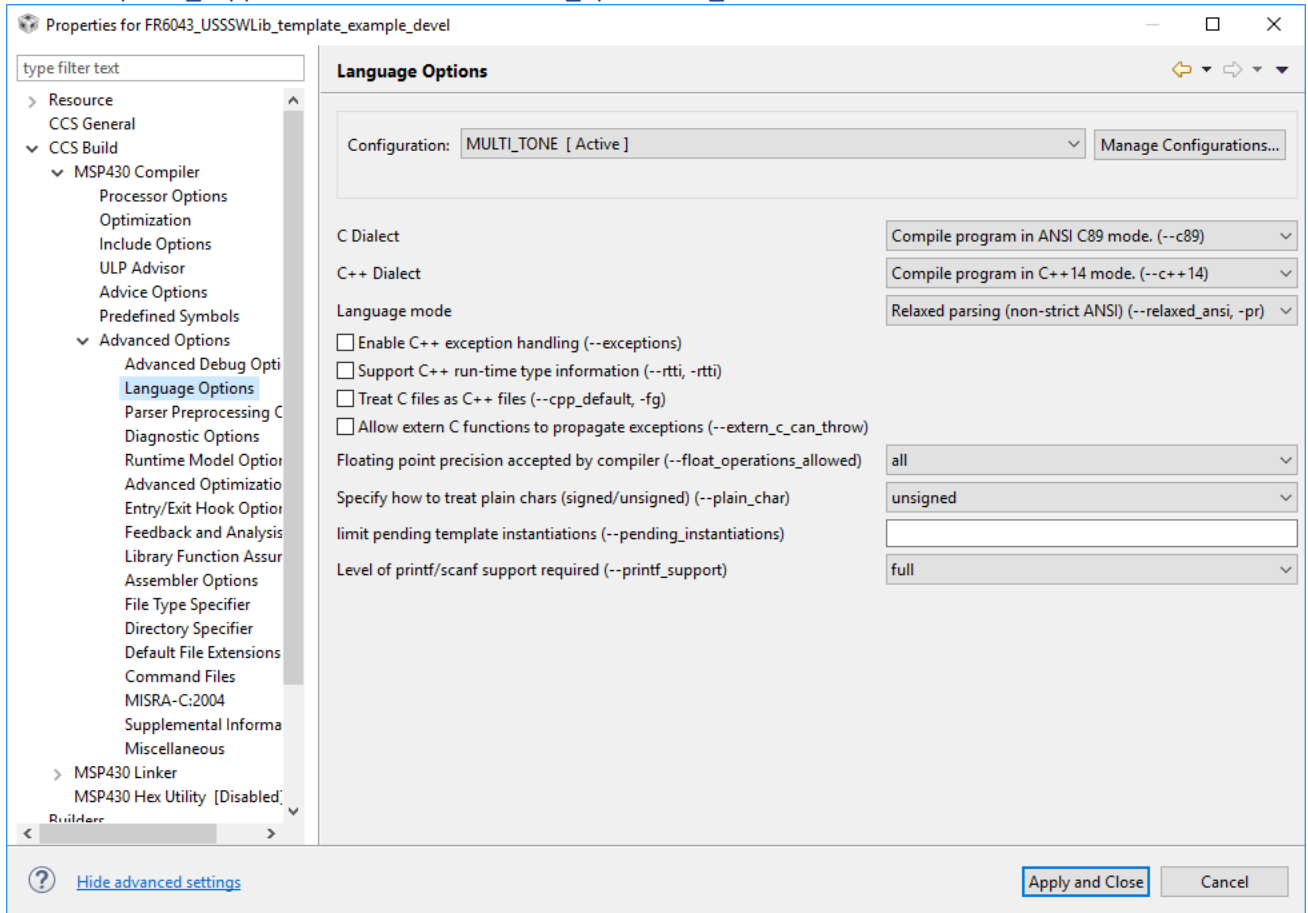

2. `ENABLE_UART_DEBUG` symbol is defined at the project level

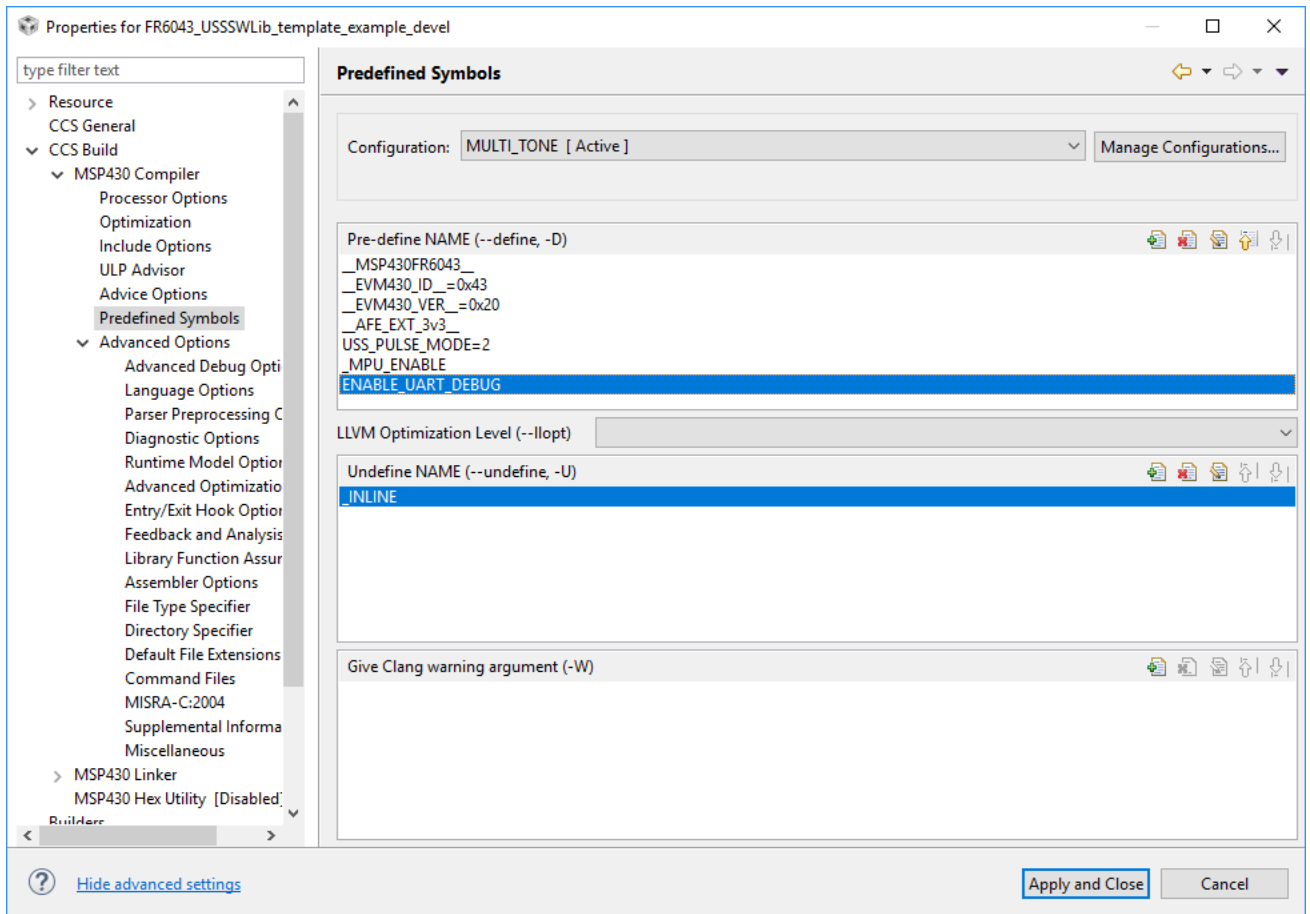

3. Replace main.c and system_pre_init.c in the template example project with the files attached

On the EVM

1. TXD jumper is set on J3

Serial terminal tool (e.g. Hyperterminal) is configured to 115200N81