

MSP-GANG Standalone BSL


-----Gary Gao

1. Connect the MSP-GANG with device like below


Table 3. Connection of MSP-FET and MSP430FR5739 LaunchPad™ Development Kit

Pin	MSP-FET	MSP430FR5739 LaunchPad™ Development Kit	Jumper Wire Color
TEST	Pin 8	TEST	White
RESET	Pin 11	RST	Brown
BSL-RX	Pin 14	P2.1/RXD	Orange
BSL-TX	Pin 12	P2.0/TXD	Yellow
V _{cc}	Pin 2	VCC	Red
GND	Pin 9	GND	Black


2. Open the code file and configure the GUI as below

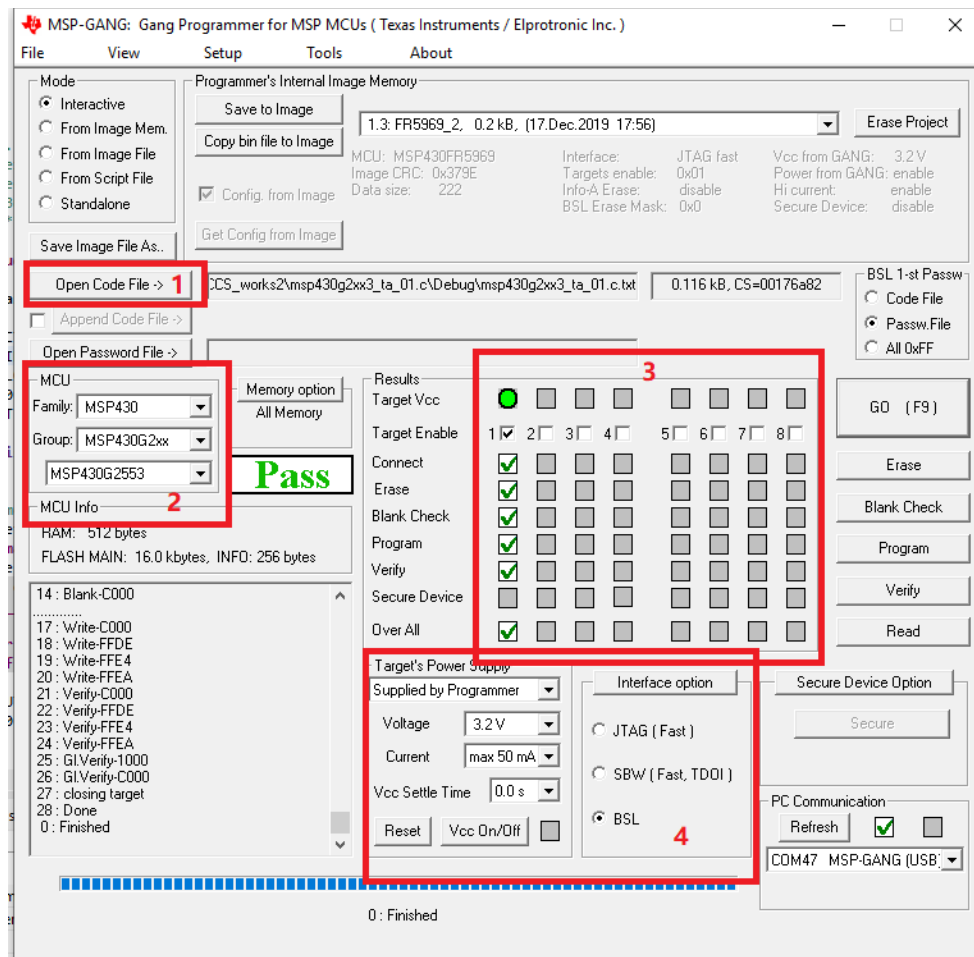


3. Click the GO button and to check if the Interactive mode can works well
4. Save the image in the MSP-GANG and create a name for it then click OK

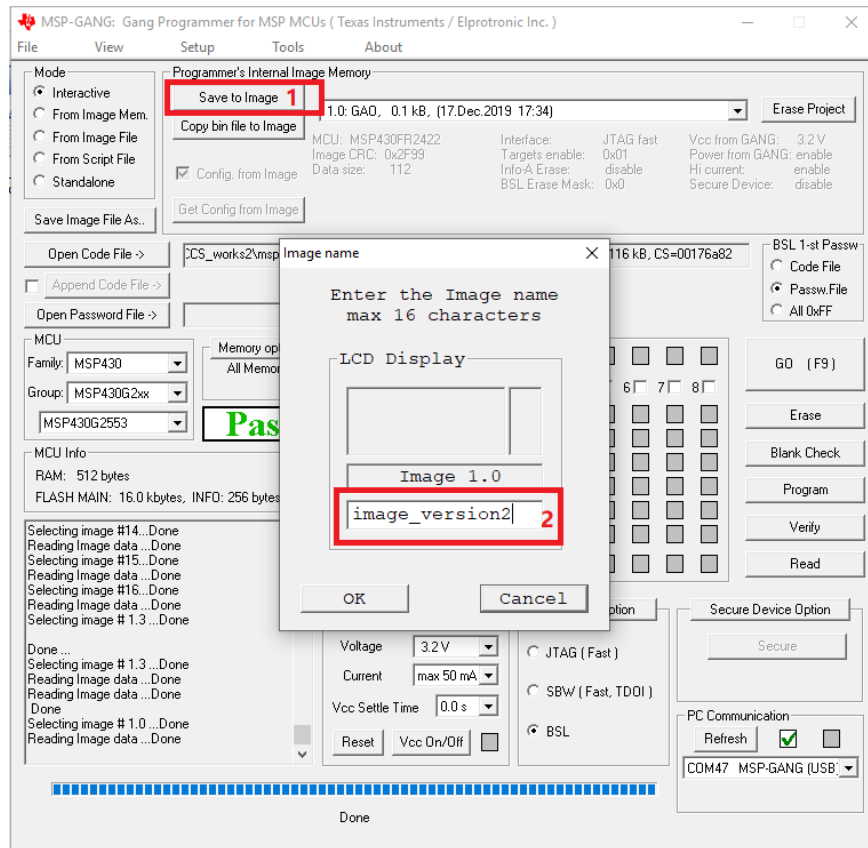

5. Select the Standalone mode

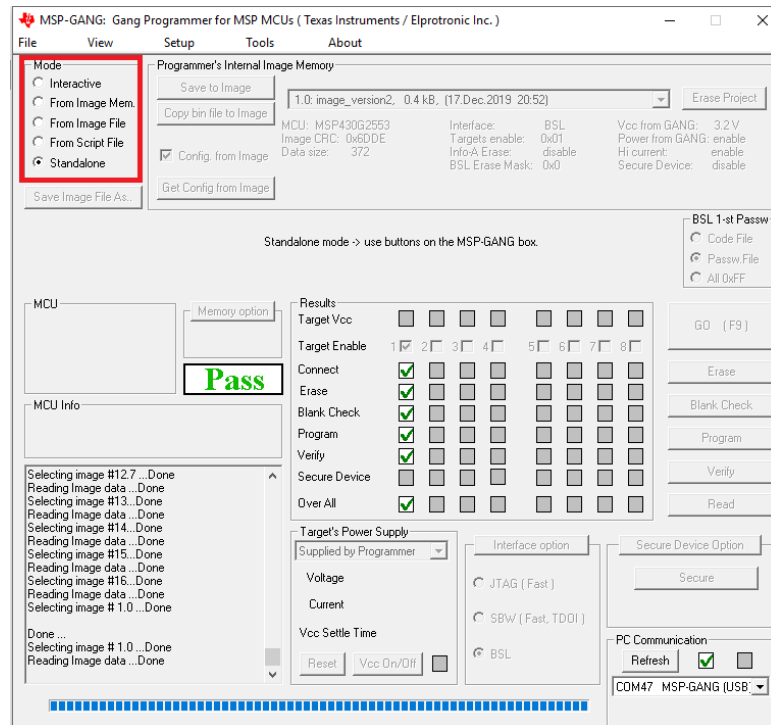

6. You will see the image like blow on the MSP-GANG LCD, you can see the image name, active channel is 1 and communication is BSL.

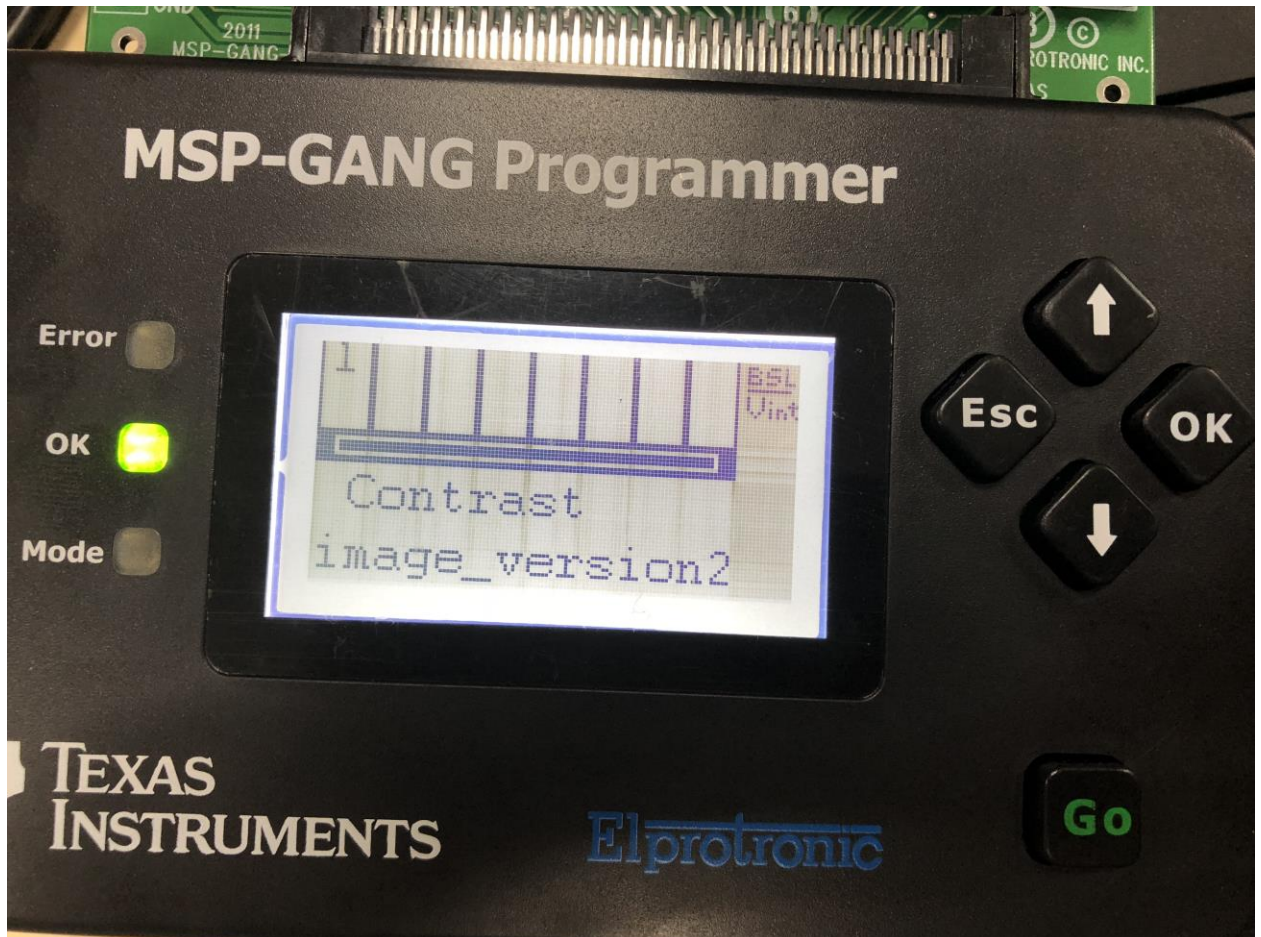

7. You just change different MSP430 devices and press GO button and the image will download to the device.