



F28335: Reset – Bootloader

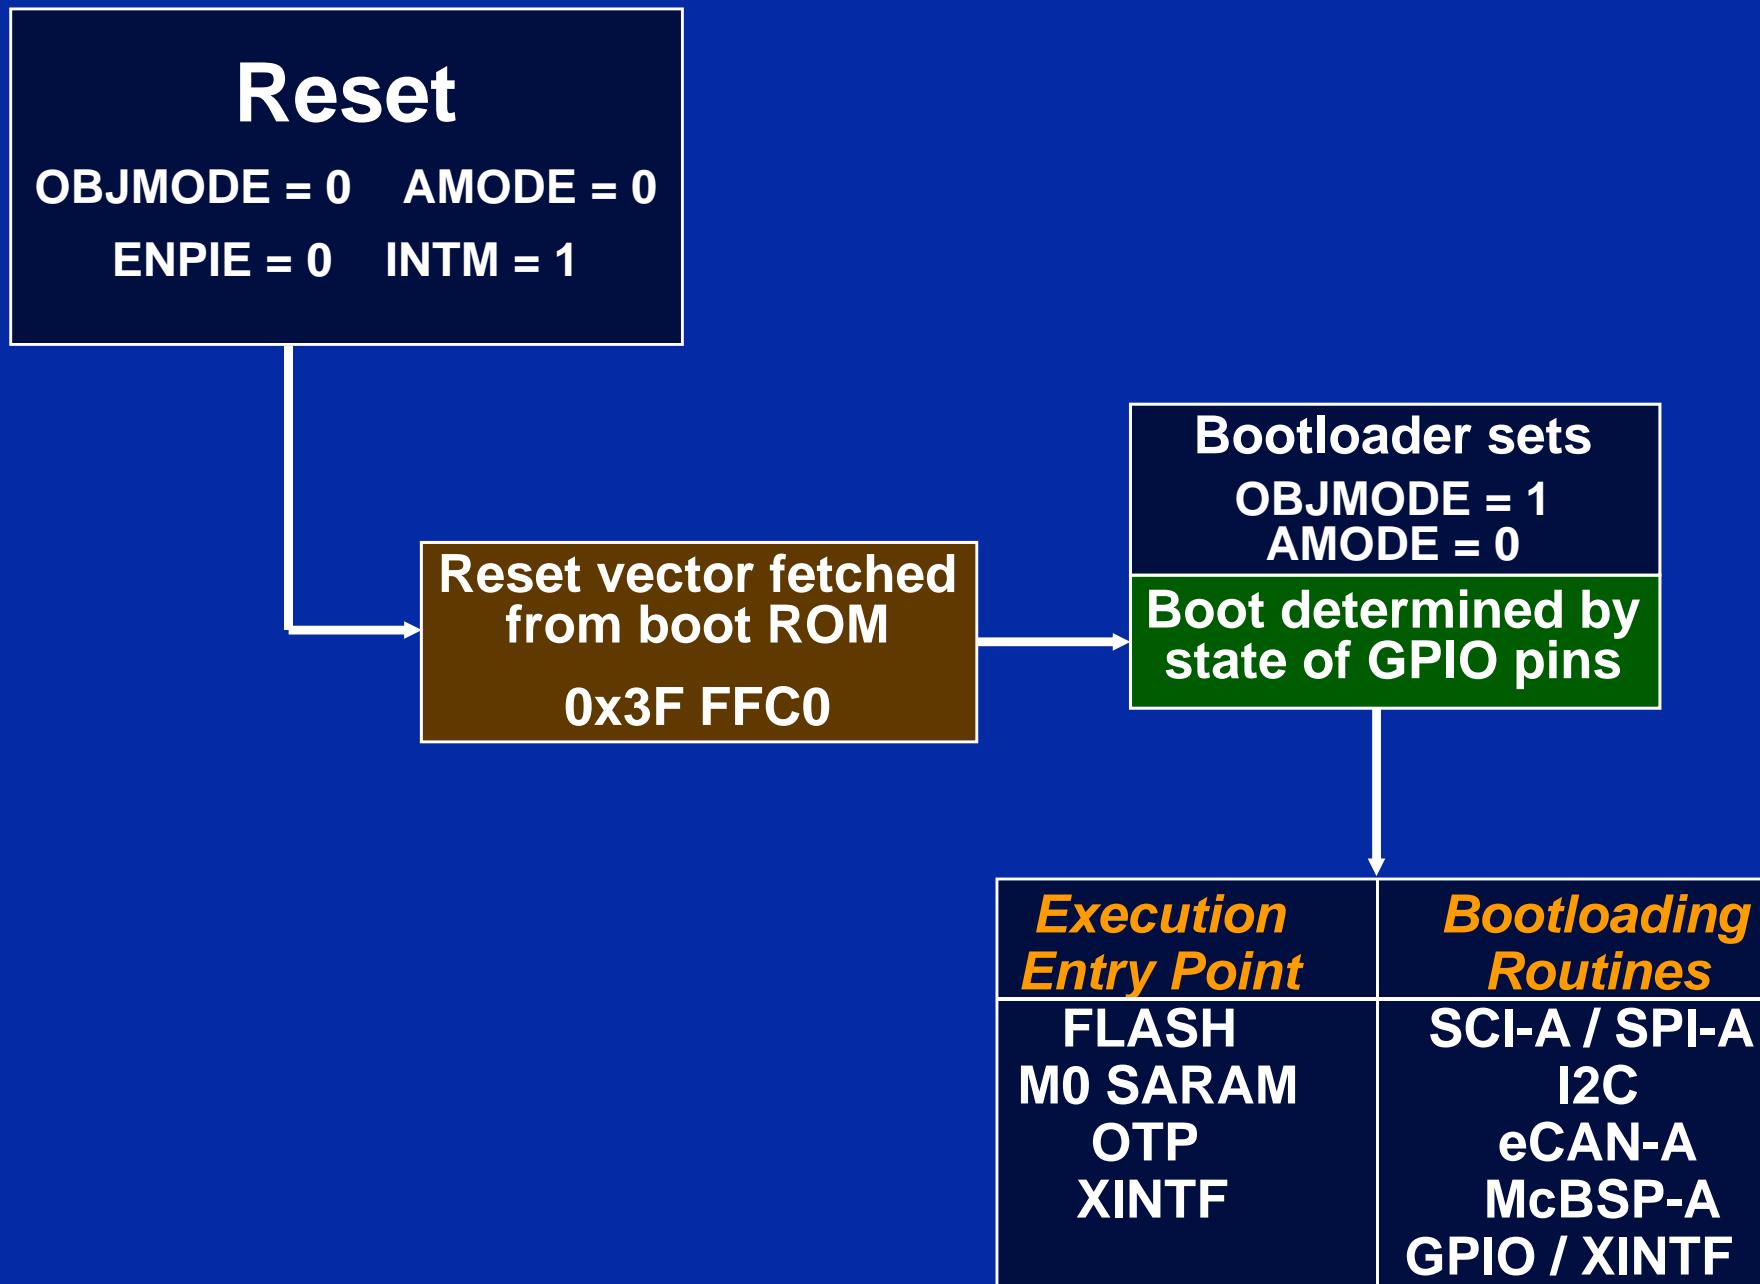

F28069: Reset – Bootloader

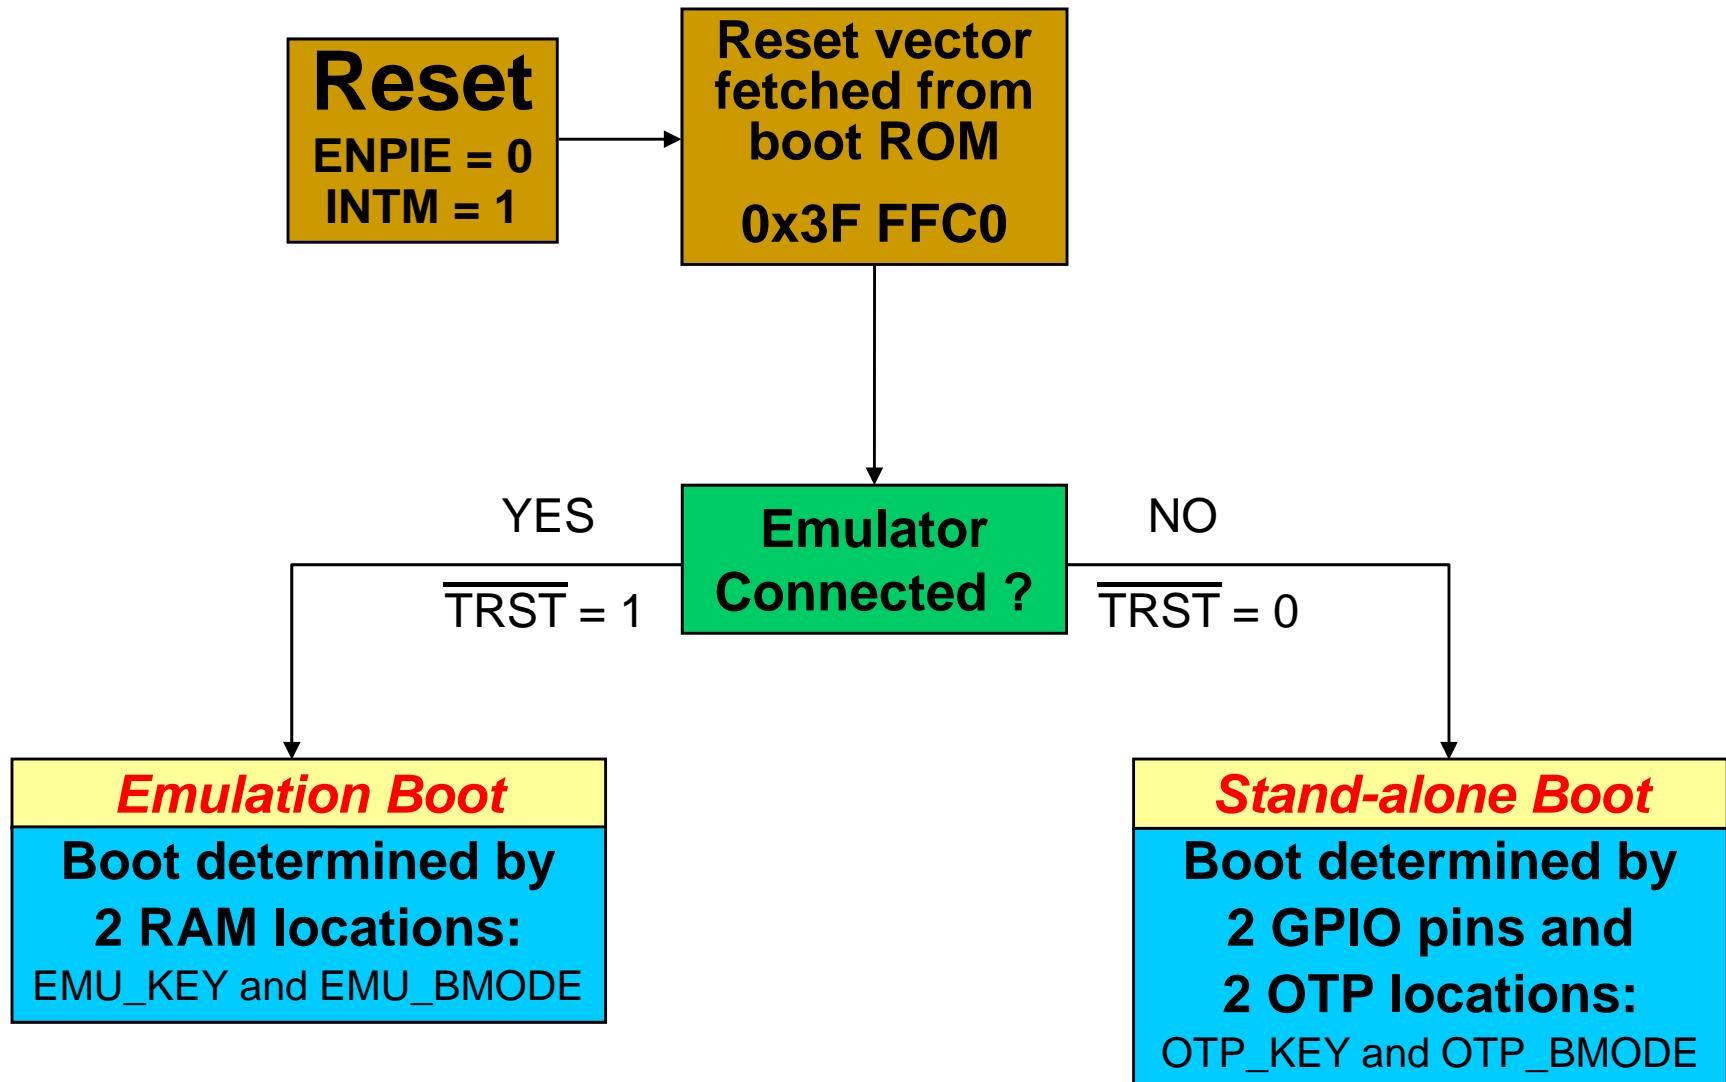

TRST = JTAG Test Reset

EMU_KEY & EMU_BMODE located in PIE at 0x0D00 & 0x0D01, respectively
OTP_KEY & OTP_BMODE located in OTP at 0x3D7BFB & 0x3D7BFE, respectively