


WORKING WITH TIDUCT9 DOCUMENT FOR 2PHASE INTERLEAVED LLC USING TMS320F28379D

Laptop screen when I follow up to prj import & dbl-clicking main.cfg after importing Project in CCS ver 9

Laptop screen when I follow up to prj import & dbl-clicking main.cfg

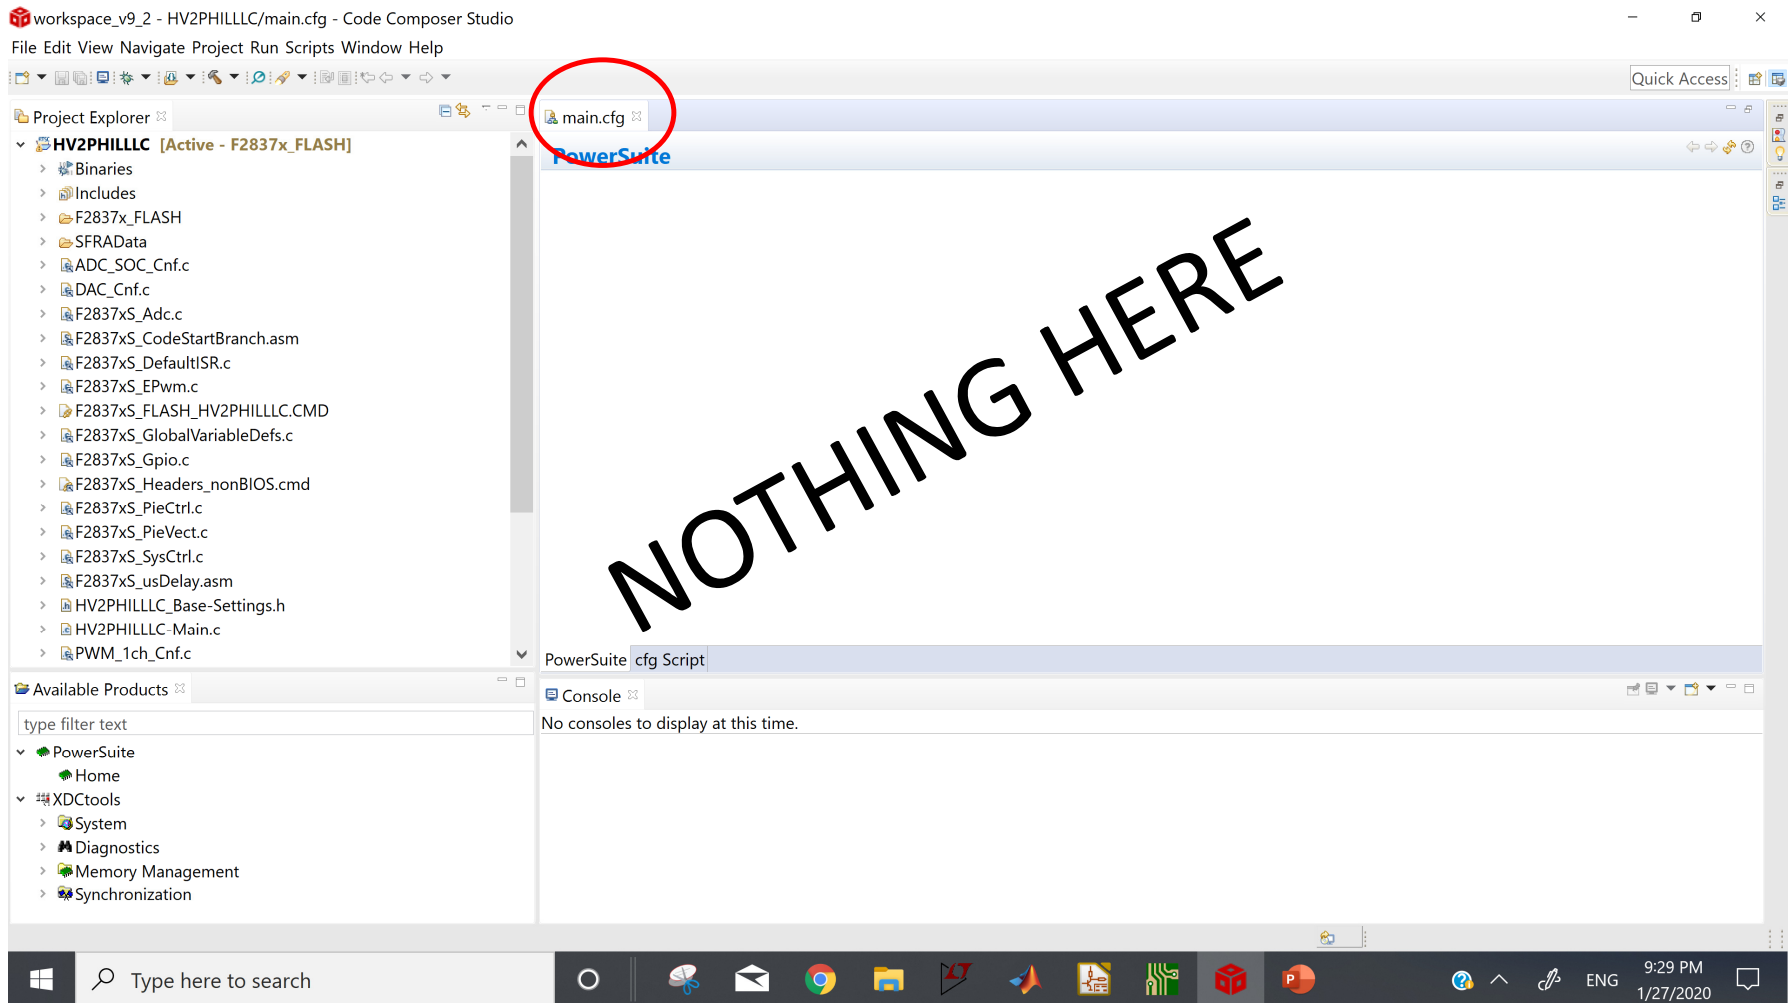

## Instructions on TIDUCT9 document about hardware set up


I am supposed to see this in the workspace.

Figure 21. Project Window

5. Open *main.cfg* file by double-clicking on the file name in the project window.




6. Under *Project Options* select *Open Loop* as shown in [Figure 22](#). Save *main.cfg* file. Note that the default software does not allow phase shedding in this build regardless of this selection in the *main.cfg*.

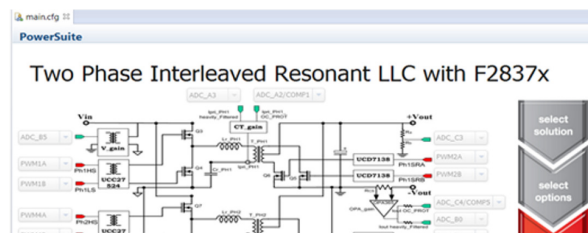

## Instructions on TIDUCT9 document about hardware set up

But I see this in the workspace: nothing appears on the Power Suite space. I thought maybe it requires a “build” to see the GUI. But not so.

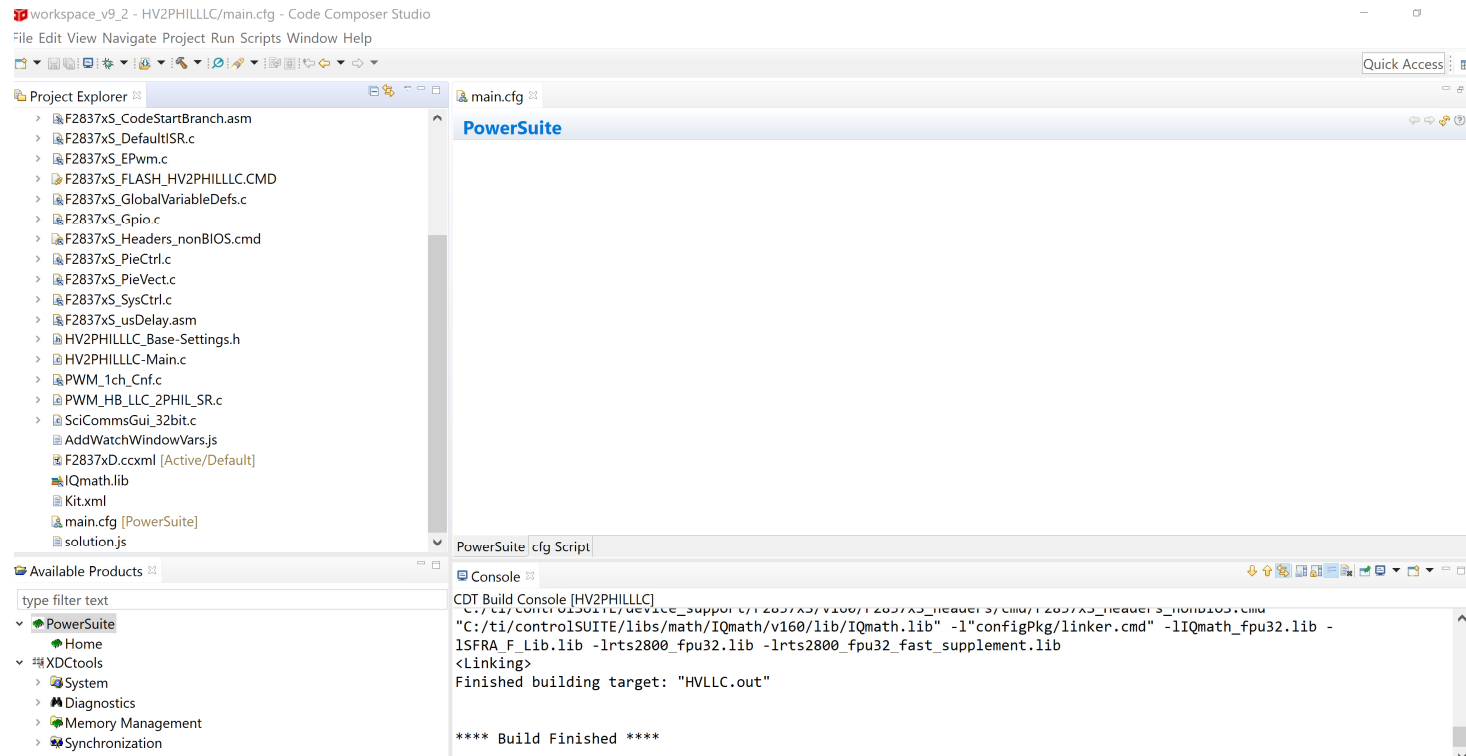

What did I miss in the steps? Why do I not see the GUI screen as shown in the document TIDUCT9?