



**NOTE :**

R94, R95, R98, R106, R114, R115 : Used for debugging the power supply section. It will be removed in next revision

U28, R87, C86 should be DNP. If V<sub>ddout</sub> = 1.2V is not sufficient for driving microcontroller, 1.2V section must be populated.

**CONFIDENTIAL**

**POWER SUPPLY**

**GARUDA**

Size	Document Number	Rev
B	<Doc>	2.0

Date: Sunday, May 24, 2015 Sheet: 2 of 12