

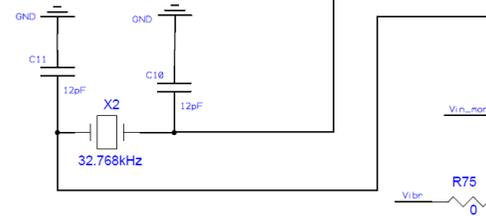





Power IN overvoltage protection

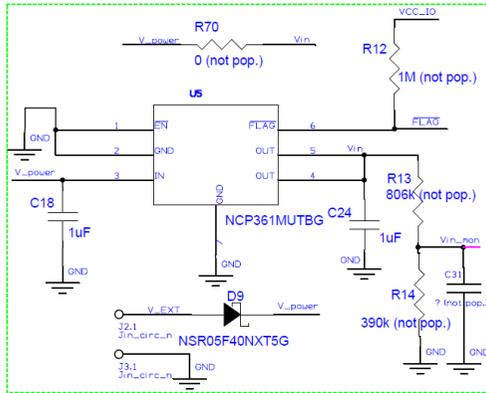


Vibration Motor

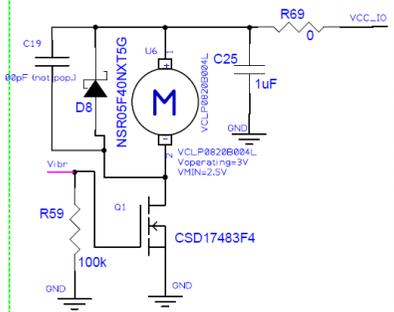


Accelerometer

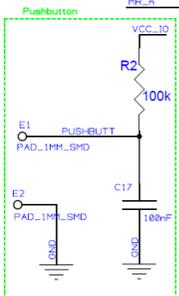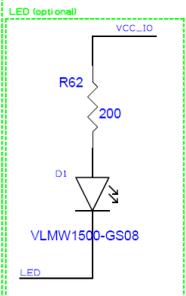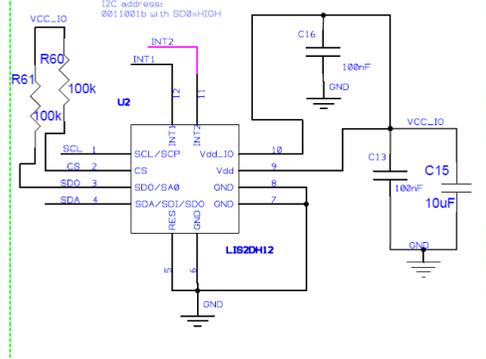



CODE DOWNLOAD / DEBUG

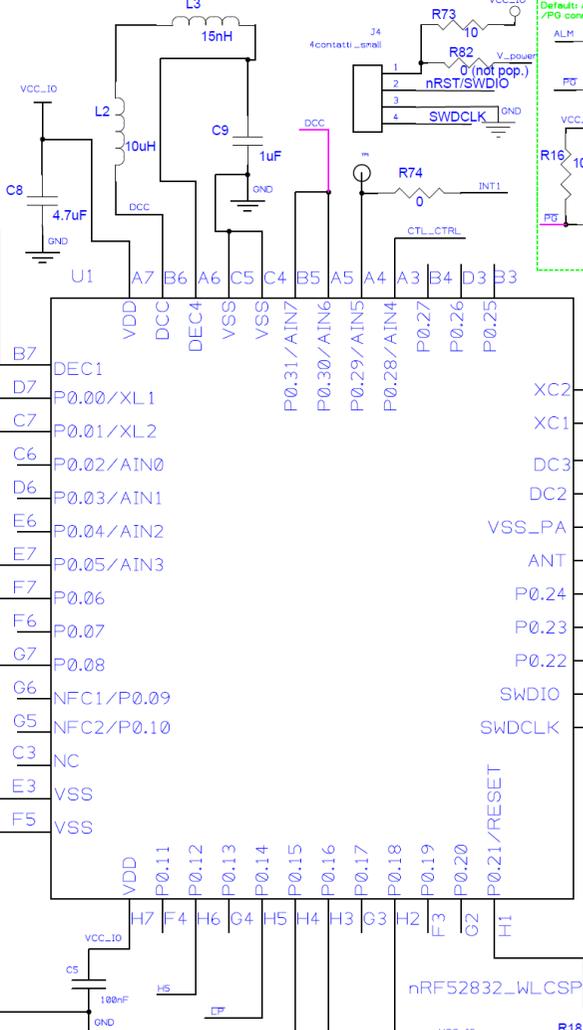


ALM/PO settings

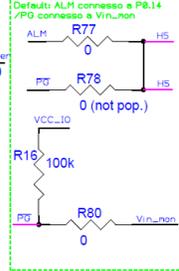

Battery Protection

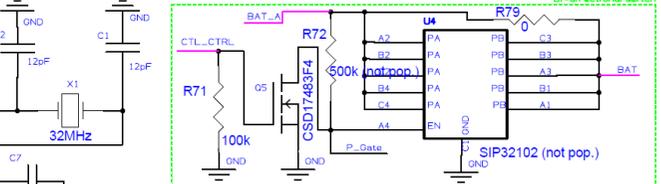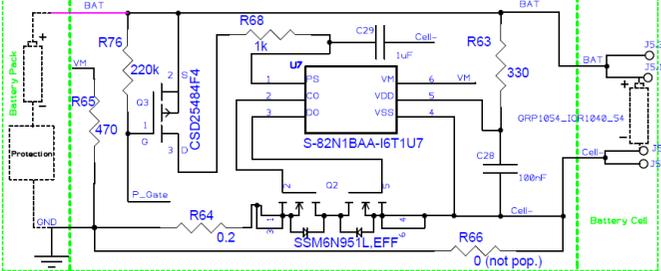

Fuel Gauge

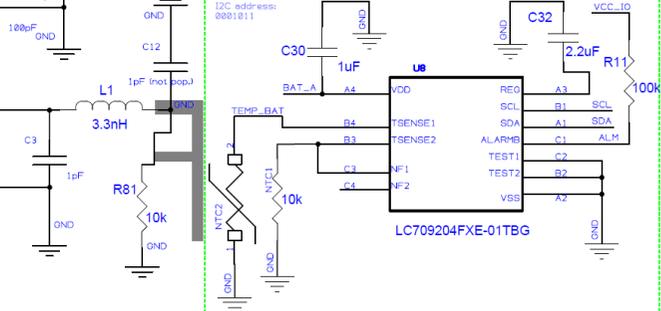

Battery Charger

