
TPS356C7 Operation

10phase operation (no out put No.6 PWM and No.12 PWM)

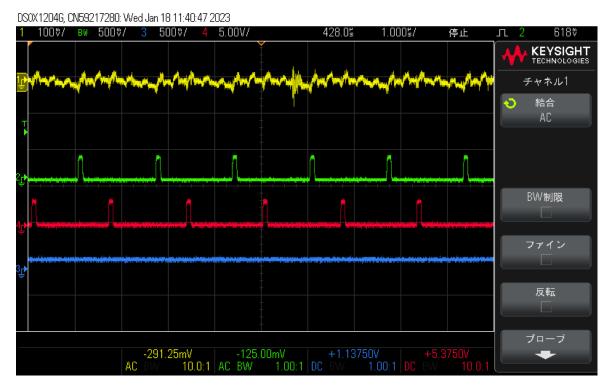




yellow: V out

green: PWM 1

red: PWM 2

blue: PWM 6 (no signal)

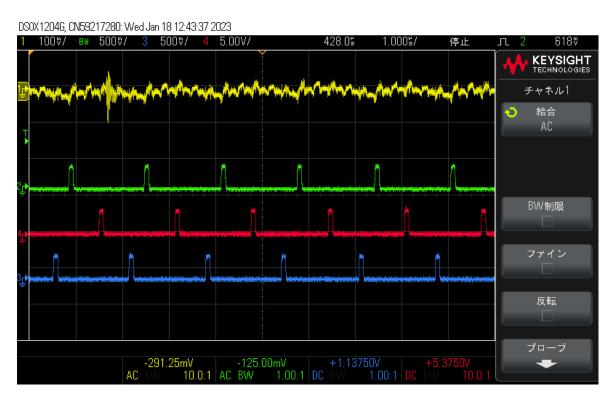


V out and PWM

yellow: V out

green: PWM 1

red: PWM 2

blue: PWM 3

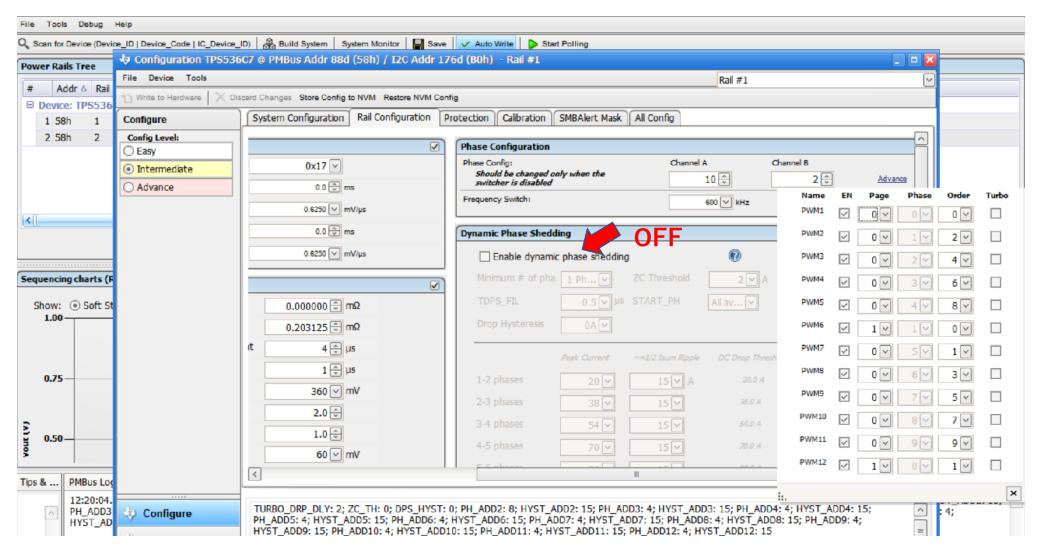

Current Config. Tab on 10 phase operation (no out put No.6 PWM and No.12 PWM) This "Advance" Order is this 10 phase operation situation.

Are there any suitable setting(click point) for all 12phase operation?