


Rsense : 0.01//0.01//0.003ohm (parallel connection)

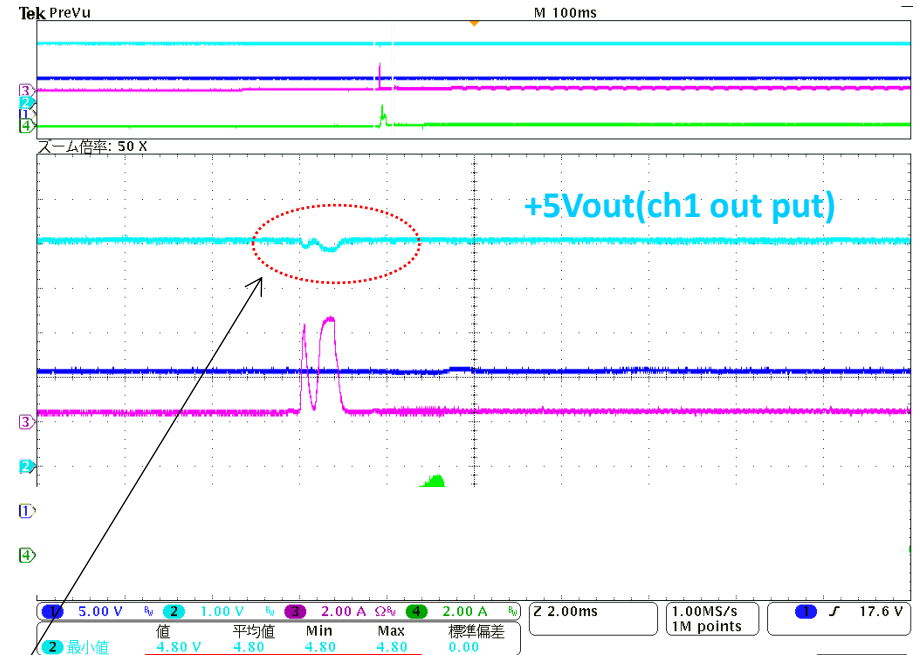

Rsense : 0.003ohm

When the load current increases, the output voltage to drop.
 The voltage drop is dependent on the Rsense.
 Is there something that is considered to be the cause of that?