UCC28060 vs. UCC28061

	UCC28060	UCC28061
VINAC	Loop-gain change between low and high AC-line ranges	No gain change over full AC-line range
Brownout	After IC enabled, run first and then detect brownout	After IC enabled, detect brownout first then decide to run or not
OVP (VSENSE)	OV stops PWM	OV stops PWM and triggers soft-start
Burst mode	Enter Burst mode when COMP < 150mV	No Burst mode
Phase-fail detection	Disabled at single-phase mode	Disabled at single-phase mode or when COMP < 222mV

