

[Customer's considered flow]

[Question]

Can bq25892 enter ship mode by setting BATFET_DIS bit at adapter plugged in?

Let me confirm the operation after exiting ship mode

1. In the case of $V_{BAT} < V_{RECHG}$, the recharging is started automatically?
2. In the case of $V_{BAT} > V_{RECHG}$, the recharging is not started and just turn on BATFET?

