



1.2 DEFAULT SETTINGS  
 The LM77 always powers up in a known state. LM77 power up default conditions are:

1. Comparator Interrupt Mode
2. T<sub>Low</sub> set to 10°C
3. T<sub>High</sub> set to 64°C
4. T<sub>CRIT</sub> set to 80°C
5. T<sub>reset</sub> set to 2°C
6. INT and T<sub>CRIT\_A</sub> active low
7. Pointer set to "00", Temperature Register

**This document and the technical data disclosed are proprietary to Accton Tech. Corp. and shall not be duplicated, used, released, or disclosed without expressed written permission.**

<b>Accton</b> Making Partnership Work		Model Name	Rev
		OS6870-P48M	ROB
Size	Page Name	Engineer	
	P042-PWR_MONITOR_LM77	Toby Yang	
Date:	Tuesday, June 27, 2023	Sheet	42 of 84