


6 USB2ANY Setup Instructions


6.1 Updating the Firmware

The default USB2ANY code does not work with Haptic Control Console. Use these instructions to update the USB2ANY firmware:

1. Hold down the BSL button located next to the USB-Mini socket while plugging in the USB-Mini.
2. Open HCC and go to Help --> Firmware Update.
3. Click Scan Device. A return message should say "TI Standard BSL device found."
4. Click Open FW and select "DRV-USBCOM-EVM_v1p4".
5. Click Update and the firmware should update.

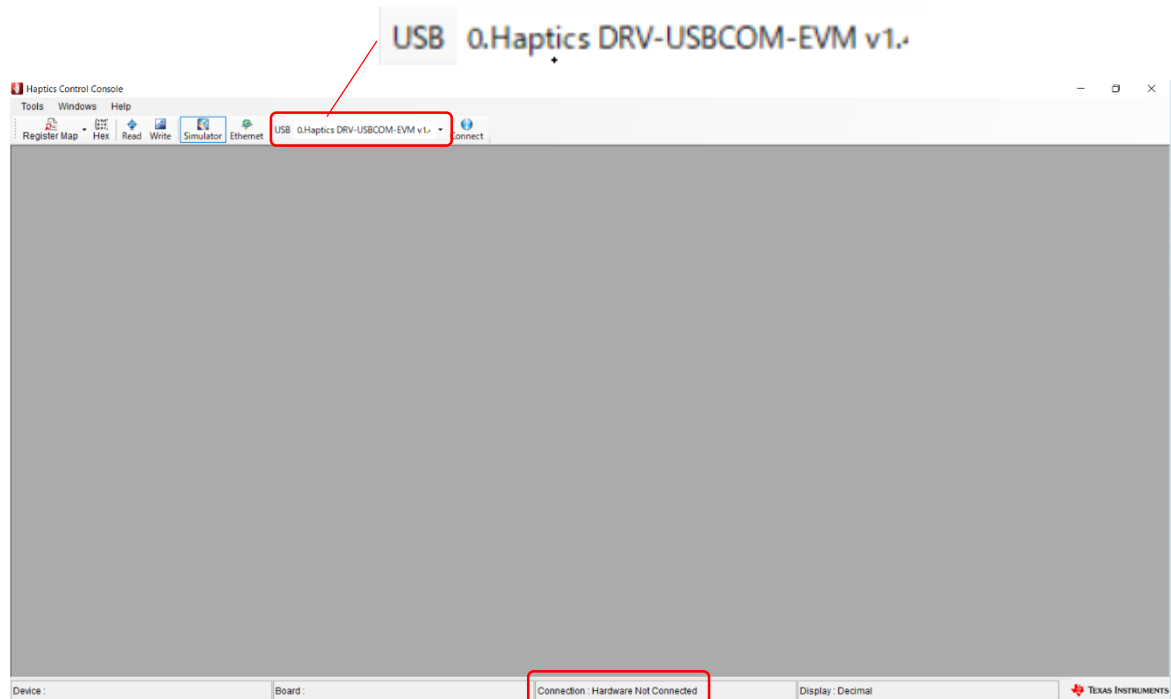



Connection : Hardware Not Connected

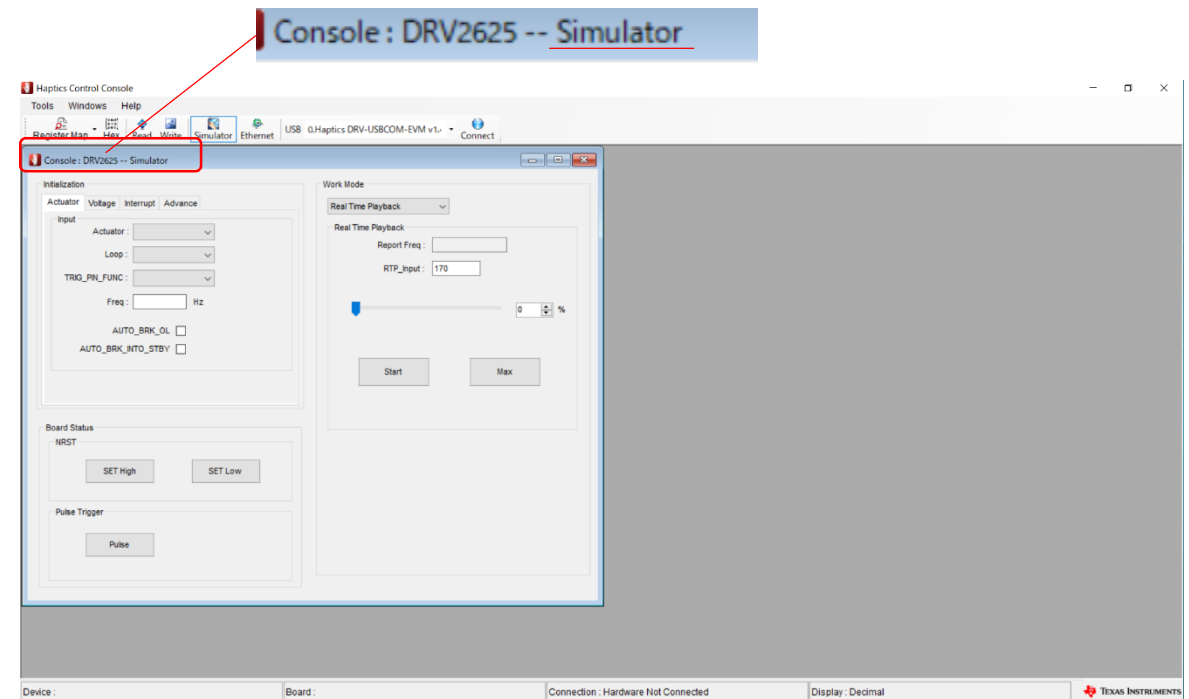

TYPE1

USB2ANY Explorer

1. Update the firmware by following the procedure on page 2
2. Launch USB2ANY Explorer

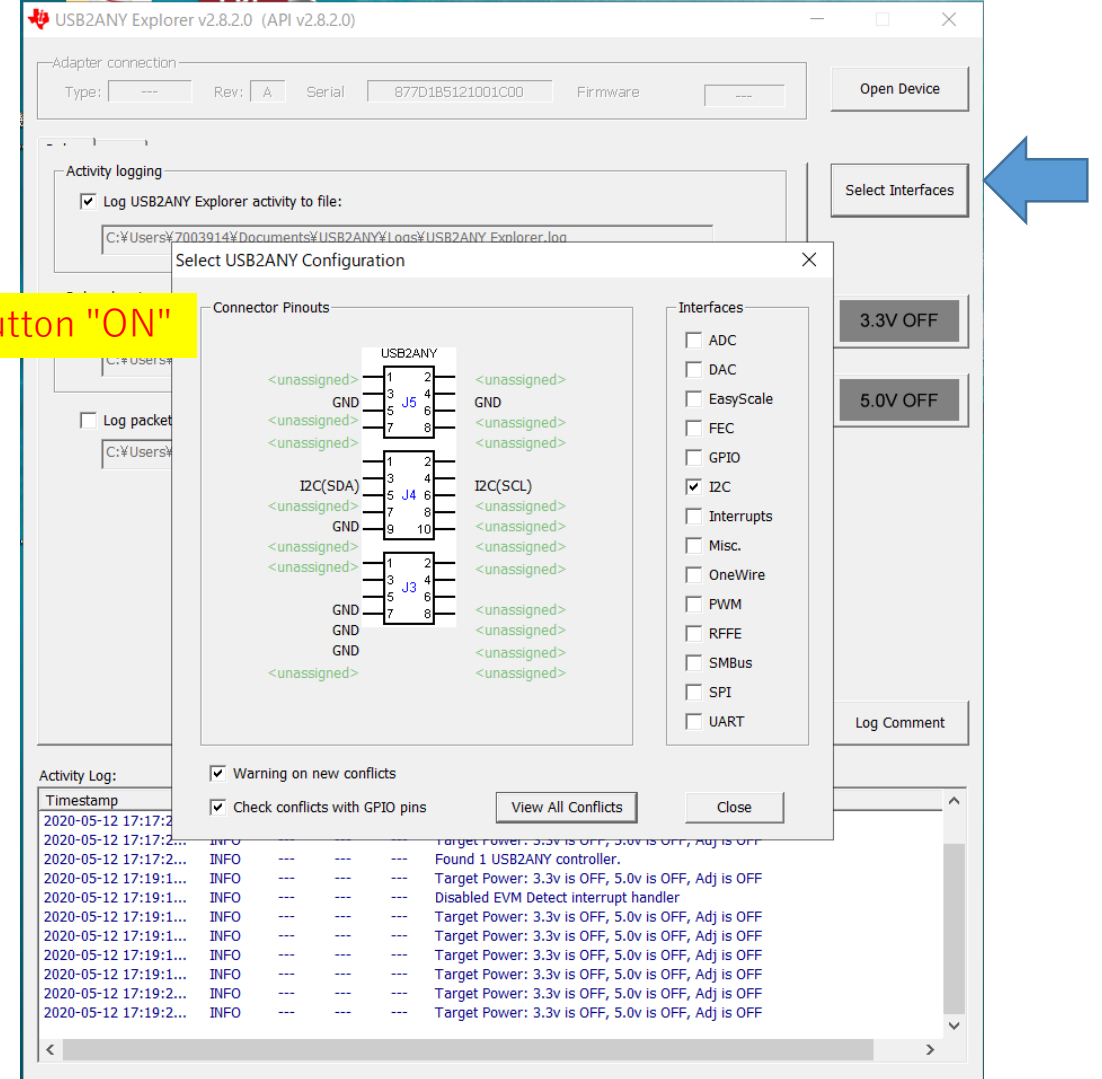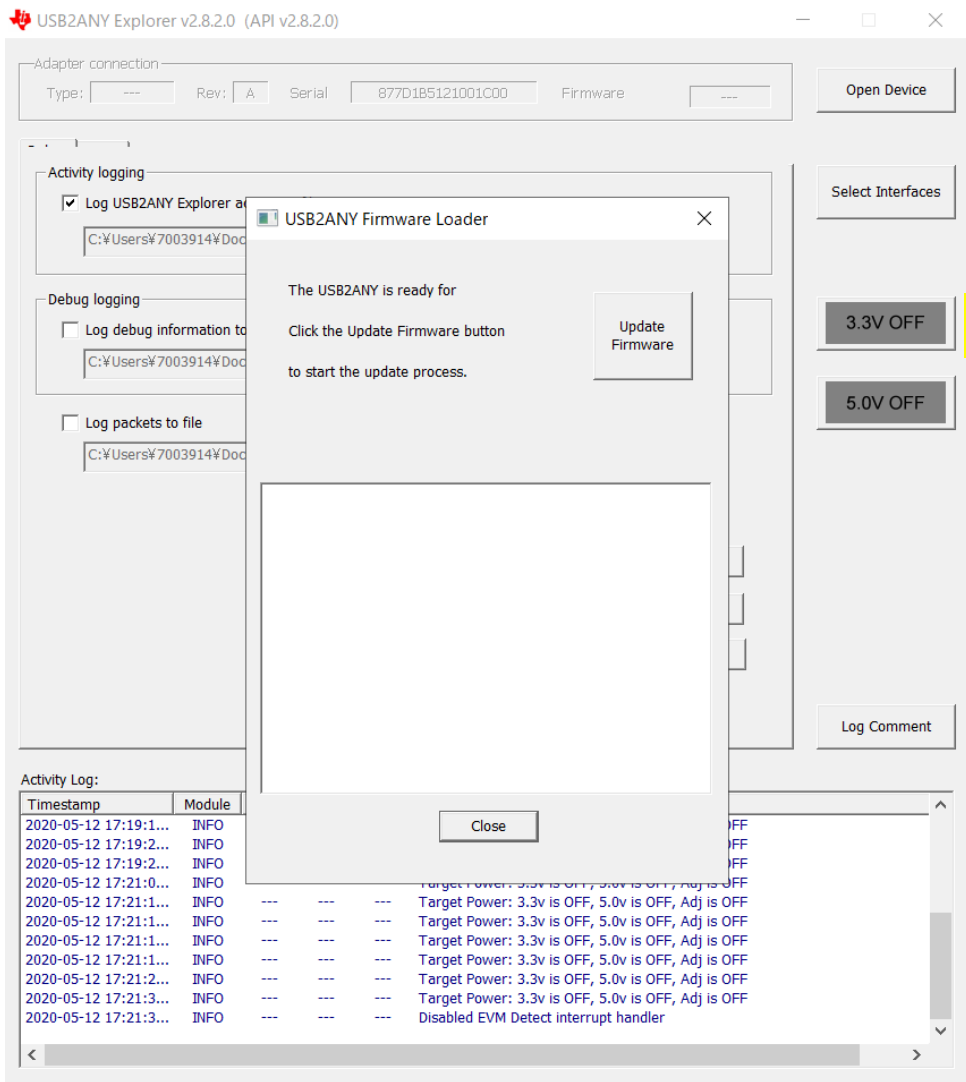

← I cannot turn the button "ON"