



DRV SET TO 0 VOLT

3.3V

OUT1 = 0.36V  
OUT2 = 0.36V

IN VM = 27mA  
IN DEFAULT.

IN1 = PWM  
INZ = 0 = UP  
1 = DOWN

|                     |
|---------------------|
| Levo 5.2            |
| 13.10.2021 11:04:27 |
| Sheet: 1/1          |

1 2 3 4 5 6 7 8

A B C D E