



U101 CTL		U102 CTL		U101 Function		U102 Function		RJ45/X1 Contact
PD1	SEL1	PD2	SEL2	Port A to B	Port A to C	Port A to B	Port A to C	
L	L	H	X	Pass	X	X	X	CON1 Pass
L	H	L	L	X	Pass	Pass	X	CON2 Pass
L	H	L	H	X	Pass	X	Pass	CON3 Pass
H	X	X	X	X	X	X	X	NONE

