




1. First, I am clicking on null service on ti simple link starter app after connecting with the launchpad and get the following value.

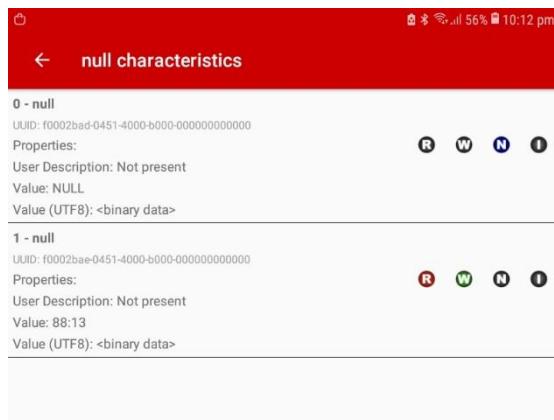

2. Afterwards, I click w and I write a particular value in my case I have written 0x02 as shown in the image below.

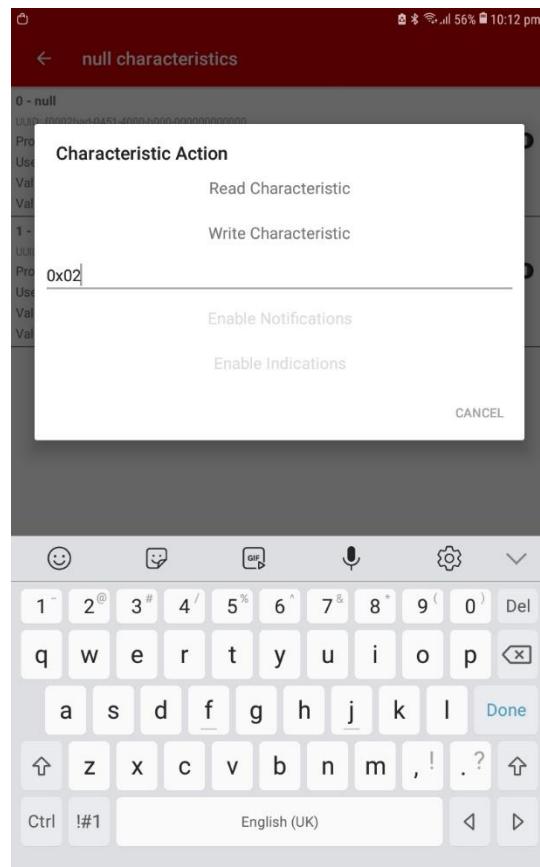

3. Now when I press left button on launchpad I am getting the initial value as shown below.

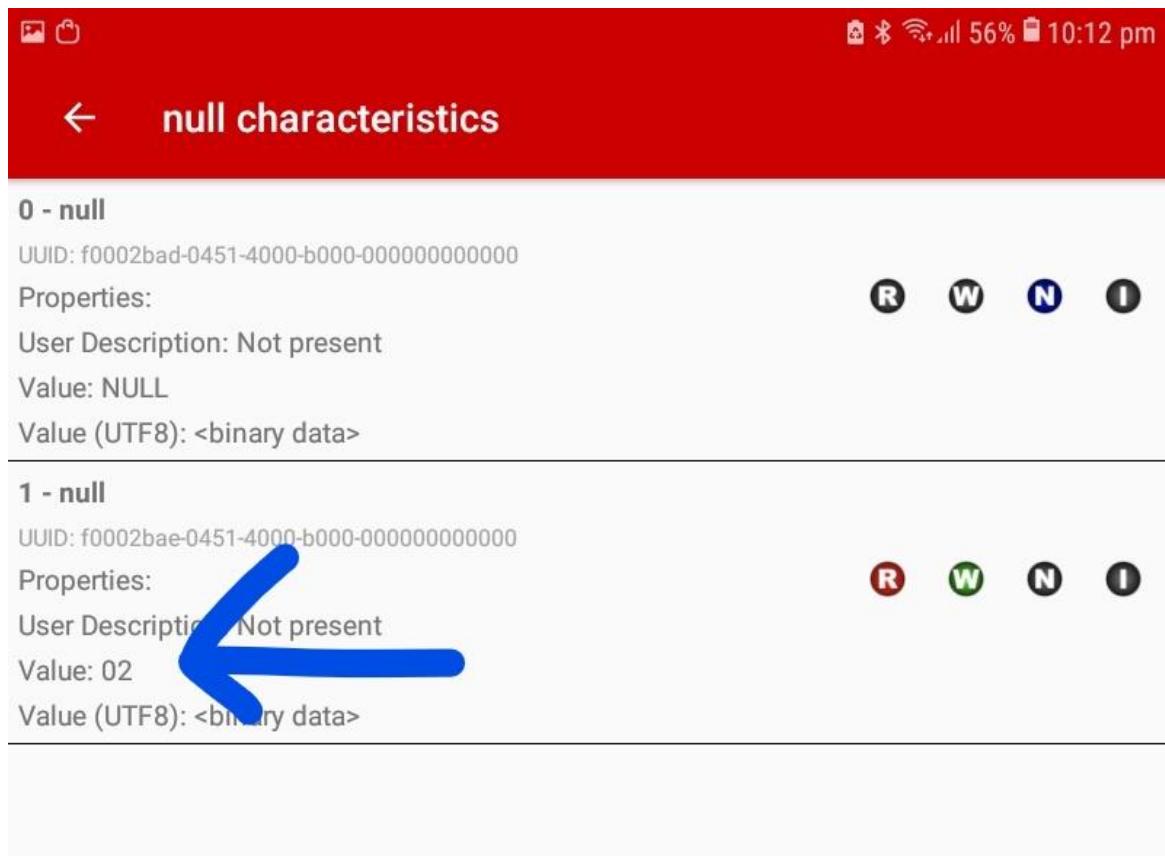

4. Finally, when I am again pressing the button, the value should update as per the custom profile tutorial, but it is not getting updated. It remains at initial value. Although I have added following code in handle button press in the application task as shown below.

```
SunlightService_SetParameter(SUNLIGHTSERVICE_SUNLIGHTVALUE_ID,  
                            SUNLIGHTSERVICE_SUNLIGHTVALUE_LEN,  
                            &myVar);  
myVar++;
```