

How to use i2c log to get module config file

2025年4月29日 9:38

Steps

1. enter the corresponding module




2. Click the i2c at bottom



3. click log

Click green button to let log start

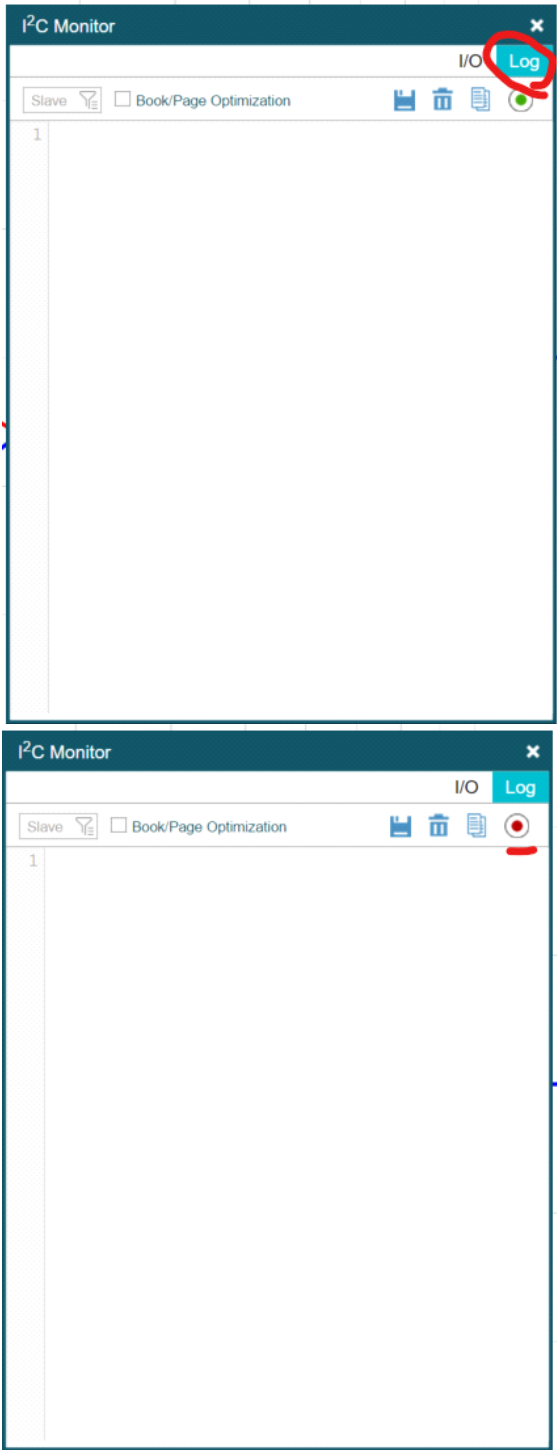

4. Change the parameter in the module, the config code can be generated automatically.

