




start PPC
(not connect to the EVM yet)

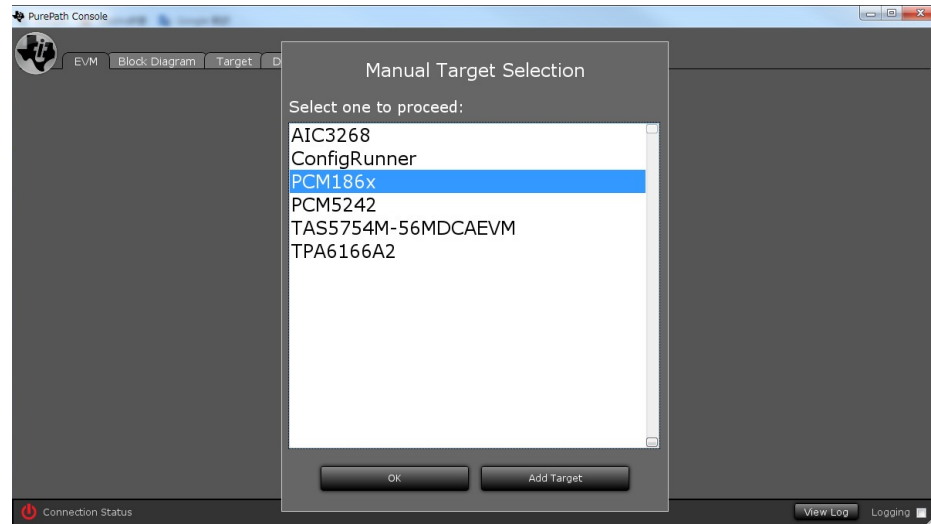

default window

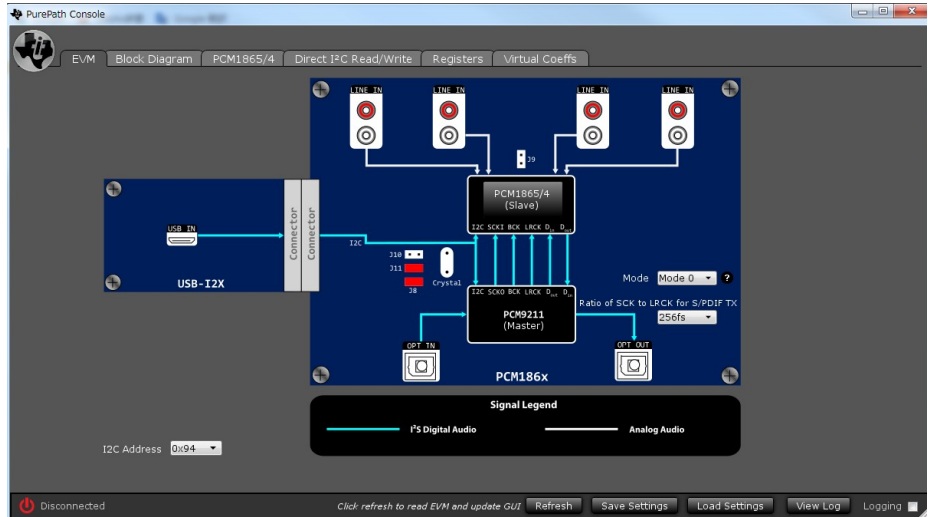

connect to the EVM
change IC type to PCM1861/0

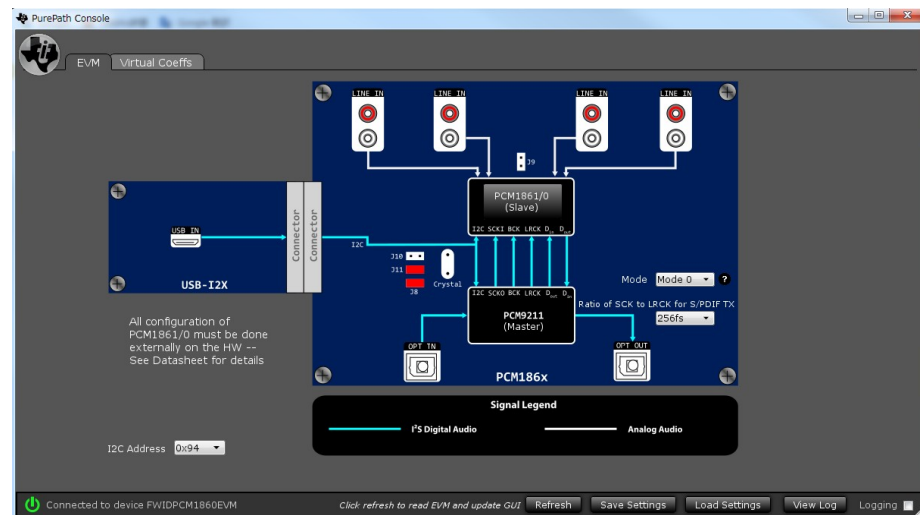

EVM picture
PCM1862 on the board

PCM1862 pins:
MD0=Lo, MS=Lo,
SCL=I2C, SDA=I2C,
GPIO 0/1/2/3=open

EVM:
J8/J11=installed, Xtal=open

