



Keep Reference Layout
R2399/R2378/R2379/R2398/R2380/R2381
are pads placed in inner layout as indicators
for ball voltage measurement

