


**TEXAS INSTRUMENTS**

Title		
<b>ADS54XX Evaluation Module</b>		
Size	Document Number	Rev
<b>B</b>	<b>ADS54XXEVM-SCH</b>	<b>A</b>
Date:	Wednesday, April 09, 2008	Sheet 1 of 4

Remove R21 for transformer input installed if use amplifier input

Default: Short 2-3

Default: Short 2-3

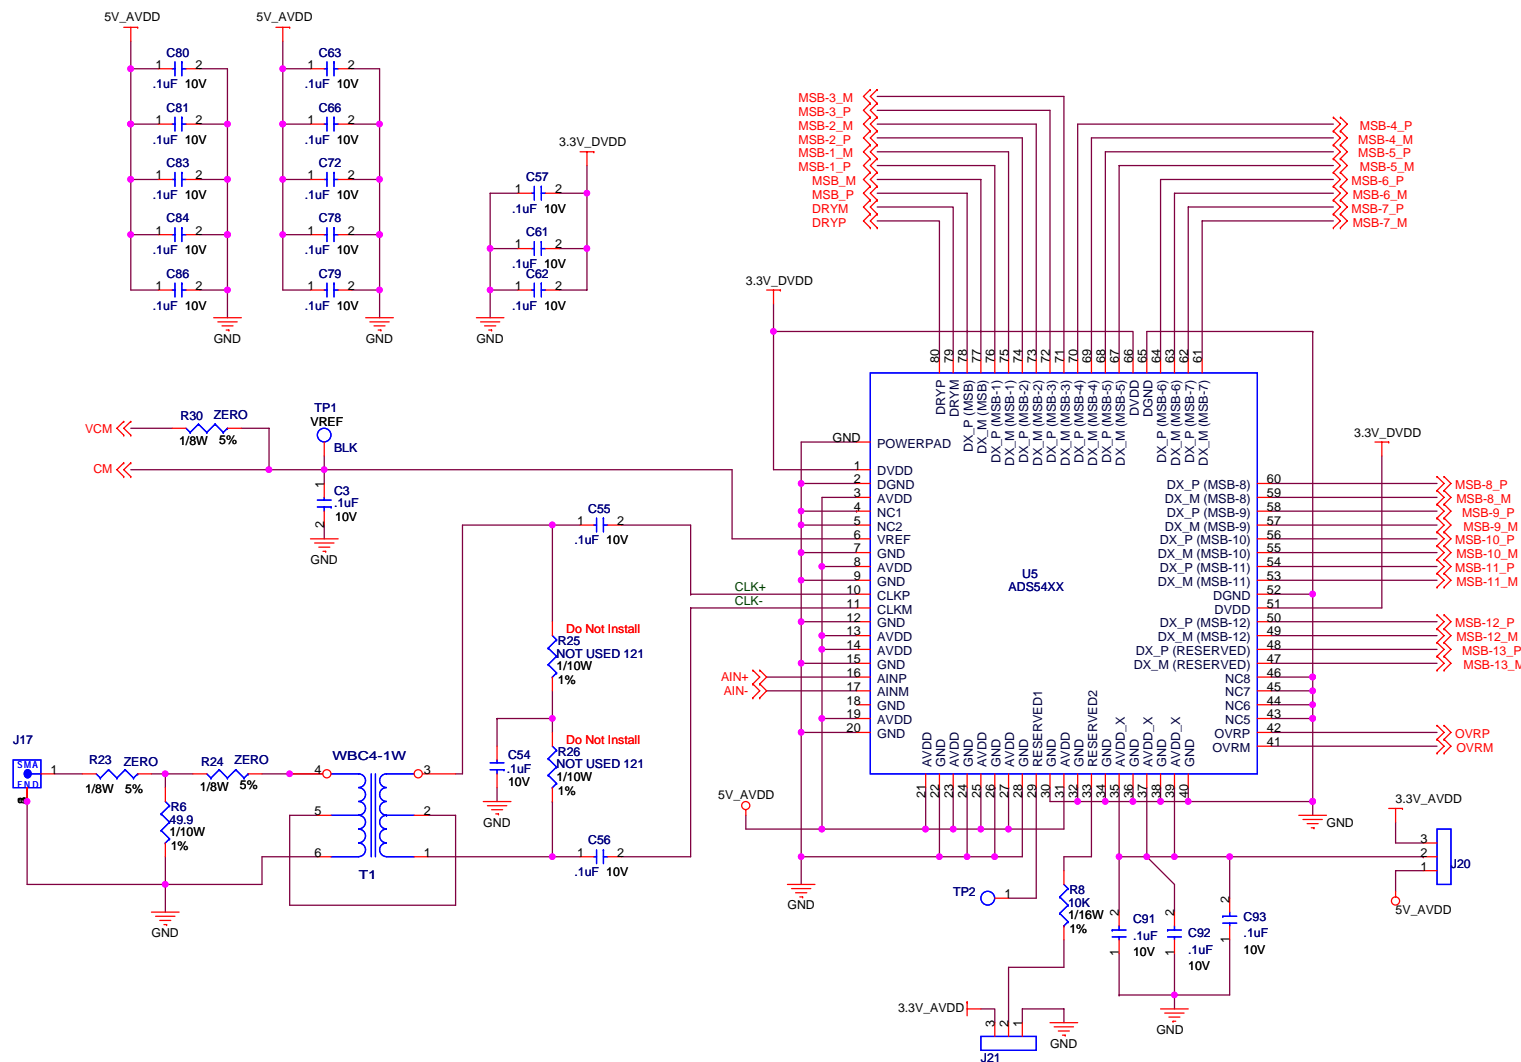


ADS54XX PIN ASSIGNMENT		
PIN #	ADS5440/44	ADS5463
54	D1_P	DO_P (LSB)
53	D1_M	DO_M (LSB)
50	DO_P (LSB)	NOT USED
49	DO_M (LSB)	NOT USED
48	NOT USED	NOT USED
47	NOT USED	NOT USED


**J20 CONFIGURATION**  
 ADS5440/44: CONNECT TO 5V  
 ADS5463: CONNECT TO 3.3V

J21 DEFAULT: CONNECT TO GND

# TEXAS INSTRUMENTS

Title <b>ADS54XX Evaluation Module</b>		
Size <b>B</b>	Document Number <b>ADS54XXEVM-SCH</b>	Rev <b>A</b>
Date: Friday, September 15, 2006	Sheet 2	of 4

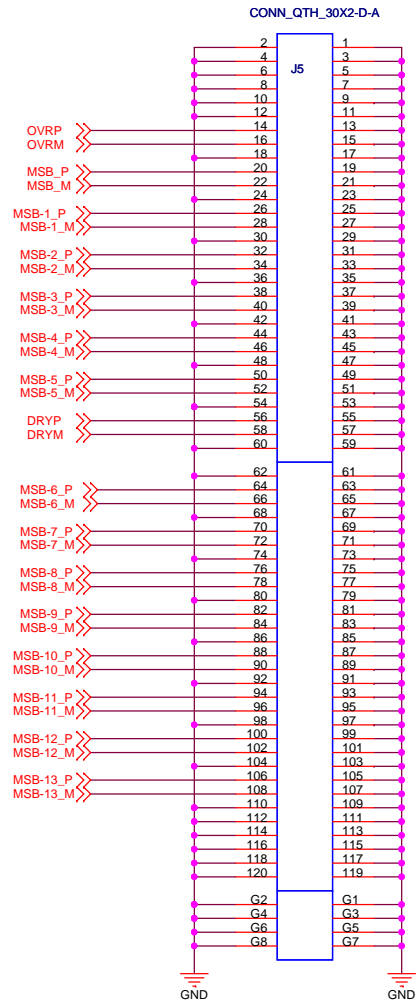



# TEXAS INSTRUMENTS

Title		
<b>ADS54XX Evaluation Module</b>		
Size	Document Number	Rev
<b>B</b>	<b>ADS54XXEVM-SCH</b>	<b>A</b>
Date:	Tuesday, August 22, 2006	Sheet 3 of 4

