



NG : conversion not start

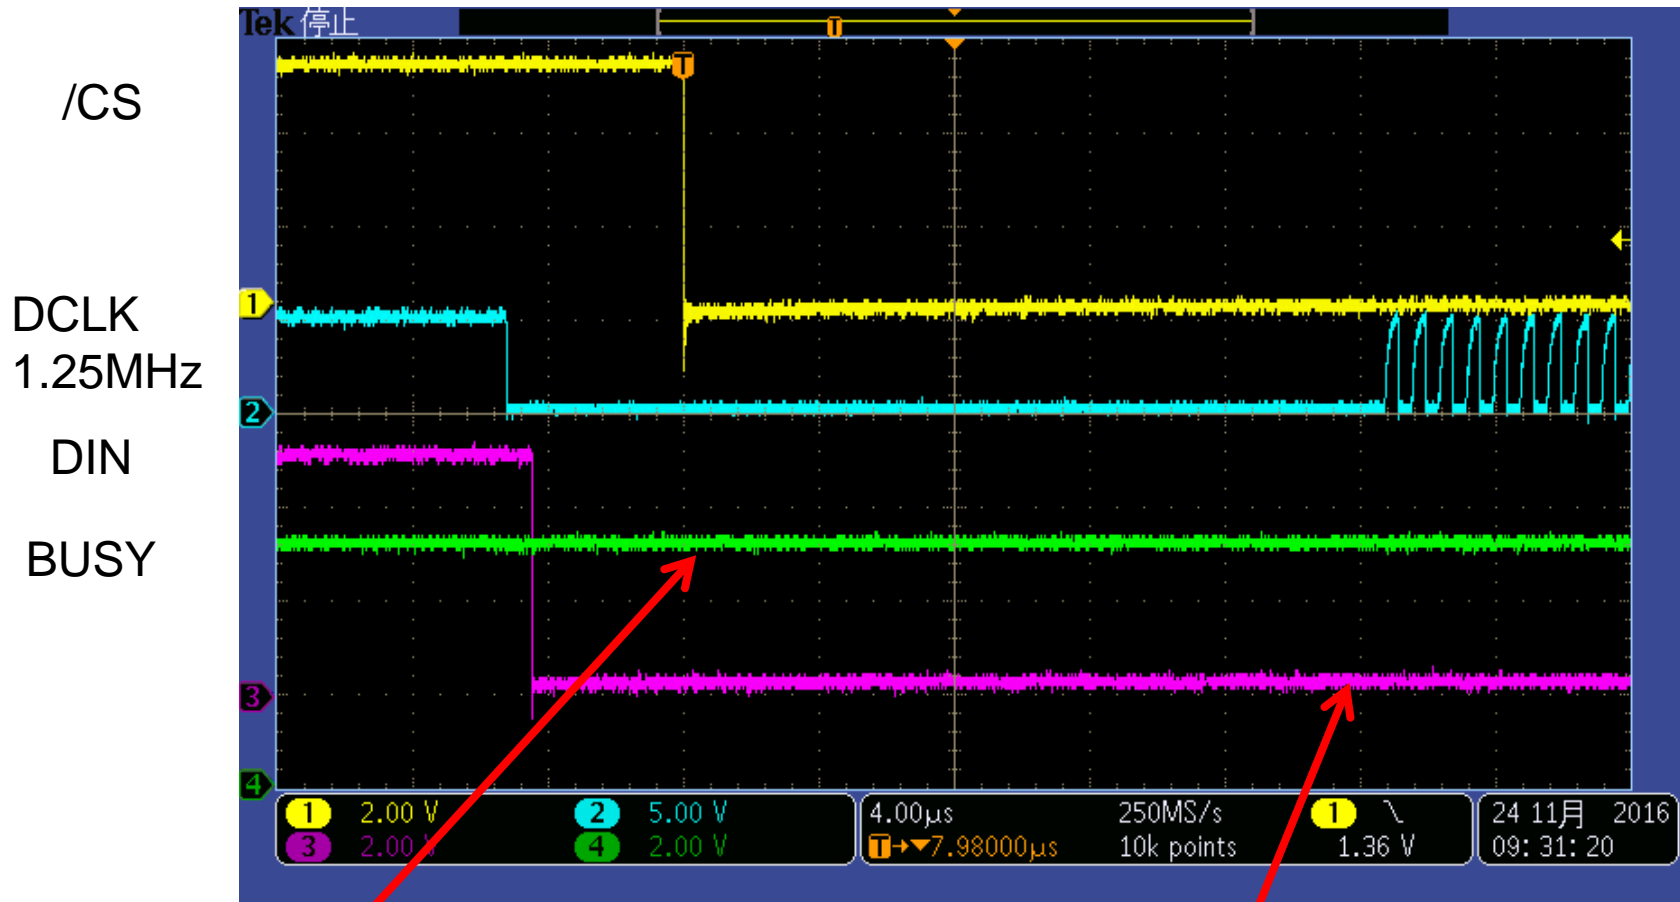

BUSY remain High


It is OK. This is the customer's spec.
The customer watch the falling edge of the BUSY signal. If the BUSY remain High, they do not start DIN.

NG : conversion not start (enlarge)

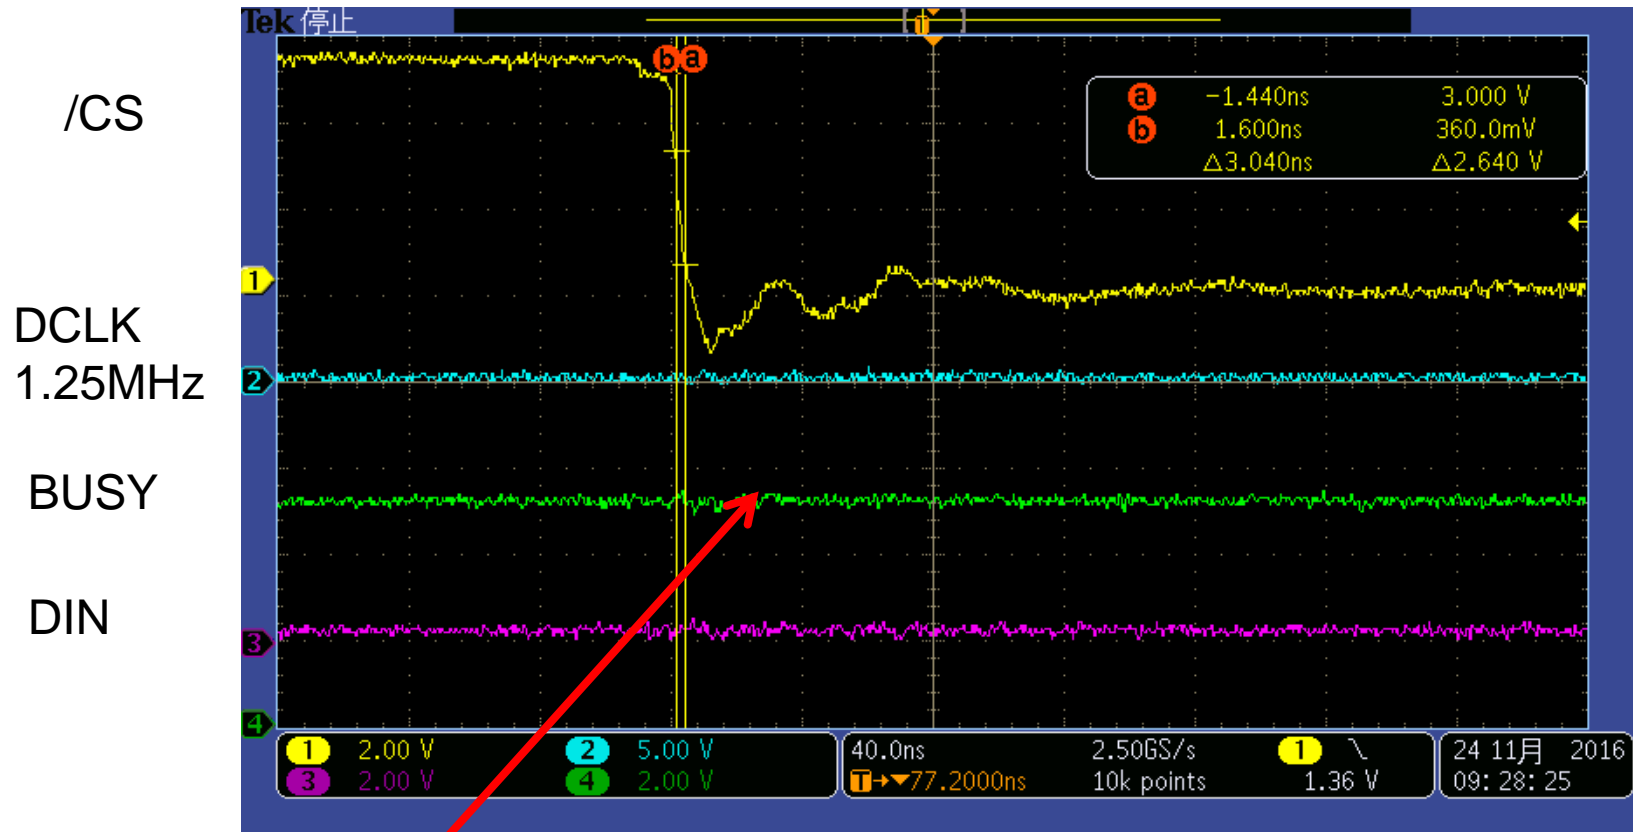


BUSY remain High

OK : this is normal start

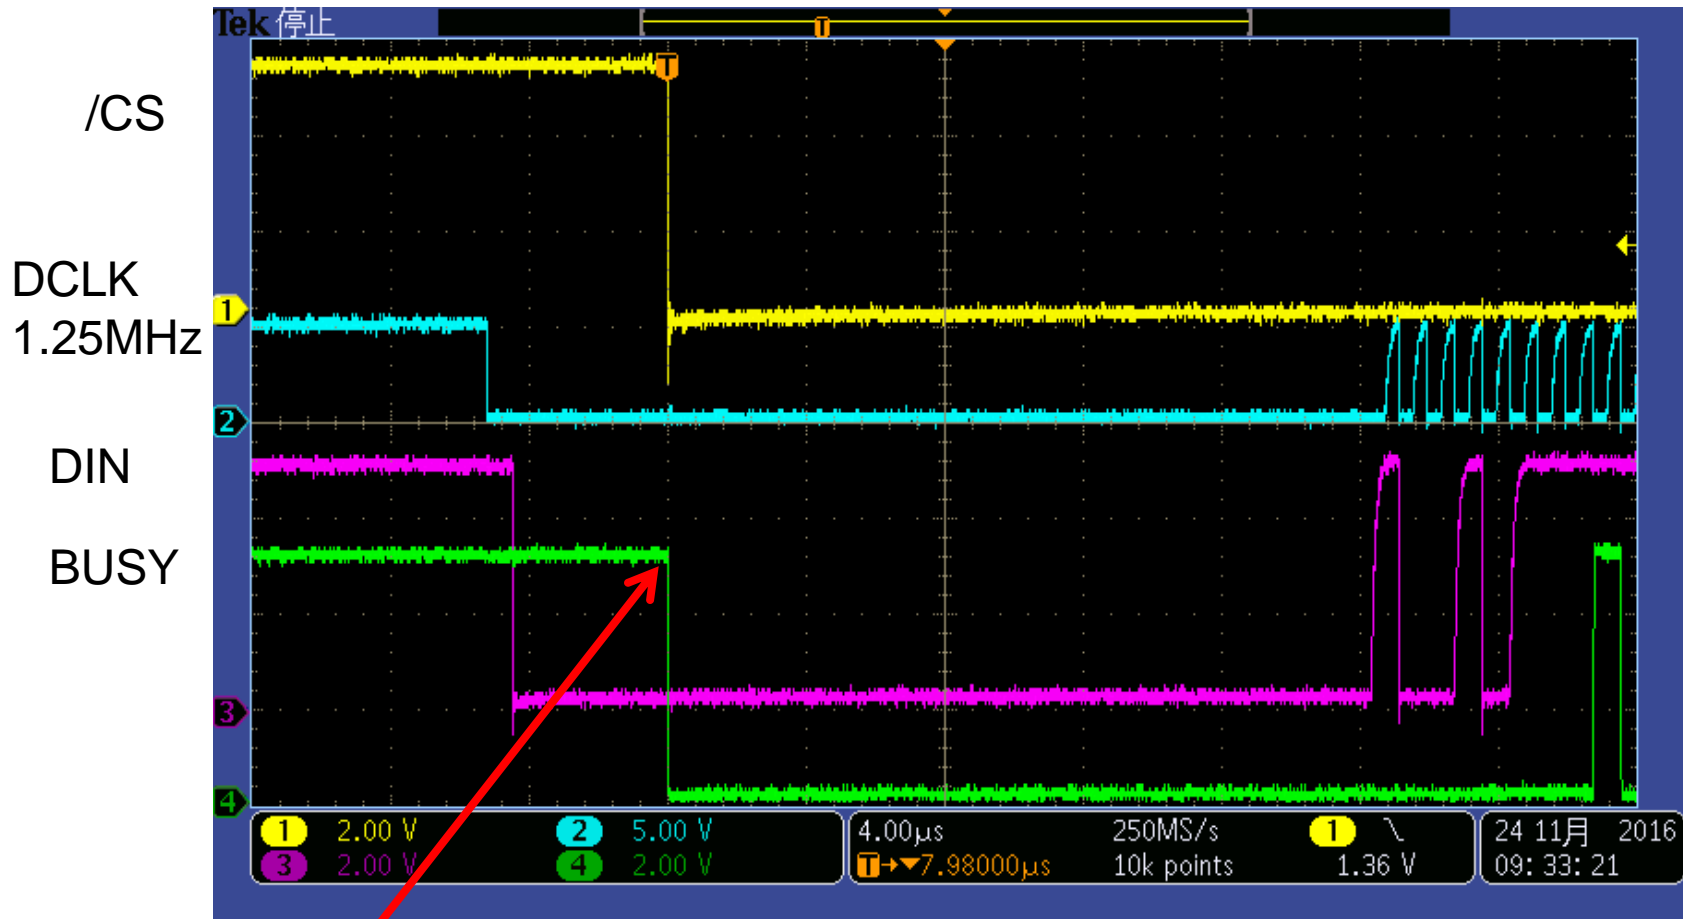

BUSY fall at the /CS is Low

OK : this is normal start (enlarge)

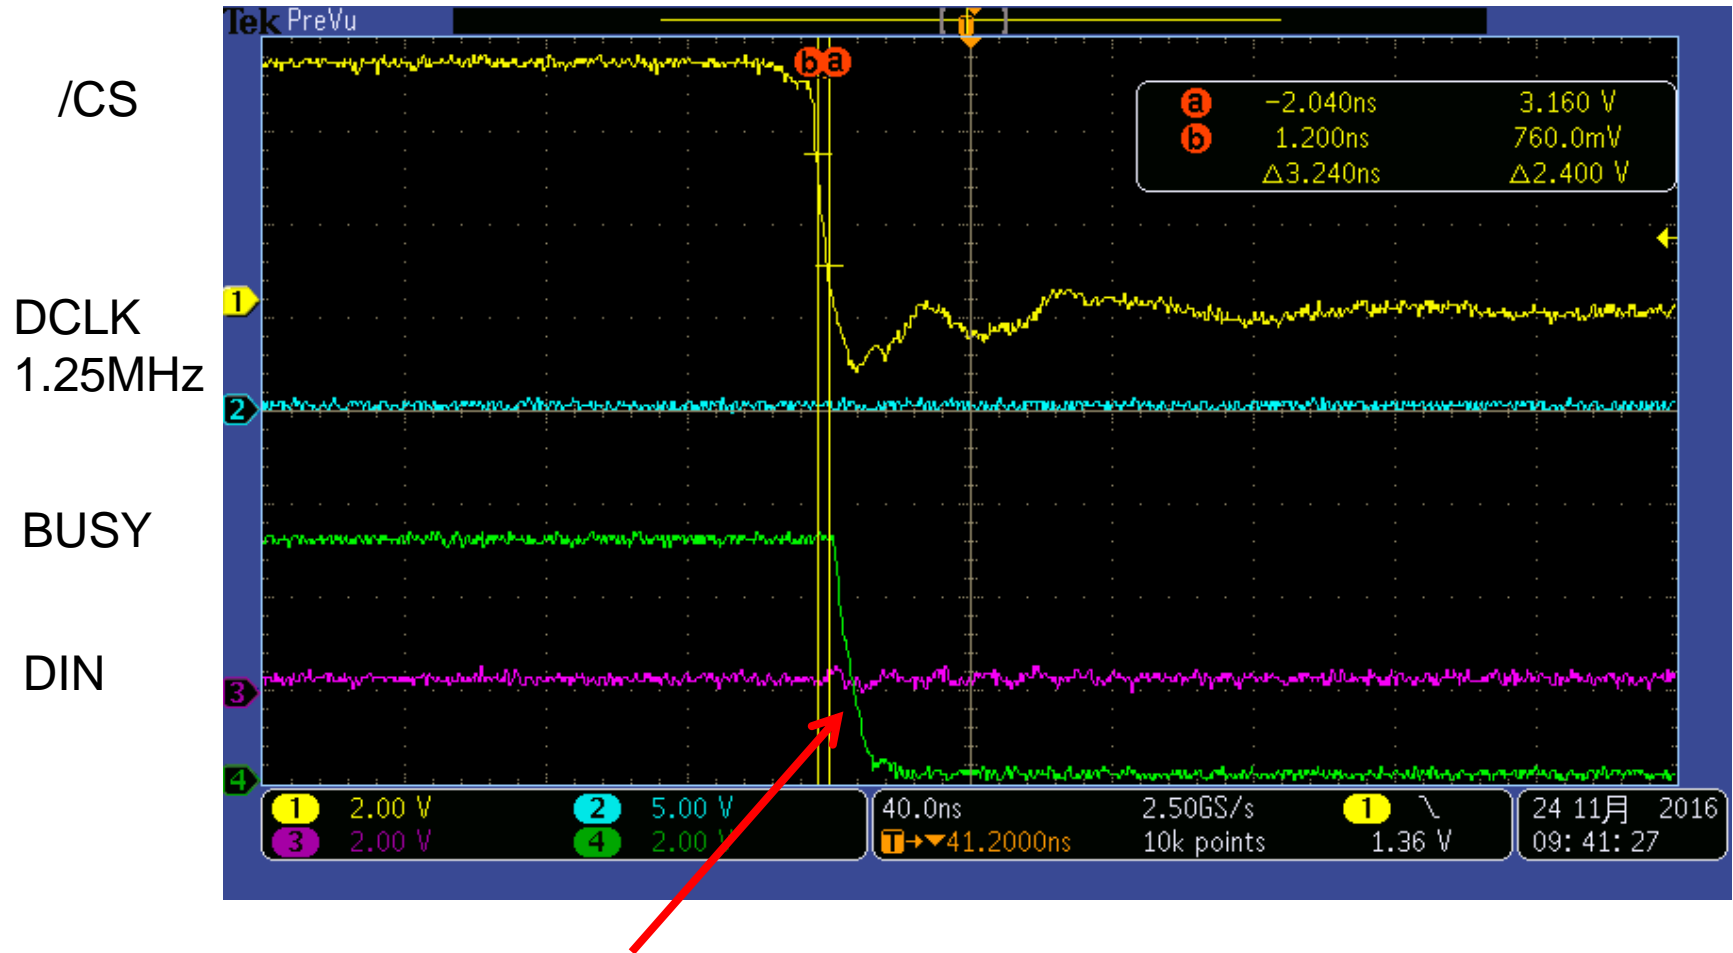

BUSY fall at the /CS is Low