




Configuration (Target Communication) GUI Designer (on-line)

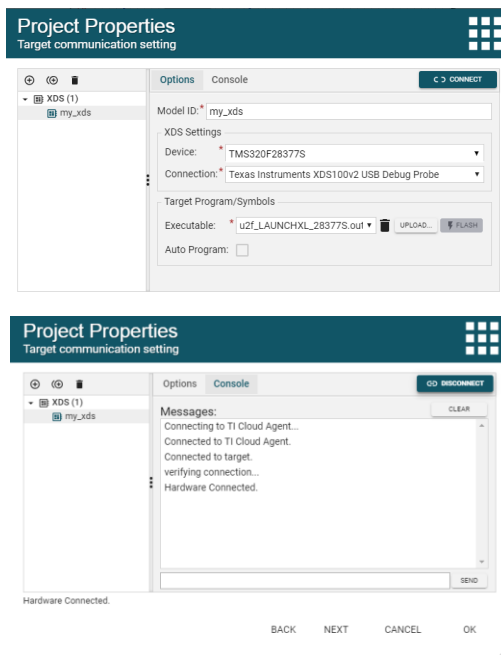

Designed Layout in GUI Designer v2 (on-line)

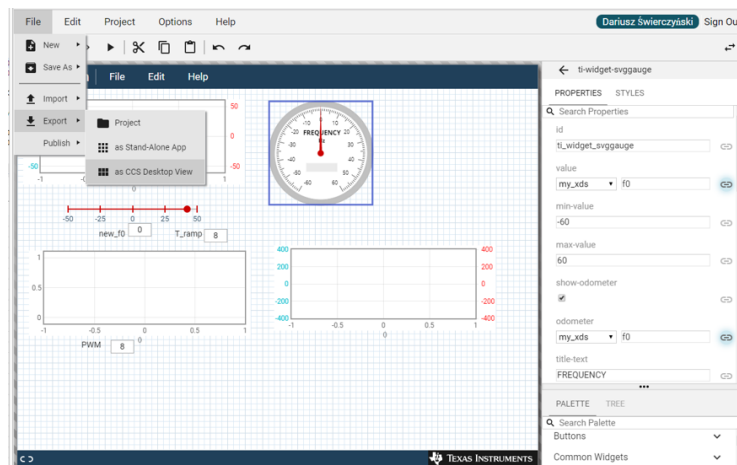

Information that connection is established

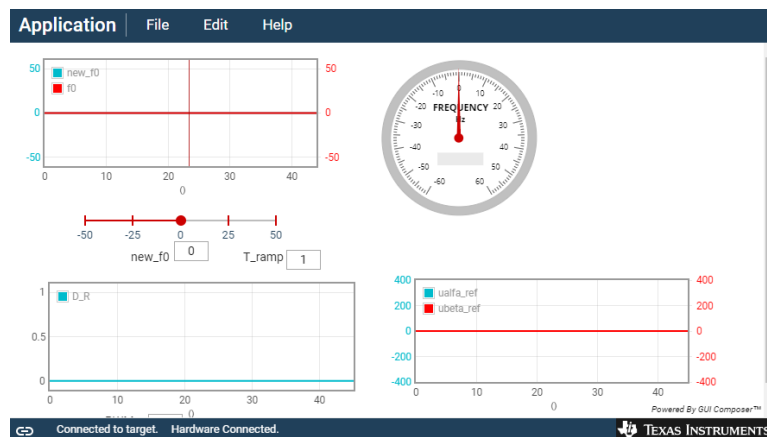


GUI Composer Designer (on-line)



I reference new_f0 and observe that only new_f0 is changed.

Now I export this project into

CCSv8 GUI (as CCS desktop view)

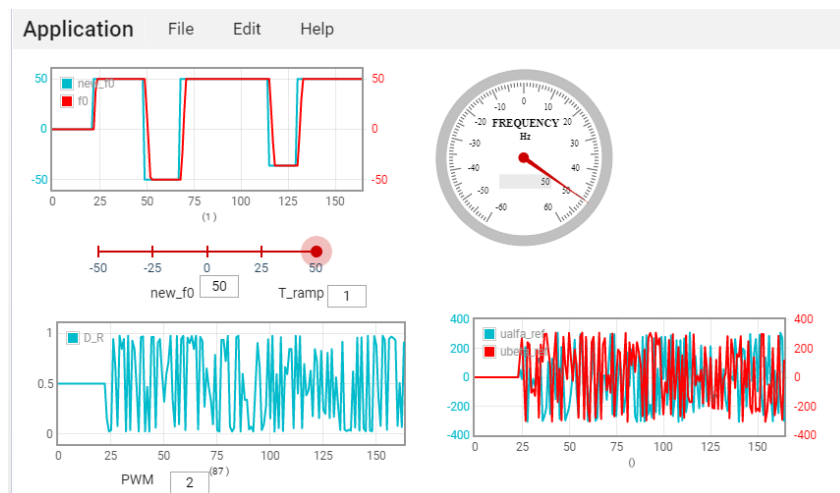

I expected this results. It works good, correct. 😊 (only in CCS desktop view).

In GUI designer (on-line dosen't work properly)