



Disable BSL Invoke PA18

V2

1. Un-check the “Enable BSL” in sysconfig

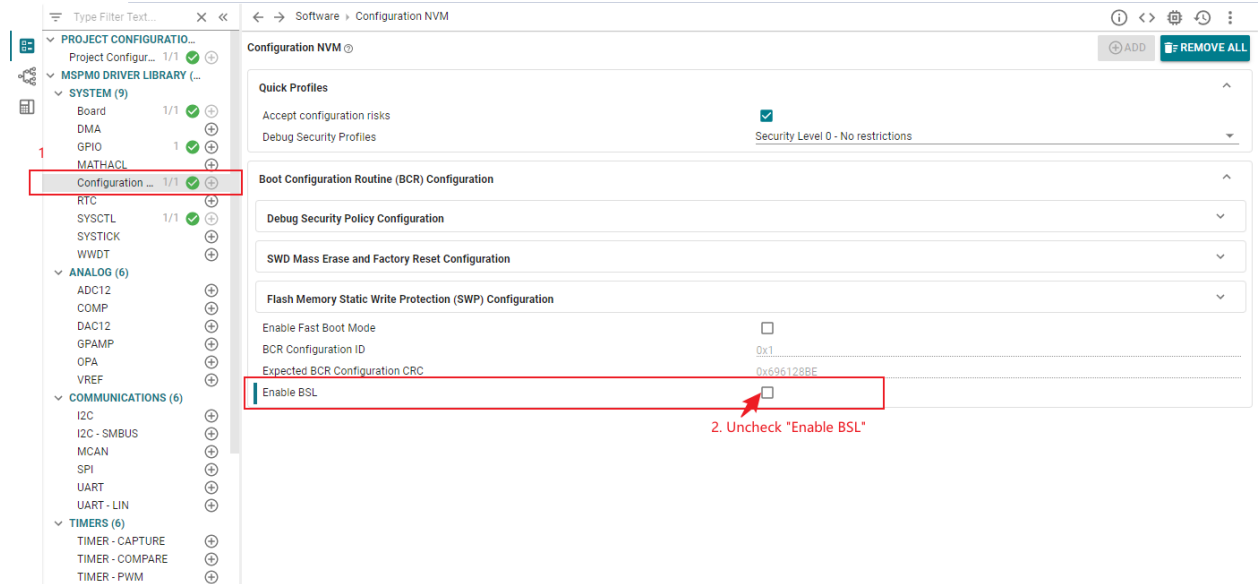

2. Configure the Flash setting in “Window” – “Properties”:

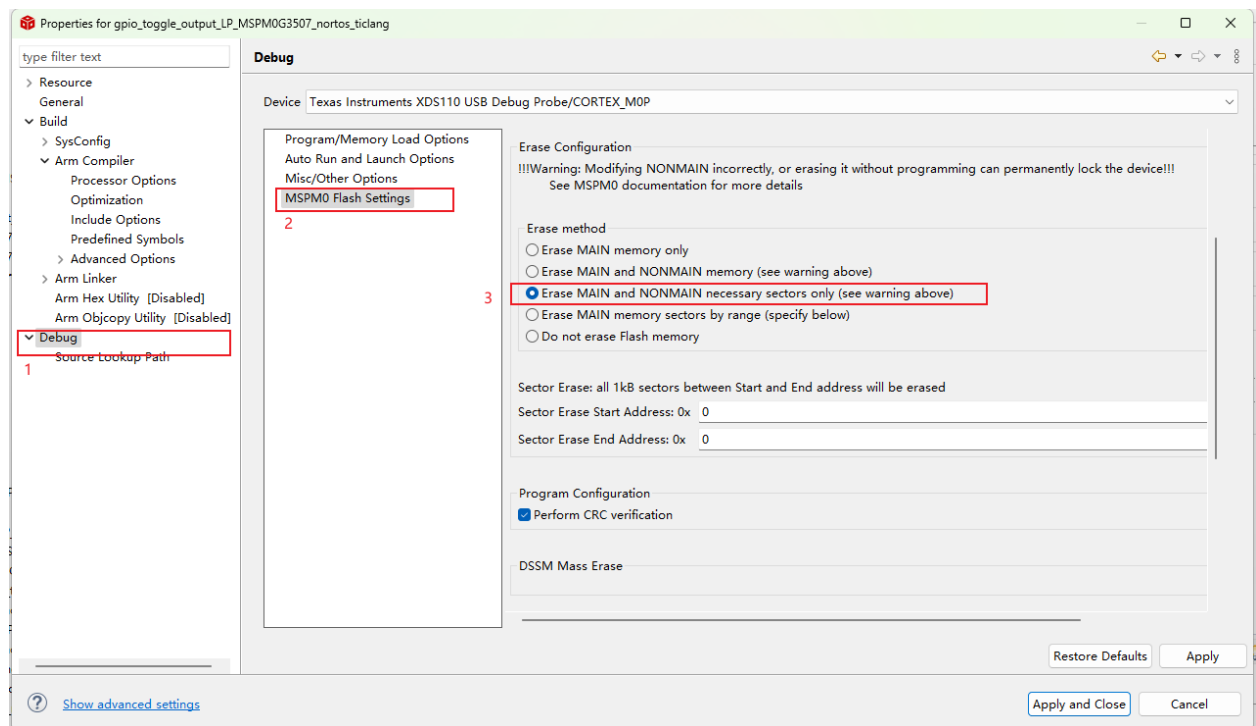

3. Build and download the program for 2-3 times. The program can be normally running even if PA18 is pullup.
4. If you do not want to modify configuration NVM every time, you can remove the configuration NVM in sysconfig. And then modify the flash setting to “Erase MAIN memory only”.

