



1. Do the sysconfig operation below

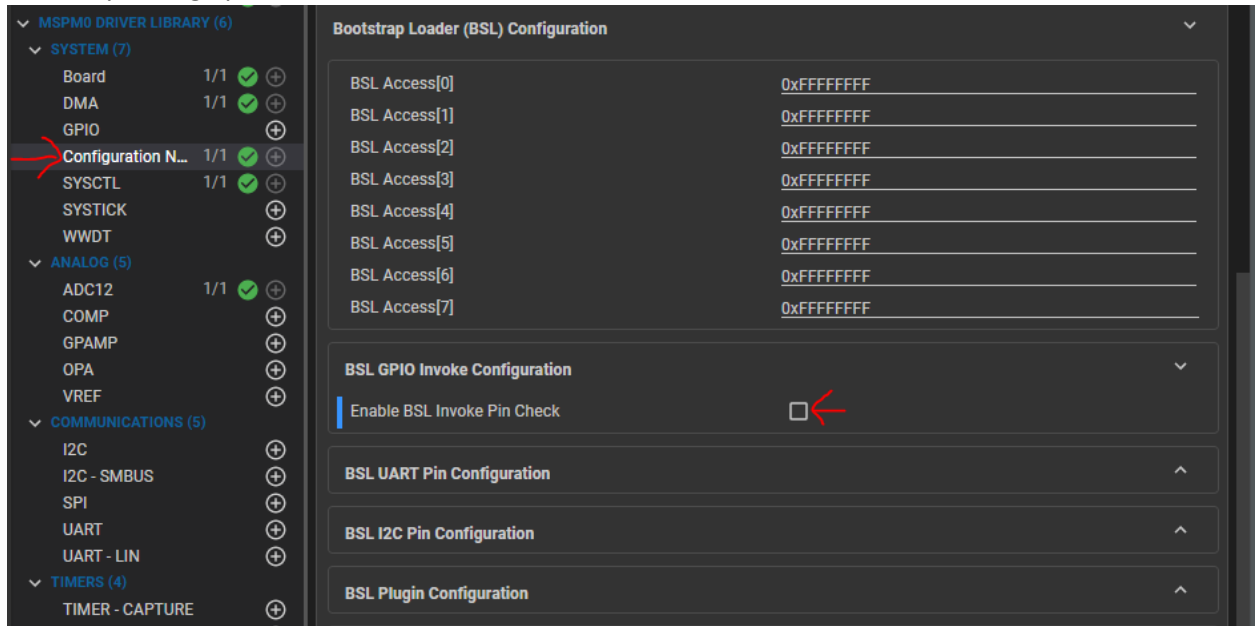

2. Configure the flash setting as below

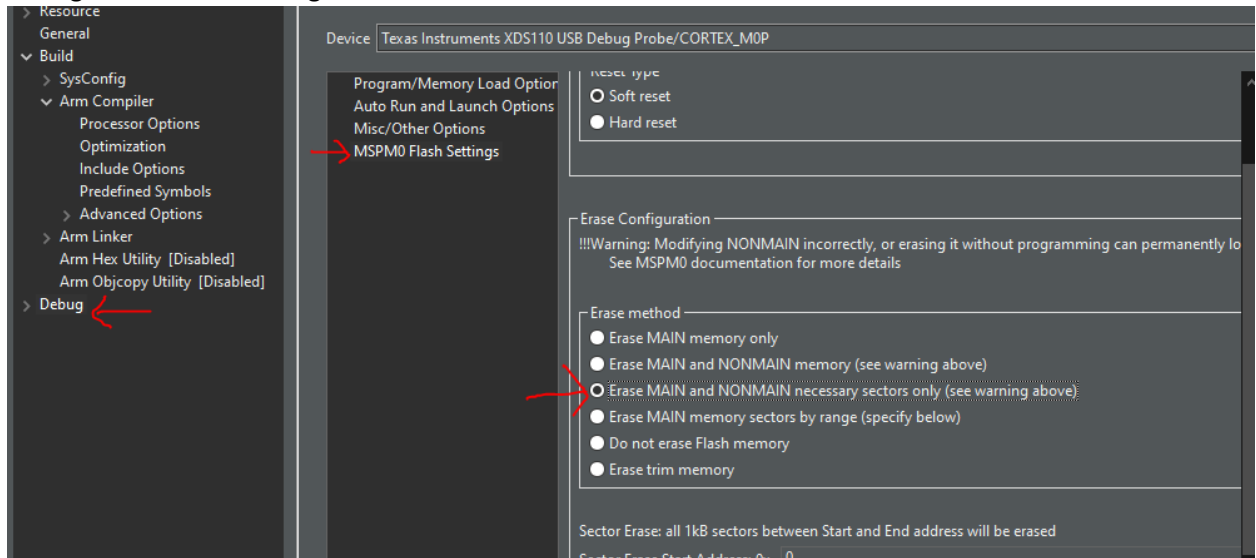

3. Build the project and download it into device
4. If you do not want to modify configuration NVM every time you can remove the configuration NVM in sysconfig in the sysconfig after do the operation 1~3. And modify the flash setting to erase the main memory only.

▼ Arm Compiler
 Processor Options
 Optimization
 Include Options
 Predefined Symbols
 > Advanced Options
 > Arm Linker
 Arm Hex Utility [Disabled]
 Arm Objcopy Utility [Disabled]
▶ Debug

Auto Run and Launch Options
Misc/Other Options
MSPM0 Flash Settings

Soft reset
 Hard reset

Erase Configuration
!!!Warning: Modifying NONMAIN incorrectly, or erasing it without programming ca
See MSPM0 documentation for more details

Erase method
 Erase MAIN memory only
 Erase MAIN and NONMAIN memory (see warning above)
 Erase MAIN and NONMAIN necessary sectors only (see warning above)
 Erase MAIN memory sectors by range (specify below)
 Do not erase Flash memory