


1. Open the GUI attached (the gui can be downloaded at this [E2E](#) thread named [BSL_GUI_EXE.zip](#))
2. Select an image file in input folder like LP_MSPM0L1306_PA13_Toggle_demo_app.txt and finished the steps 1,2,3 below

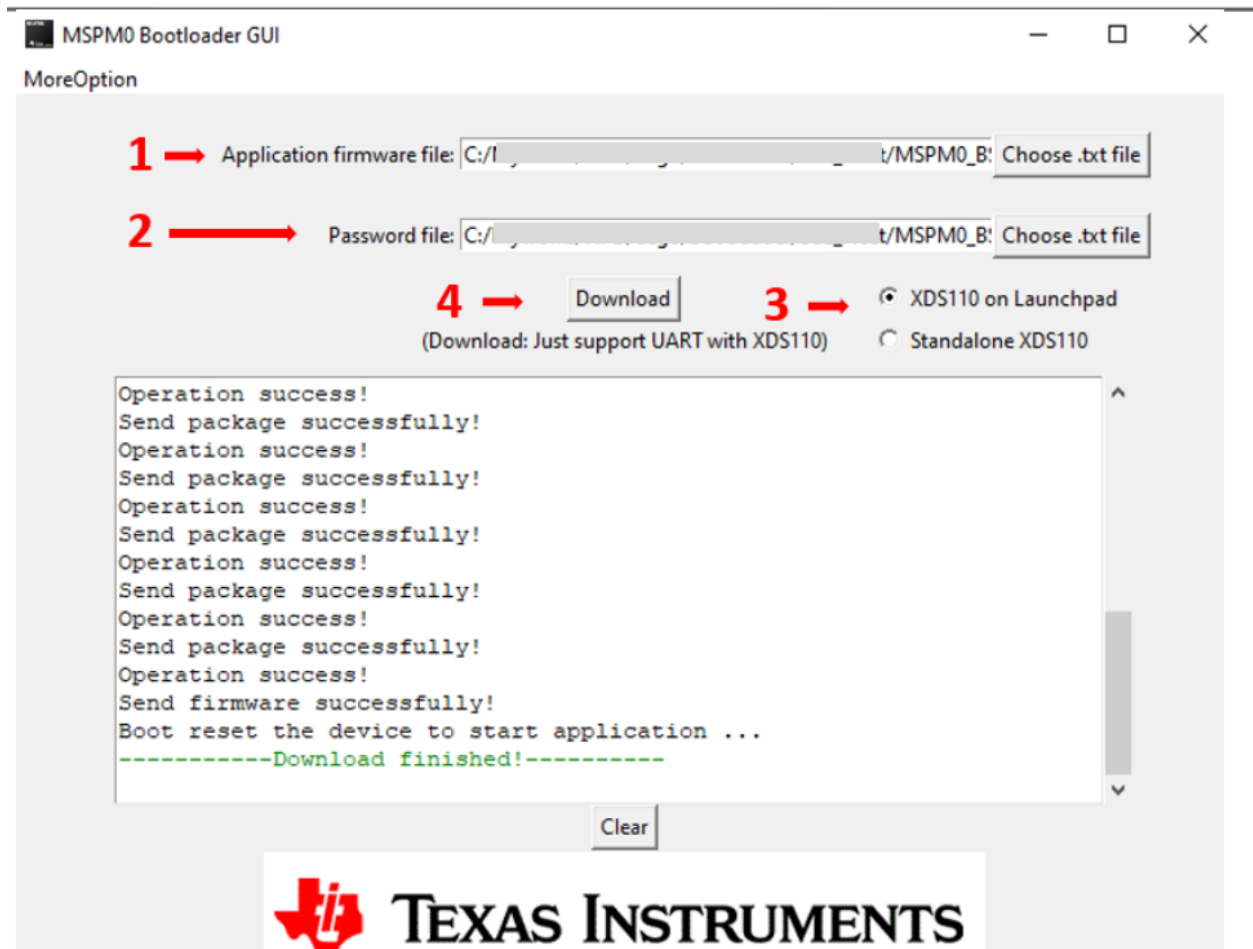

3. Push the button S1(PA18) and hold it
4. Connect the board to PC by the USB cable(keep hold the S1)
5. Click Download button in the GUI
6. When it show download finished release the S1