



## DLPC350/DLP4500 Pattern Sequence Configuration

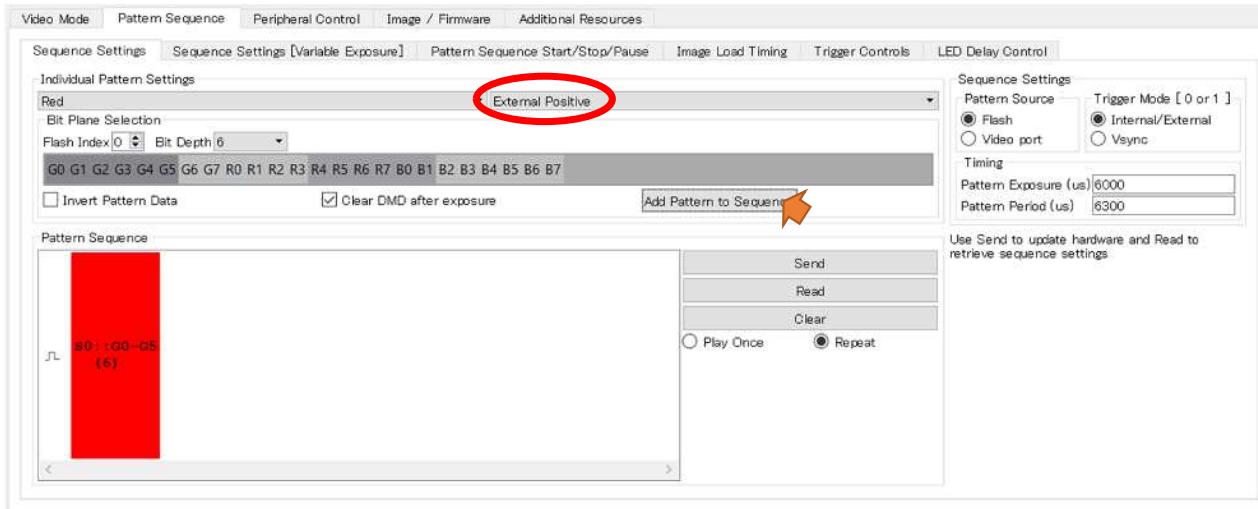

### Register Pattern Sequence #1

- Trigger : External Positive
- Add Pattern to Sequence

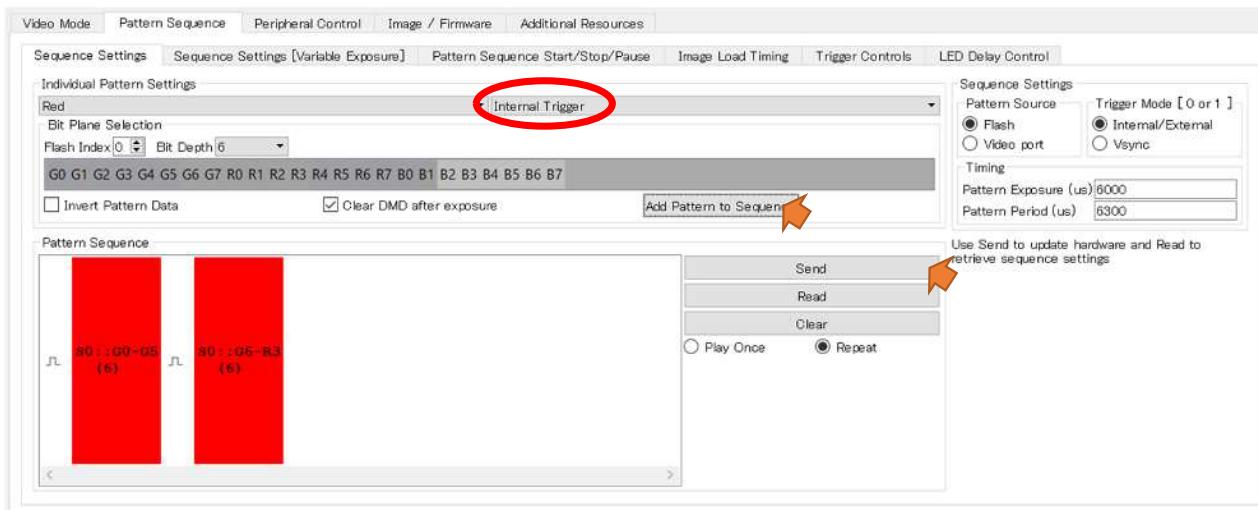


### Register Pattern Sequence #2, #3,...

- Trigger : Internal Trigger
- Add Pattern to Sequence
- Click to 'Send'



- Click 'Validate Sequence '
- Click 'Play '

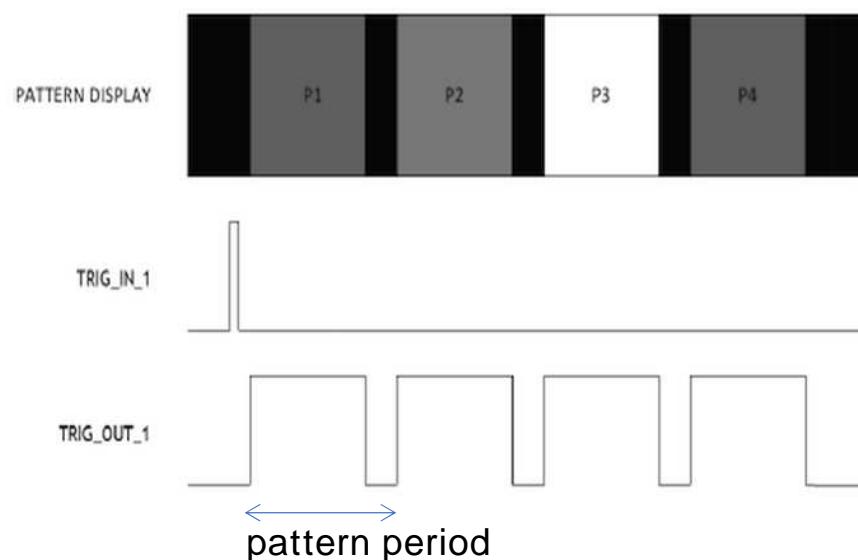

Input a pulse to TRIG\_IN\_1

The second and the subsequent pattern are projected automatically.

Left Figure : in case of the number of pattern 4

My customer wants to project the second and the subsequent patterns without any commands.