



Made4engineering says this:

Make sure you are connected as so:

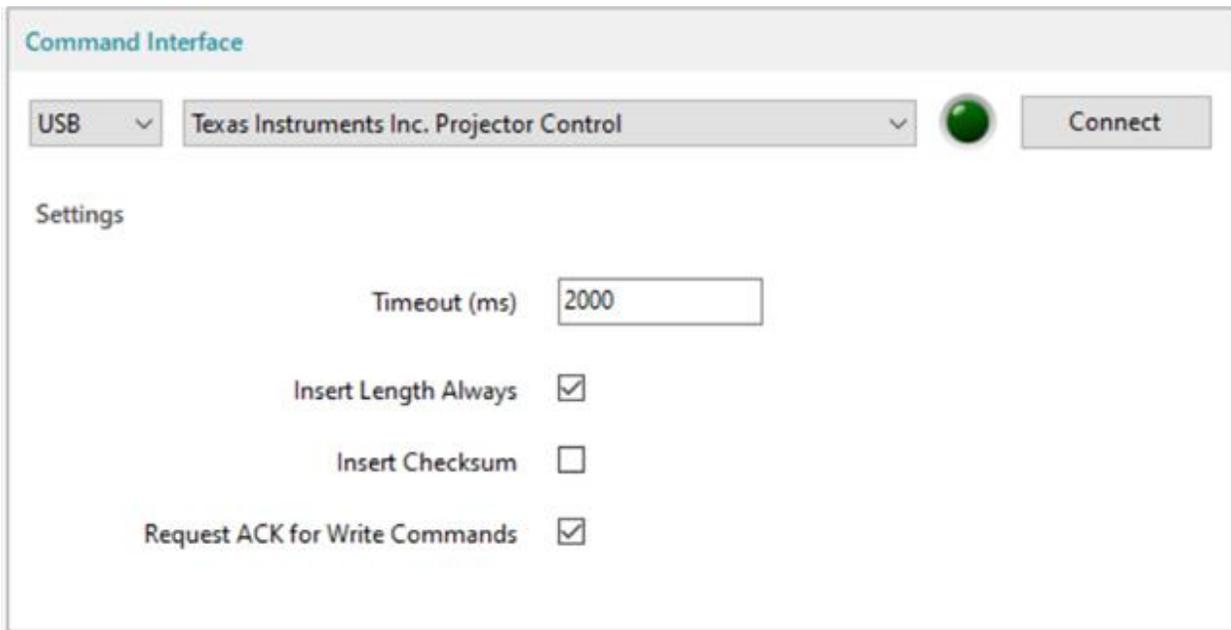


And you need to program your .img firmware as so:

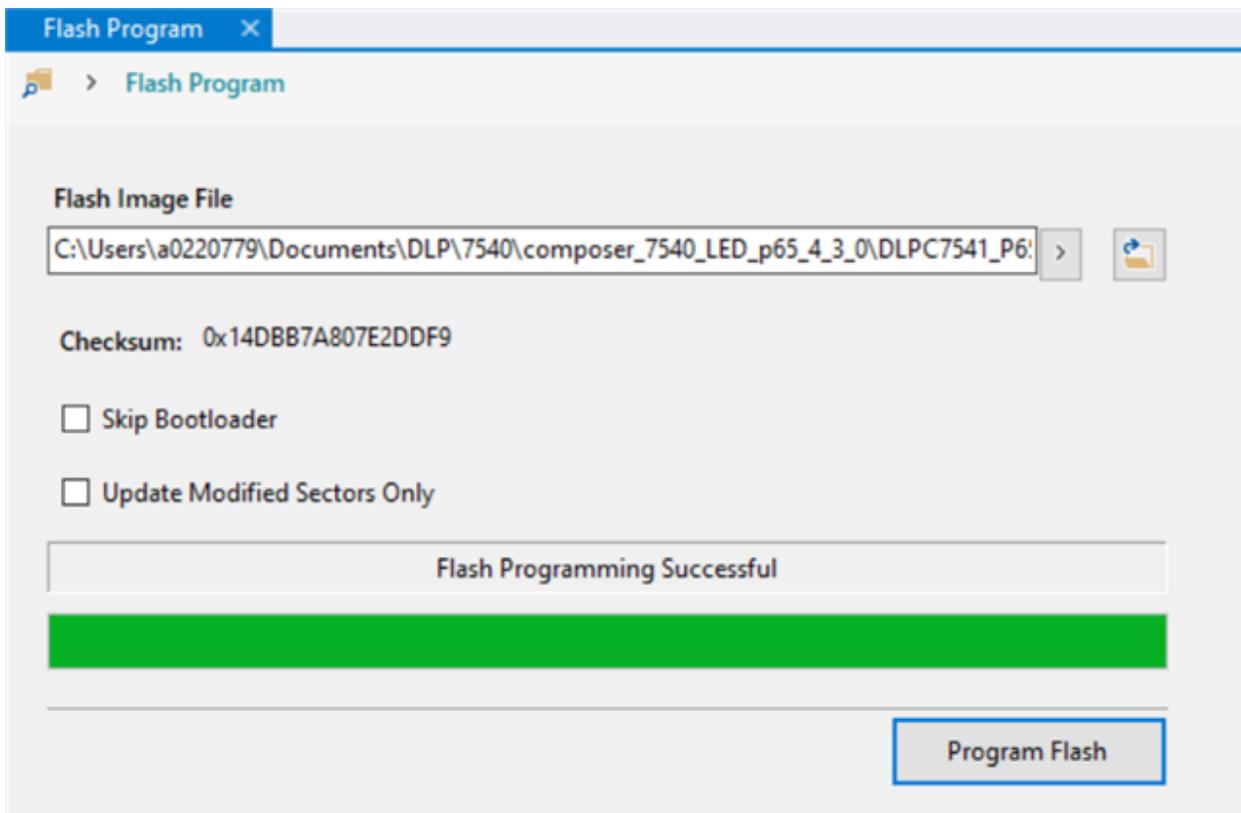

It appears that made4engineering does not understand the problem. Here it is again:

I cannot connect over USB because the "Connect" button is greyed out:

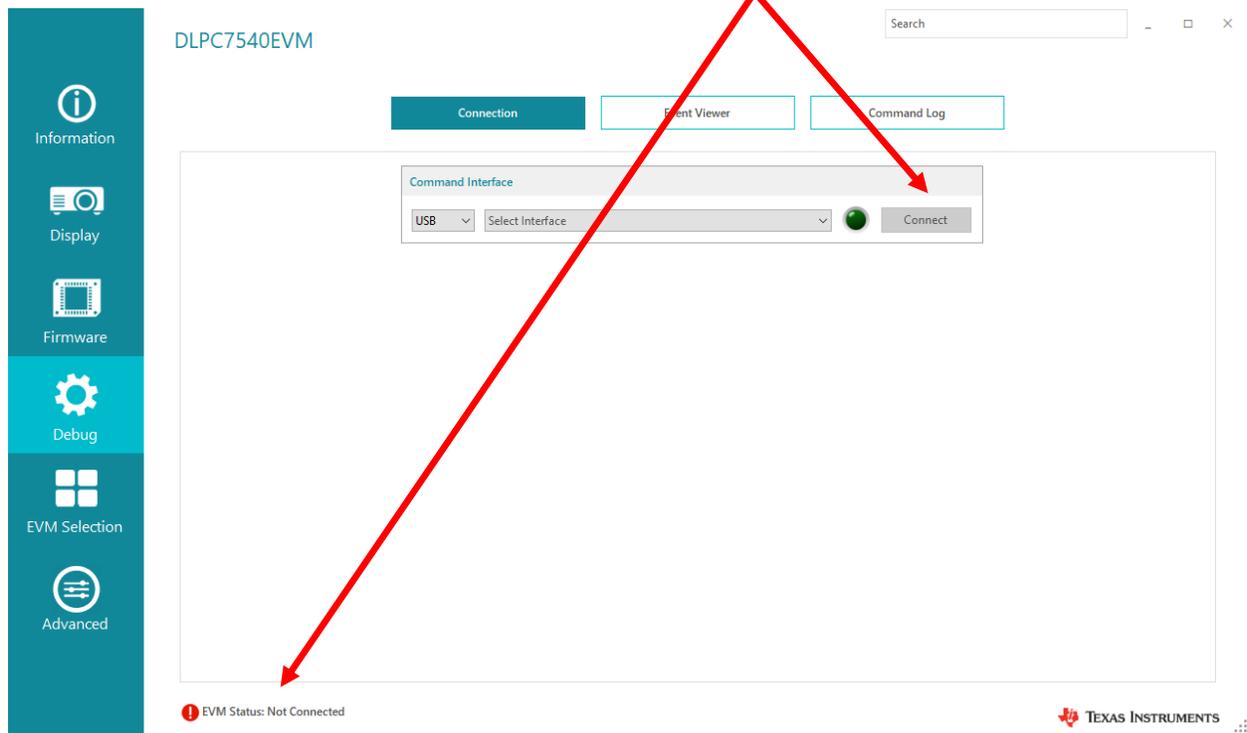

When I try the advanced tab, I can connect over the serial port, but again, the USB option is greyed out:

