

DC level is output from SDOUT and it can cause noise.

[Question]

- 1, Is it normal operation the DC level is output from SDOUT at mute condition?
- 2, Do you have the way to shut off this DC level output?
- 3, Can they know what voltage is output from SDOUT if it's default operation? They are asking this because they confirmed various voltage at each checking.