



5V is hot-plugged to PCB via connector, then the 5V line may be connected first before GND line connected. Is there any concern or damage to TPS2592xx at this condition?