



<Question>

- Must 5V be supplied to the IN pin?
- Does the OUT pin have to be connected to outside Vbus sw to use the discharge function of TPS2540?