


<b>Description</b>	This software module implements a rotor position estimation algorithm for Permanent-Magnet Synchronous Motor (PMSM) based on Sliding-Mode Observer (SMO).
--------------------	---

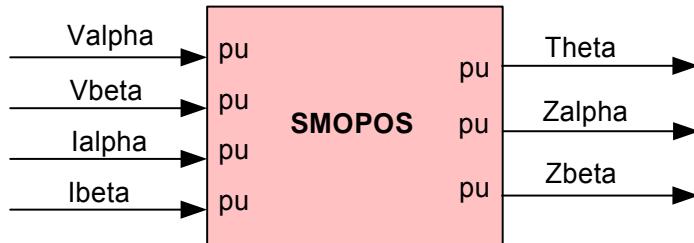

<b>Availability</b>	This IQ module is available in one interface format:
---------------------	--

- 1) The C interface version

<b>Module Properties</b>	<b>Type:</b> Target Independent, Application Dependent
--------------------------	--

**Target Devices:** x281x or x280x

**C Version File Names:** smopos.c, smopos.h

**IQmath library files for C:** IQmathLib.h, IQmath.lib

Item	C version	Comments
Code Size <sup>□</sup>	221/221 words	
(x281x/x280x)		
Data RAM	0 words*	
xDAIS ready	No	
XDAIS component	No	IALG layer not implemented
Multiple instances	Yes	
Reentrancy	Yes	

- Each pre-initialized “\_iq” SMOPOS structure consumes 36 words in the data memory

<sup>□</sup> Code size mentioned here is the size of the **calc()** function

## C Interface

---

### C Interface

#### Object Definition

The structure of SMOPOS object is defined by following structure definition

```
typedef struct { _iq Valpha;    // Input: Stationary alpha-axis stator voltage
                _iq Ealpha;     // Variable: Stationary alpha-axis back EMF
                _iq Zalpha;     // Output: Stationary alpha-axis sliding control
                _iq Gsmopos;   // Parameter: Motor dependent control gain
                _iq Estlalpha;  // Variable: Estimated stationary alpha-axis stator current
                _iq Fsmopos;   // Parameter: Motor dependent plant matrix
                _iq Vbeta;      // Input: Stationary beta-axis stator voltage
                _iq Ebeta;     // Variable: Stationary beta-axis back EMF
                _iq Zbeta;     // Output: Stationary beta-axis sliding control
                _iq Estlbeta;  // Variable: Estimated stationary beta-axis stator current
                _iq Ialpha;     // Input: Stationary alpha-axis stator current
                _iq IalphaError; // Variable: Stationary alpha-axis current error
                _iq Kslide;    // Parameter: Sliding control gain
                _iq Ibeta;     // Input: Stationary beta-axis stator current
                _iq IbetaError; // Variable: Stationary beta-axis current error
                _iq Kslf;      // Parameter: Sliding control filter gain
                _iq Theta;      // Output: Compensated rotor angle
                void (*calc)(); // Pointer to calculation function
} SMOPOS;
```

```
typedef SMOPOS * SMOPOS_handle;
```

#### Module Terminal Variables/Functions

Item	Name	Description	Format	Range(Hex)
Inputs	Valpha	stationary d-axis stator voltage	GLOBAL_Q	80000000-7FFFFFFF
	Vbeta	stationary q-axis stator voltage	GLOBAL_Q	80000000-7FFFFFFF
	Ialpha	stationary d-axis stator current	GLOBAL_Q	80000000-7FFFFFFF
	Ibeta	stationary q-axis stator current	GLOBAL_Q	80000000-7FFFFFFF
Outputs	Theta	rotor position angle	GLOBAL_Q	00000000-7FFFFFFF (0 – 360 degree)
	Zalfa	stationary d-axis sliding control	GLOBAL_Q	80000000-7FFFFFFF
	Zbeta	stationary q-axis sliding control	GLOBAL_Q	80000000-7FFFFFFF
SMOPOS parameter	Fsmopos	$Fsmopos = \exp(-Rs*T/Ls)$	GLOBAL_Q	80000000-7FFFFFFF
	Gsmopos	$Gsmopos = (Vb/lb)*(1 - \exp(-Rs*T/Ls))/Rs$	GLOBAL_Q	80000000-7FFFFFFF
	Kslide	sliding mode control gain	GLOBAL_Q	80000000-7FFFFFFF
	Kslf	sliding control filter gain	GLOBAL_Q	80000000-7FFFFFFF
Internal	Ealpha	stationary d-axis back EMF	GLOBAL_Q	80000000-7FFFFFFF
	Ebeta	stationary q-axis back EMF	GLOBAL_Q	80000000-7FFFFFFF
	Estlalpha	stationary d-axis estimated current	GLOBAL_Q	80000000-7FFFFFFF
	Estlbeta	stationary q-axis estimated current	GLOBAL_Q	80000000-7FFFFFFF
	IalphaError	stationary d-axis current error	GLOBAL_Q	80000000-7FFFFFFF
	IbetaError	stationary q-axis current error	GLOBAL_Q	80000000-7FFFFFFF

GLOBAL\_Q valued between 1 and 30 is defined in the IQmathLib.h header file.

## Special Constants and Data types

### **SMOPOS**

The module definition is created as a data type. This makes it convenient to instance an interface to the sliding-mode rotor position observer of Permanent-Magnet Synchronous Motor module. To create multiple instances of the module simply declare variables of type SMOPOS.

### **SMOPOS\_handle**

User defined Data type of pointer to SMOPOS module

### **SMOPOS\_DEFAULTS**

Structure symbolic constant to initialize SMOPOS module. This provides the initial values to the terminal variables as well as method pointers.

## Methods

```
void smopos_calc(SMOPOS_handle);
```

This definition implements one method viz., the sliding-mode rotor position observer of Permanent-Magnet Synchronous Motor computation function. The input argument to this function is the module handle.

## Module Usage

### **Instantiation**

The following example instances two SMOPOS objects  
SMOPOS smo1, smo2;

### **Initialization**

To Instance pre-initialized objects  
SMOPOS fe1 = SMOPOS\_DEFAULTS;  
SMOPOS fe2 = SMOPOS\_DEFAULTS;

### **Invoking the computation function**

```
smo1.calc(&smo1);  
smo2.calc(&smo2);
```

## Example

The following pseudo code provides the information about the module usage.

```
main()  
{  
    smo1.Fsmopos = parem1_1;           // Pass parameters to smo1  
    smo1.Gsmopos = parem1_2;           // Pass parameters to smo1  
    smo1.Kslide = parem1_3;            // Pass parameters to smo1  
    smo1.Kslf = parem1_4;              // Pass parameters to smo1
```

```
smo2.Fsmopos = parem2_1;           // Pass parameters to smo2
smo2.Gsmopos = parem2_2;           // Pass parameters to smo2
smo2.Kslide = parem2_3;            // Pass parameters to smo2
smo2.Kslf = parem2_4;              // Pass parameters to smo2

}

void interrupt periodic_interrupt_isr()
{
    smo1.Valpha = voltage_dq1.d;      // Pass inputs to smo1
    smo1.Vbeta = voltage_dq1.q;        // Pass inputs to smo1
    smo1.lalpha =current_dq1.d;       // Pass inputs to smo1
    smo1.lbeta =current_dq1.q;        // Pass inputs to smo1

    smo2.Valpha = voltage_dq2.d;      // Pass inputs to smo2
    smo2.Vbeta = voltage_dq2.q;        // Pass inputs to smo2
    smo2.lalpha =current_dq2.d;       // Pass inputs to smo2
    smo2.lbeta =current_dq2.q;        // Pass inputs to smo2

    smopos1.calc(&smopos1)          // Call compute function for smopos1
    smopos2.calc(&smopos2);          // Call compute function for smopos2

    angle1 = smopos1.Theta;           // Access the outputs of smopos1
    angle2 = smopos2.Theta;           // Access the outputs of smopos2
}
```

## Constant Computation Function

Since the sliding-mode rotor position observer of Permanent-Magnet Synchronous Motor module requires two constants (Fsmopos and Gsmopos) to be input basing on the machine parameters, base quantities, mechanical parameters, and sampling period. These two constants can be internally computed by the C function (smopos\_const.c, smopos\_const.h). The followings show how to use the C constant computation function.

### Object Definition

The structure of SMOPOS\_CONST object is defined by following structure definition

```
typedef struct { float32 Rs;           // Input: Stator resistance (ohm)
                float32 Ls;           // Input: Stator inductance (H)
                float32 Ib;           // Input: Base phase current (amp)
                float32 Vb;           // Input: Base phase voltage (volt)
                float32 Ts;           // Input: Sampling period in sec
                float32 Fsmopos;      // Output: constant using in observed current cal.
                float32 Gsmopos;      // Output: constant using in observed current cal.
                void (*calc)();       // Pointer to calculation function
} SMOPOS_CONST;
```

```
typedef SMOPOS_CONST *SMOPOS_CONST_handle;
```

### Module Terminal Variables/Functions

Item	Name	Description	Format	Range(Hex)
Inputs	Rs	Stator resistance (ohm)	Floating	N/A
	Ls	Stator inductance (H)	Floating	N/A
	Ib	Base phase current (amp)	Floating	N/A
	Vb	Base phase voltage (volt)	Floating	N/A
	Ts	Sampling period (sec)	Floating	N/A
Outputs	Fsmopos	constant using in observed current calculation	Floating	N/A
	Gsmopos	constant using in observed current calculation	Floating	N/A

### Special Constants and Data types

#### **SMOPOS\_CONST**

The module definition is created as a data type. This makes it convenient to instance an interface to the sliding-mode rotor position observer of Permanent-Magnet Synchronous Motor constant computation module. To create multiple instances of the module simply declare variables of type SMOPOS\_CONST.

#### **SMOPOS\_CONST\_handle**

User defined Data type of pointer to SMOPOS\_CONST module

#### **SMOPOS\_CONST\_DEFAULTS**

Structure symbolic constant to initialize SMOPOS\_CONST module. This provides the initial values to the terminal variables as well as method pointers.

## Methods

```
void smopos_const_calc(SMOPOS_CONST_Handle);
```

This definition implements one method viz., the sliding-mode rotor position observer of Permanent-Magnet Synchronous Motor constant computation function. The input argument to this function is the module handle.

## Module Usage

### Instantiation

The following example instances two SMOPOS\_CONST objects  
SMOPOS\_CONST smopos1\_const, smopos2\_const;

### Initialization

To Instance pre-initialized objects

```
SMOPOS_CONST smopos1_const = SMOPOS_CONST_DEFAULTS;  
SMOPOS_CONST smopos2_const = SMOPOS_CONST_DEFAULTS;
```

### Invoking the computation function

```
smopos1_const.calc(&smopos1_const);  
smopos2_const.calc(&smopos2_const);
```

## Example

The following pseudo code provides the information about the module usage.

```
main()  
{  
  
    smopos1_const.Rs = Rs1;           // Pass floating-point inputs to smopos1_const  
    smopos1_const.Ls = Ls1;           // Pass floating-point inputs to smopos1_const  
    smopos1_const.Ib = Ib1;           // Pass floating-point inputs to smopos1_const  
    smopos1_const.Vb = Vb1;           // Pass floating-point inputs to smopos1_const  
    smopos1_const.Ts = Ts1;           // Pass floating-point inputs to smopos1_const  
  
    smopos2_const.Rs = Rs2;           // Pass floating-point inputs to smopos2_const  
    smopos2_const.Ls = Ls2;           // Pass floating-point inputs to smopos2_const  
    smopos2_const.Ib = Ib2;           // Pass floating-point inputs to smopos2_const  
    smopos2_const.Vb = Vb2;           // Pass floating-point inputs to smopos2_const  
    smopos2_const.Ts = Ts2;           // Pass floating-point inputs to smopos2_const  
  
    smopos1_const.calc(&smopos1_const); // Call compute function for smopos1_const  
    smopos2_const.calc(&smopos2_const); // Call compute function for smopos2_const  
  
    // Access the outputs of smopos1_const  
    smopos1.Fsmopos = _IQ(smopos1_const.Fsmopos);  
    smopos1.Gsmopos = _IQ(smopos1_const.Gsmopos);
```

```
// Access the outputs of smopos2_const  
smopos2.Fsmopos = _IQ(smopos2_const.Fsmopos);  
smopos2.Gsmopos = _IQ(smopos2_const.Gsmopos);  
}
```

## Technical Background

Figure 1 is an illustration of a permanent-magnet synchronous motor control system based on field orientation principle. The basic concept of field orientation is based on knowing the position of rotor flux and positioning the stator current vector at orthogonal angle to the rotor flux for optimal torque output. The implementation shown in Figure 1 derives the position of rotor flux from encoder feedback. However, the encoder increases system cost and complexity.

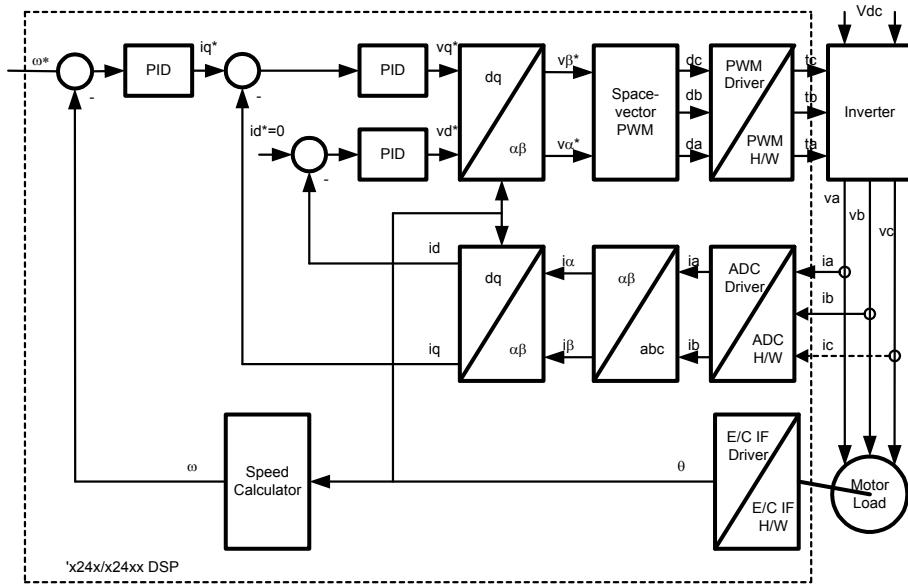


Figure 1 Field Oriented Control of PMSM

Therefore for cost sensitive applications, it is ideal if the rotor flux position information can be derived from measurement of voltages and currents. Figure 2 shows the block diagram of a sensorless PMSM control system where rotor flux position is derived from measurement of motor currents and knowledge of motor voltage commands.

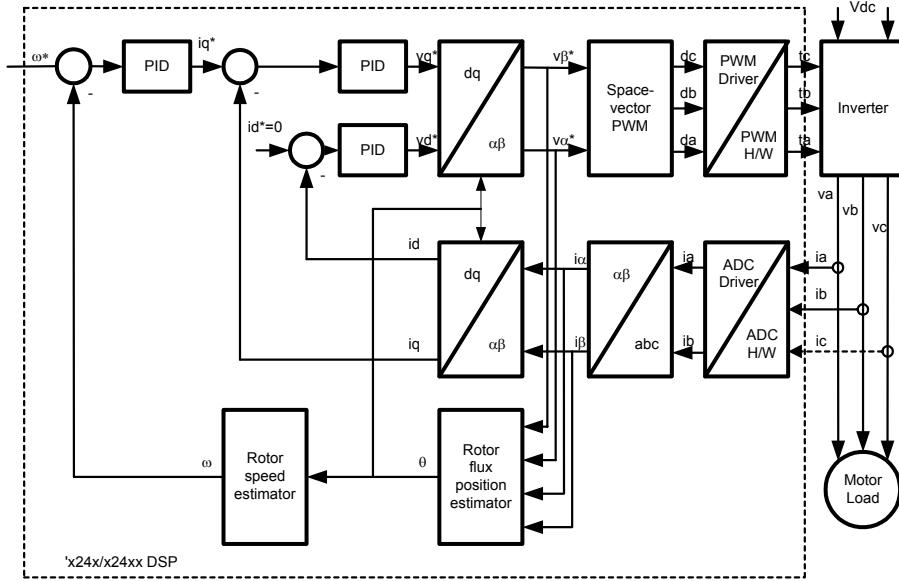


Figure 2 Sensorless Field Oriented Control of PMSM

This software module implements a rotor flux position estimator based on a sliding mode current observer. As shown in Figure 3, the inputs to the estimator are motor phase currents and voltages expressed in  $\alpha\beta$  coordinate frame.

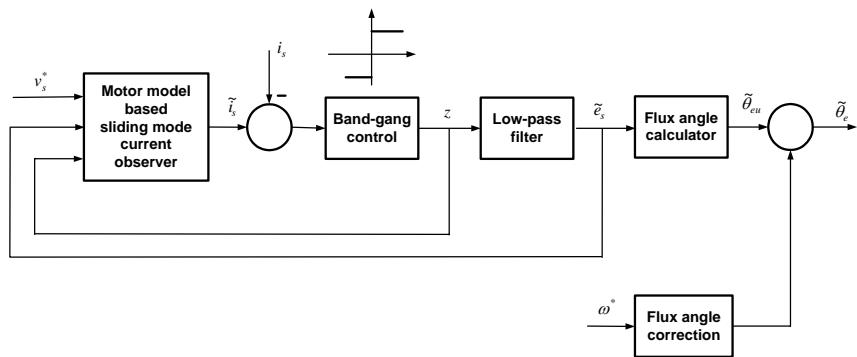


Figure 3 Sliding Mode Observer Based Rotor Flux Position Estimator

Figure 4 is an illustration of the coordinate frames and voltage and current vectors of PMSM, with  $a$ ,  $b$  and  $c$  being the phase axes,  $\alpha$  and  $\beta$  being a fixed Cartesian coordinate frame aligned with phase  $a$ , and  $d$  and  $q$  being a rotating Cartesian coordinate frame aligned with rotor flux.  $v_s$ ,  $i_s$  and  $e_s$  are the motor phase voltage, current and back emf vectors (each with two coordinate entries). All vectors are expressed in  $\alpha$ - $\beta$  coordinate frame for the purpose of this discussion. The  $\alpha$ - $\beta$  frame expressions are obtained by applying Clarke transformation to their corresponding three phase representations.

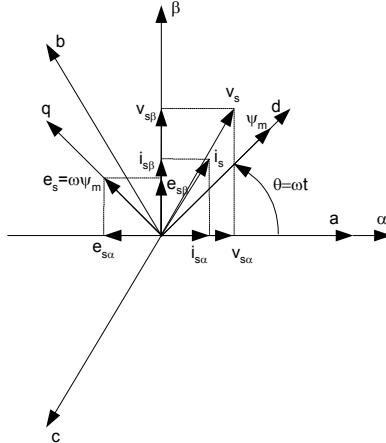


Figure 4 PMSM Coordinate Frames and Vectors

Equation 1 is the mathematical model of PMSM in  $\alpha$ - $\beta$  coordinate frame.

$$\frac{d}{dt} i_s = A i_s + B(v_s - e_s) \quad (1)$$

The matrices  $A$  and  $B$  are defined as  $A = -\frac{R}{L} I_2$  and  $B = \frac{1}{L} I_2$  with  $L = \frac{3}{2} L_m$ , where  $L_m$  and  $R$  are the magnetizing inductance and resistance of stator phase winding and  $I_2$  is a 2 by 2 identity matrix. Next the mathematical equations for the blocks in Figure 3 are discussed.

### 1. Sliding Mode Current Observer

The sliding mode current observer consists of a model based current observer and a bang-bang control generator driven by error between estimated motor currents and actual motor currents. The mathematical equations for the observer and control generator are given by Equations 2 and 3.

$$\frac{d}{dt} \tilde{i}_s = A \tilde{i}_s + B(v_s^* - \tilde{e}_s + z) \quad (2)$$

$$z = k \operatorname{sign}(\tilde{i}_s - i_s) \quad (3)$$

The goal of the bang-bang control  $z$  is to drive current estimation error to zero. It is achieved by proper selection of  $k$  and correct formation of estimated back emf,  $\tilde{e}_s$ . Note that the symbol  $\sim$  indicates that a variable is estimated. The symbol \* indicates that a variable is a command.

The discrete form of Equations 2 and 3 are given by Equations 4 and 5.

$$\tilde{i}_s(n+1) = F \tilde{i}_s(n) + G(v_s^*(n) - \tilde{e}_s(n) + z(n)) \quad (4)$$

$$z(n) = k \operatorname{sign}(\tilde{i}_s(n) - i_s(n)) \quad (5)$$

The matrices  $F$  and  $G$  are given by  $F = e^{-\frac{R}{L}T_s} I_2$  and  $G = \frac{1}{R}(1 - e^{-\frac{R}{L}T_s})I_2$  where  $T_s$  is the sampling period.

## 2. Estimated Back EMF

Estimated back emf is obtained by filtering the bang-bang control,  $z$ , with a first order low-pass filter described by Equation 6.

$$\frac{d}{dt} \tilde{e}_s = -\omega_0 \tilde{e}_s + \omega_0 z \quad (6)$$

The parameter  $\omega_0$  is defined as  $\omega_0 = 2\pi f_0$ , where  $f_0$  represents the cutoff frequency of the filter. The discrete form of Equation 6 is given by Equation 7.

$$\tilde{e}_s(n+1) = \tilde{e}_s(n) + 2\pi f_0(z(n) - \tilde{e}_s(n)) \quad (7)$$

## 3. Rotor Flux Position Calculation

Estimated rotor flux angle is obtained based on Equation 8 for back emf.

$$e_s = \frac{3}{2} k_e \omega \begin{pmatrix} -\sin \theta \\ \cos \theta \end{pmatrix} \quad (8)$$

Therefore given the estimated back emf, estimated rotor position can be calculated based on Equation 9.

$$\tilde{\theta}_{eu} = \arctan(-\tilde{e}_{s\alpha}, \tilde{e}_{s\beta}) \quad (9)$$

Next, Table 1 shows the correspondence of notations between variables used here and variables used in the program (i.e., smopos.c, smopos.h). The software module requires that both input and output variables are in per unit values.

	<b>Equation Variables</b>	<b>Program Variables</b>
<b>Inputs</b>	$V_{s\alpha}^*$	Valpha
	$V_{s\beta}^*$	Vbeta
	$i_{s\alpha}$	lalpha
	$i_{s\beta}$	Ibeta
<b>Outputs</b>	$\tilde{\theta}_e$	Theta
	$Z_\alpha$	Zalpha
	$Z_\beta$	Zbeta
<b>Others</b>	$\tilde{i}_{s\alpha}$	Estlalpha
	$\tilde{i}_{s\beta}$	Estlbeta
	$\tilde{e}_{s\alpha}$	Ealpha
	$\tilde{e}_{s\beta}$	Ebeta
	$e^{-\frac{R}{L}T_s}$	Fsmopos
	$\frac{1}{R}(1 - e^{-\frac{R}{L}T_s})$	Gsmopos
	$k$	Kslide
	$2\pi f_0$	Kslf

Table 1: Correspondence of notations