

MSP debuggers

This manual describes the use and the features of the debug probes for MSP430™ and SimpleLink™ MSP432™ microcontrollers (MCUs). It includes information about the debugger probe hardware and software. It documents frequently asked questions on how to enable and disable certain features. It shows the differences between the debug probes and offers a guide on how to identify the specific version of the debug probe hardware.

Contents

1	Introduction	3
2	MSP Debug Probe Overview.....	4
3	Hardware Identification.....	6
4	Hardware Installation	8
5	Debug Probes Hardware and Software	12

List of Figures

1	eZ-FET Windows Enumeration	6
2	eZ-FET Emulation IP	6
3	eZ-FET Lite Emulation IP.....	6
4	eZ430 Emulation IP	7
5	eZ430 Windows Enumeration.....	7
6	MSP Flasher Driver Install Notification	10
7	CCS Cloud Agent Installation.....	11
8	Successful CCS Cloud Agent Installation.....	11
9	MSP Ecosystem.....	12
10	MSP-FET Top View.....	15
11	MSP-FET Bottom View.....	15
12	MSP-FET 14-Pin JTAG Connector	19
13	Open MSP-FET Cover	20
14	Jumper J5	20
15	Recovery Confirmation	21
16	MSP-FET USB Debugger, Schematic (1 of 6)	22
17	MSP-FET USB Debugger, Schematic (2 of 6)	23
18	MSP-FET USB Debugger, Schematic (3 of 6)	24
19	MSP-FET USB Debugger, Schematic (4 of 6)	25
20	MSP-FET USB Debugger, Schematic (5 of 6)	26
21	MSP-FET USB Debugger, Schematic (6 of 6)	27
22	MSP-FET430UIF Version 1.4a Top and Bottom Views.....	30
23	MSP-FET430UIF Version 1.3 Top and Bottom Views	30
24	MSP-FET430UIF 14-Pin JTAG Connector	31
25	MSP-FET430UIF USB Interface, Schematic (1 of 4).....	33
26	MSP-FET430UIF USB Interface, Schematic (2 of 4).....	34
27	MSP-FET430UIF USB Interface, Schematic (3 of 4).....	35
28	MSP-FET430UIF USB Interface, Schematic (4 of 4).....	36

29	MSP-FET430UIF USB Interface, PCB	37
30	eZ-FET and eZ-FET Lite (Top View)	38
31	eZ-FET Rev1.3 (Top View)	38
32	eZ-FET or eZ-FET Lite Debug Connector	40
33	MSP-FET to LaunchPad Development Kit Pin Assignments.....	41
34	MSP-FET to LaunchPad Wiring Diagram	41
35	eZ-FET Schematic (USB Connection).....	42
36	eZ-FET Schematic (Emulation MCU).....	43
37	eZ-FET Schematic DCDC (No eZ-FET Lite)	44
38	eZ430 Emulation	45
39	eZ430 Debug Connector on MSP-EXP430G2 LaunchPad.....	46
40	eZ430 Schematic (Emulation MCU)	47
41	eZ430 Schematic (USB Connection)	48
42	MSP-FET430PIF	49
43	MSP-FET430PIF FET Interface Module, Schematic	50
44	MSP-FET430PIF FET Interface Module, PCB	51

List of Tables

1	Debug Probes Features and Device Compatibility	4
2	MSP-FET Backchannel UART Implementation	16
3	MSP-FET Backchannel UART Activation Commands	17
4	MSP-FET MSP Target BSL Activation Commands.....	18
5	MSP-FET LED Signals	18
6	MSP-FET Pin States.....	19
7	Mechanical and Interface Specifications	28
8	JTAG and Spy-Bi-Wire Interface Specifications.....	28
9	JTAG and SWD Interface Specifications.....	29
10	MSP-FET430UIF LED Signals	31
11	MSP-FET430UIF Pin States	32
12	eZ-FET and eZ-FET Lite Backchannel UART Implementation	39
13	eZ-FET and eZ-FET Lite Backchannel UART Activation Commands.....	40
14	eZ-FET LED Signals.....	40
15	eZ-FET and eZ-FET Lite Pin States	41
16	eZ430 Backchannel UART Implementation	46
17	eZ430 Pin States	46

Trademarks

MSP430, SimpleLink, MSP432, Code Composer Studio, E2E, EnergyTrace are trademarks of Texas Instruments.

OS X is a registered trademark of Apple, Inc.

Arm is a registered trademark of Arm Limited.

Ubuntu is a trademark of Canonical Group Ltd.

IAR Embedded Workbench is a registered trademark of IAR Systems.

Linux is a registered trademark of Linus Torvalds.

Windows is a registered trademark of Microsoft Corporation.

CentOS is a trademark of Red Hat, Inc.

All other trademarks are the property of their respective owners.

1 Introduction

1.1 Related Documentation From Texas Instruments

[MSP430™ hardware tools user's guide](#)

[IAR Embedded Workbench™ IDE for MSP430™ MCUs user's guide](#)

[Advanced debugging using the enhanced emulation module \(EEM\) with Code Composer Studio™ IDE](#)

[MSP430™ flash device bootloader \(BSL\) user's guide](#)

[MSP430™ programming with the JTAG interface](#)

1.2 Terms and Abbreviations

Term	Definition
BSL	Bootloader
CCS	Code Composer Studio™ development tool for MSP430
CDC	Communications device class
CPU	Central processing unit
CRC	Cyclic redundancy check
CTS	Clear to send
FET	Flash emulation tool
I ² C	Inter-Integrated Circuit 2-wire communication bus
IAR EW430	IAR Embedded Workbench® development tool for MSP430
JTAG	Joint Test Action Group
JTAG 4-wire	4-wire JTAG protocol communication
MCLK	Master clock
MSP	Mixed signal processor
MSP-FET	MSP debug probe
MSP-FET430 UIF	MSP debug probe
MSPDebugStack	Dynamic library (Windows®), shared object (Linux®), or dy library (OS X®) that offers functions to access and debug MSP430 devices using an MSP debug probe
PC	Personal computer
RTS	Request to send
RX	Receive data
SBW	Spy-Bi-Wire (2-wire JTAG protocol) communication
TX	Transmit data
UART	Universal asynchronous receiver/transmitter
UIF	USB interface to debug and access MSP derivatives
USB	Universal serial bus

1.3 If You Need Assistance

Support for the MSP microcontrollers and the development tools is provided by the TI Product Information Center (PIC). Contact information for the PIC can be found on the [TI website](#). The [TI E2E™ Community](#) support forums for the MSP microcontrollers also provide open interaction and support from a community of peer engineers, TI engineers, and other experts. Additional device-specific information can be found on the [MSP430 website](#).

2 MSP Debug Probe Overview

Table 1 is an overview of the capabilities and features for the available MSP debug probes.

CAUTION

Never disconnect the JTAG or emulator USB cable during an active debug session. Always terminate a running debug session properly, by clicking on the "Terminate" icon, before disconnecting the target device.

Table 1. Debug Probes Features and Device Compatibility⁽¹⁾⁽²⁾⁽³⁾

Feature and MSP430 Device Support	eZ430-F2013	eZ430-RF2500	eZ430-RF2480	eZ430-RF2560	MSP-WDSxx Metawatch	eZ430-Chronos	LaunchPad (MSP-EXP430G2)	MSP-EXP430FR5739	MSP-EXP430F5529	MSP-FET430PIF	MSP-FET430UIF	MSP-FET	eZ-FET Emulation IP	eZ-FET Lite Emulation IP
Supports all programmable MSP430 and CC430 devices										✓	✓	✓	✓	✓
Supports only F20xx, G2x01, G2x11, G2x21, G2x31	✓													
Supports F20xx, F21x2, F22xx, G2x01, G2x11, G2x21, G2x31, G2x53							✓							
Supports F20xx, F21x2, F22xx, G2x01, G2x11, G2x21, G2x31		✓	✓											
Supports F5438, F5438A				✓										
Supports BT5190, F5438A				✓	✓									
Supports only F552x									✓					
Supports FR57xx, F5638, F6638								✓						
Supports only CC430F613x						✓								
Supports MSP432Pxx												✓		
Allows JTAG access protection (fuse blow) ⁽⁴⁾											✓	✓		
Adjustable target supply voltage											✓	✓		
Fixed 2.8-V target supply voltage										✓				
Fixed 3.3-V target supply voltage													✓	✓
Fixed 3.6-V target supply voltage	✓	✓	✓	✓	✓	✓	✓	✓	✓					
4-wire JTAG										✓	✓	✓		
2-wire JTAG ⁽⁵⁾	✓	✓	✓	✓	✓	✓	✓	✓	✓		✓	✓	✓	✓
BSL tool or mode												✓		
Backchannel UART		✓	✓	✓	✓	✓	✓	✓	✓			✓	✓	✓
Supported by CCS for Windows	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Supported by CCS for Linux											✓	✓	✓	✓
Supported by CCS for OS X											✓	✓	✓	✓

⁽¹⁾ The MSP-FET430PIF is for legacy device support only. This emulation tool does not support any devices released after 2011.

⁽²⁾ See [Section 3.1](#) to identify the hardware.

⁽³⁾ The eZ-FET Emulation IP and eZ-FET Lite Emulation IP are used as the onboard emulation for the MSP LaunchPad tools.

⁽⁴⁾ See [Section 5.5](#) for more information.

⁽⁵⁾ The 2-wire JTAG debug interface is also referred to as Spy-Bi-Wire (SBW) interface.

Table 1. Debug Probes Features and Device Compatibility⁽¹⁾⁽²⁾⁽³⁾ (continued)

Feature and MSP430 Device Support	eZ430-F2013	eZ430-RF2500	eZ430-RF2480	eZ430-RF2560	MSP-WDSxx Metawatch	eZ430-Chronos	LaunchPad (MSP-EXP430G2)	MSP-EXP430FR5739	MSP-EXP430F5529	MSP-FET430PIF	MSP-FET430UIF	MSP-FET	eZ-FET Emulation IP	eZ-FET Lite Emulation IP
Supported by IAR	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
EnergyTrace™ technology, EnergyTrace++												✓	✓	

2.1 Known Limitations

A firmware update may fail when using a USB hub. Therefore, do not connect through a USB hub while updating the firmware on the debug tools.

3 Hardware Identification

3.1 How to Determine If Your Hardware is Based on eZ-FET or eZ-FET Lite

- Check the installed tool drivers by using the Windows Device Manager. eZ-FET tools enumerate as CDC "MSP Debug Interface" and CDC "MSP Application UART1" devices (see Figure 1).
- Check the Experimenter Board or LaunchPad emulation section to find out if it is based on an eZ-FET tool. If it is based on an MSP430F5528 device, it is an eZ-FET tool.
- There is a small print on the silkscreen that indicates eZ-FET or eZ-FET Lite (see Figure 2 and Figure 3).

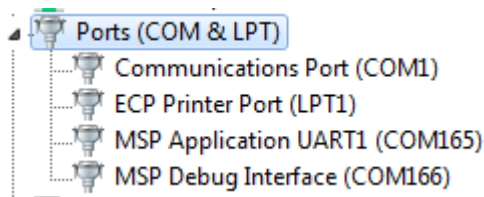


Figure 1. eZ-FET Windows Enumeration

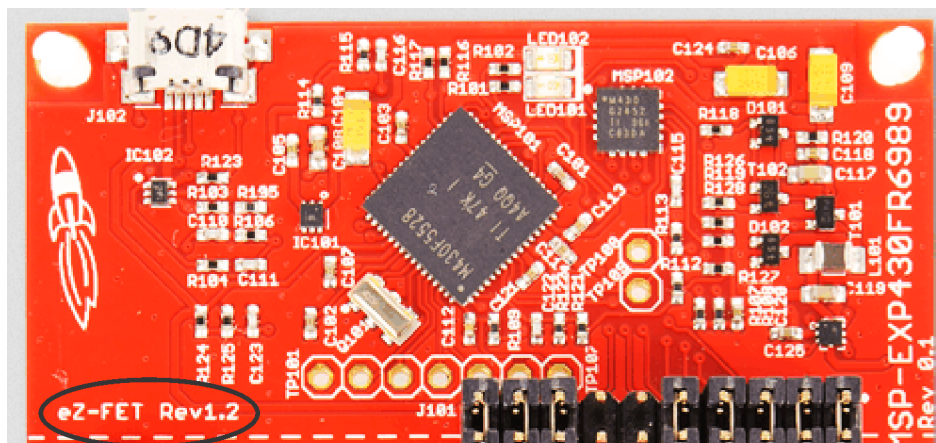


Figure 2. eZ-FET Emulation IP

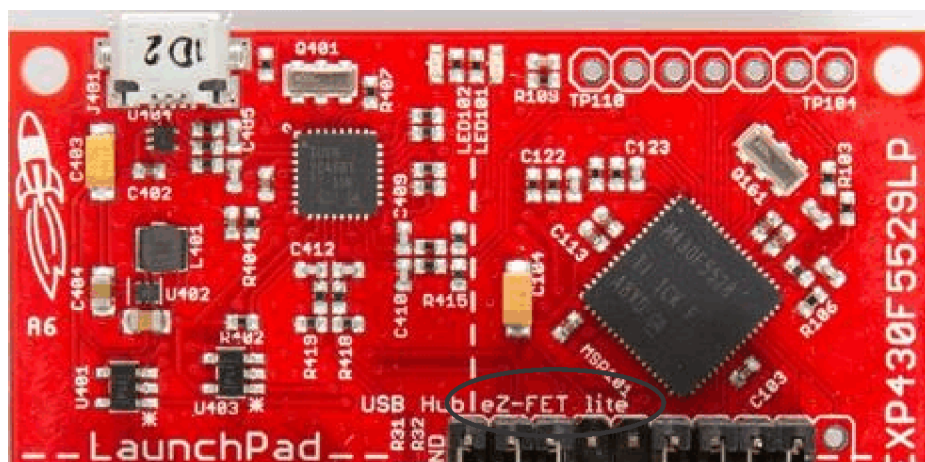


Figure 3. eZ-FET Lite Emulation IP

3.2 How to Determine If Your Hardware is Based on eZ430

- Check the installed tool drivers by using the Windows Device Manager (see [Figure 5](#)). eZ430 tools enumerate as HID (Debugger port) and CDC (Backchannel UART) devices.
- Check the Experimenter Board to find out if it is based on an eZ430 tool (see [Figure 4](#)). If it is based on an MSP430F1612 and a TUSB3410, it is an eZ430 tool.



Figure 4. eZ430 Emulation IP

USB Composite Device	✓ Ready to use
MSP430 Application UART (COM205)	✓ Ready to use
USB Input Device	✓ Ready to use

Figure 5. eZ430 Windows Enumeration

3.3 Signal Connections for In-System Programming and Debugging

For details about the hardware connections of all debug probes see the "Signal Connections for In-System Programming and Debugging" section of the [MSP430 hardware tools user's guide](#).

3.4 Using the Power Supply Feature of the eZ-FET and eZ-FET Lite

The eZ-FET and the eZ-FET Lite only support a fixed voltage power supply. The maximum supply current is 75 mA. For more details, see the specific LaunchPad or experimenter board user's guide.

NOTE: These debug probes do not support externally powering of the device while debugging – if an external voltage is needed for stand-alone testing, the eZ-FET emulation section should not be connected through USB. If both external power and the USB power are connected, there could be a conflict that can damage the device.

3.5 Using the Power Supply Feature of the MSP-FET430UIF and MSP-FET

All MSP debug probes can supply targets with up to 100 mA through pin 2 of the 14-pin JTAG connector.

NOTE: The target should not consume more than 60 mA at peak current, as it may violate the USB specification. Details can found on www.usb.org.

Example: If the target board has a capacitor on the V_{CC} line with a capacity of more than 10 μF , it may cause an inrush current during capacitor charging that may exceed 60 mA. In this case, the current should be limited by the design of the target board, or an external power supply should be used.

Target V_{CC} is selectable in a range between 1.8 V and 3.6 V in steps of 0.1 V.

Alternatively, the target can be supplied externally. In this case, the external voltage should be connected to pin 4 of the 14-pin JTAG connector. MSP-FET tools adjust the level of the JTAG signals to automatically match the external V_{CC} .

NOTE: Only pin 2 (MSP-FET tool supplies target) or pin 4 (target is externally supplied) must be connected. Both connections are not supported at the same time.

Even if an external supply powers the target device on the target socket module and any user circuitry connected to the target socket module, the MSP-FET tool continues to be powered from the PC through the USB interface.

NOTE: MSP-FET430PIF only

The PC parallel ports with a connected MSP-FET430PIF can source a maximum current of 25 mA. Because of the ultra-low-power requirement of the MSP430, a stand-alone MSP430 does not exceed the provided current. However, if additional circuits are added, the current limit could be exceeded. In this case, the MSP430 must be supplied externally.

4 Hardware Installation

This section describes how to install the drivers for all MSP debug probes. The drivers are needed to enable the IDE (integrated development environment) to use the debug probe that is connected to the system. There are four different ways to install the drivers.

1. CCS desktop: During the CCS setup, all MSP debug probe drivers are installed for all supported operation systems.
2. CCS cloud: The automatic driver installer is included in the TI Cloud Agent application, which must be downloaded when connecting a local MSP debug probe to CCS cloud.
3. Stand-alone driver installer: The stand-alone driver installer is available only for Windows. It installs all MSP debug probe drivers.
4. Using another supported IDE such as IAR EW430 or the MSP-Flasher: During the setup, all MSP debug probe drivers are installed.

4.1 MSP-FET430PIF

The MSP-FET430PIF has the following system requirements:

It supports only Windows XP with IAR EW430 version 5.xx.x and Code Composer Studio version 5.x.x. No new development is scheduled to support MSP-FET430PIF.

Follow these steps to install the hardware for the MSP-FET430PIF tool:

1. Use the 25-pin ribbon cable to connect the debugger interface module to the parallel port of the PC. The necessary driver for accessing the PC parallel port is installed automatically during CCS or IAR Embedded Workbench installation. Note that a restart is required after the CCS or IAR Embedded Workbench installation.
2. Use the 14-pin ribbon cable to connect the parallel-port debug interface to a target board which contains the target MSP430 device.

4.2 MSP-FET430UIF, MSP-FET, eZ-FET, and eZ-FET Lite

NOTE: The built-in DC-DC converter of the MSP-FET and eZ-FET emulators causes a load-dependent amount of ripple on the output voltage ($f_{\text{ripple}} = 1 \text{ kHz to } 50 \text{ kHz}$, $V_{\text{rms_ripple}} = 5 \text{ mV to } 50 \text{ mV}$), which might affect sensitive analog and RF circuits that are supplied by the emulator. For such sensitive circuits, TI recommends temporarily increasing the amount of power supply decoupling used during development, using an emulator with an integrated linear regulator (MSP-FET430UIF or eZ-FET430), or using a separate bench supply.

Installation steps for the MSP-FET430UIF, MSP-FET, eZ-FET or eZ-FET Lite:

1. Install the IDE (TI CCS or IAR EW430) before connecting the debug probe to the PC. During IDE installation, the USB drivers for the debug probes are installed automatically. Make sure to use the latest IDE version; older versions might install USB drivers that do not recognize the connected debug probe.
2. Connect the debug probe to a USB port on the PC using the provided USB cable.
3. The following procedure applies to operation under Windows:
 1. After connecting to the PC, the debug probe should be recognized automatically, as the USB device driver has been already installed together with the IDE.
 2. However, if the driver is not automatically detected, the "Found New Hardware wizard" starts. Follow the instructions and point the wizard to the driver files.
 The default location for CCS is: `c:\ti\ccsv6\ccs_base\emulation\drivers\msp430\USB_CDC`.
 The default location for IAR Embedded Workbench is: `<Installation Root>\Embedded Workbench x.x\430\drivers\<Win_OS>`.
4. The following procedure applies to operation under Linux:
 - Installation as root
 1. If installing TI CCS as root, make sure that the debug probe is not connected to the computer during installation.
 2. If you start installation with the debug probe connected to the computer, disconnect the probe and reconnect after installation finishes.
 - Installation as user
 1. If installing TI CCS without root access, install the debug probe UDEV rules manually after the CCS TI installation has finished.
 2. Make sure that the debug probe is disconnected from the computer during this step.
 3. Open the shell and go to: `<CSS installation directory>/ccsv7/install_scripts.sh`
 4. Execute `msp430uif_install.sh` as `sudo`.
 5. Connect the debug probe and make sure that the debug probe is detected as other than "modem". Use the `dmseg` command to check the system log.
 6. The debug probe is ready for use.
5. After connecting the debug probe to a PC, the probe performs a self-test. If the self-test passes, the green LED stays on. For a complete list of LED signals, see the *LED Signals* section of each debug probe in [Section 5.6](#) through [Section 5.8](#).
6. Connect the debug probe with the target board using the 14-pin ribbon cable.
7. When using a target socket board, make sure that the MSP430 device is properly inserted in the socket and that pin 1 of the device (indicated with a circular indentation on the top surface) aligns with the "1" mark on the PCB.

NOTE: To use the debug probe without an IDE, install the stand-alone driver package. The stand-alone driver installer can be found at www.ti.com/mspds under the heading MSPDS-USB-DRIVERS.

4.3 eZ430-Based Experimenter Boards and LaunchPad Kits

For driver installation on a Windows operating system, follow the steps in [Section 4.2](#).

NOTE: eZ430-tools are not supported on USB3.0 ports. eZ430 tools are supported on Windows operating systems only—Linux and OS X are not supported.

4.4 Hardware Installation Using the MSP Flasher

MSP Flasher is an open-source shell-based interface for programming any MSP430 device through an [MSP debug stack](#) and provides the most common functions on the command line. MSP Flasher can be used to download binary files (.txt or .hex) directly to the MSP430 memory without the need for an IDE like CCS or IAR. It can also be used to extract firmware directly from a device, set hardware breakpoints, and lock JTAG access permanently.

MSP Flasher supports the following operating systems:

- Windows 10 32-bit or 64-bit
- Windows 8 32-bit or 64-bit
- Windows 7 32-bit or 64-bit
- Windows XP 32-bit or 64-bit
- Ubuntu™ 32-bit or 64-bit
- OS X 64-bit

Installation steps for the MSP-FET430UIF, MSP-FET, eZ-FET or eZ-FET Lite:

1. After successfully downloading and executing the MSP Flasher installer, it prompts you to execute the [stand-alone driver installer](#) for the MSP debug probes.

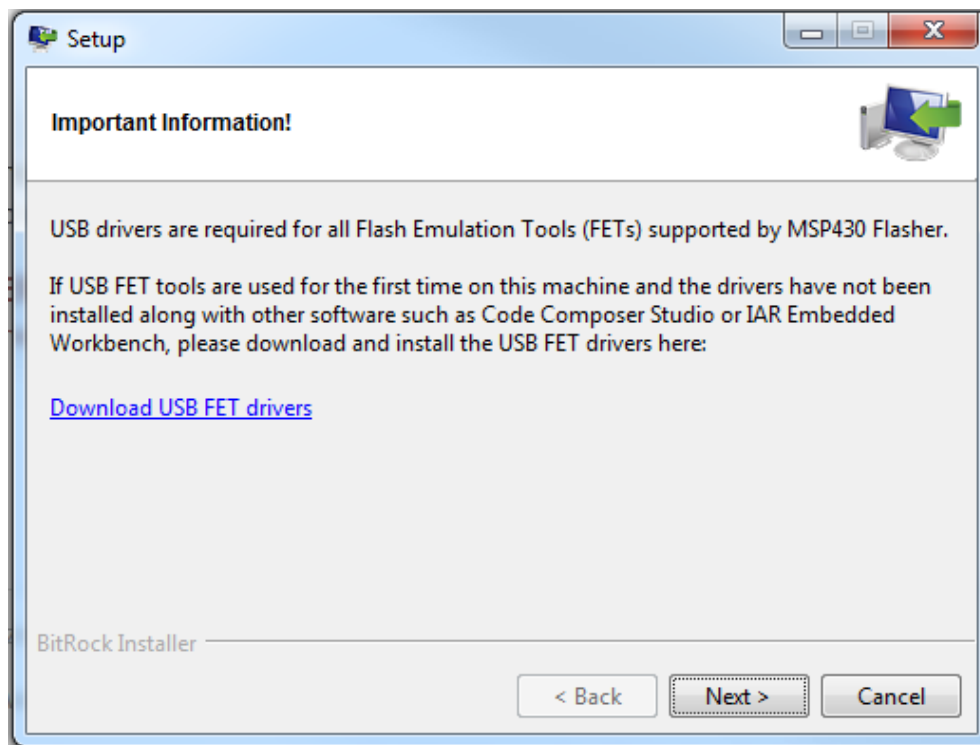


Figure 6. MSP Flasher Driver Install Notification

2. Follow the steps given by the stand-alone driver installer for debug probe driver installation.
3. After successful driver installation, connect the debug probe to a USB port on the PC using the provided USB cable.
4. After connecting the debug probe to a PC, it performs a self-test. If the self-test passes, the green LED stays on. For a complete list of LED signals, see the *LED Signals* section of every debug probe in [Section 5.6](#) through [Section 5.8](#).
5. Connect the debug probe with the target board using the 14-pin ribbon cable.
6. When using a target socket board, make sure that the MSP430 device is properly inserted in the socket and that its pin 1 (indicated with a circular indentation on the top surface) aligns with the "1" mark on the PCB.

4.5 Hardware Installation Using CCS Cloud

CCS Cloud is web-based IDE that allows you to create, edit, and build CCS and Energia projects. After a project is successfully built, it can be downloaded and run on the connected LaunchPad or any other debug probe. Basic debugging features, like setting breakpoints or viewing values of target variables are now supported.

CCS Cloud can be used with the local debug probe connected to the PC through USB. To support this configuration, install the "CCS Cloud browser extension", and download and install the "TI Cloud Agent Application". For more details, see the CCS cloud documentation at processors.wiki.ti.com/index.php/TI_Cloud_Agent.

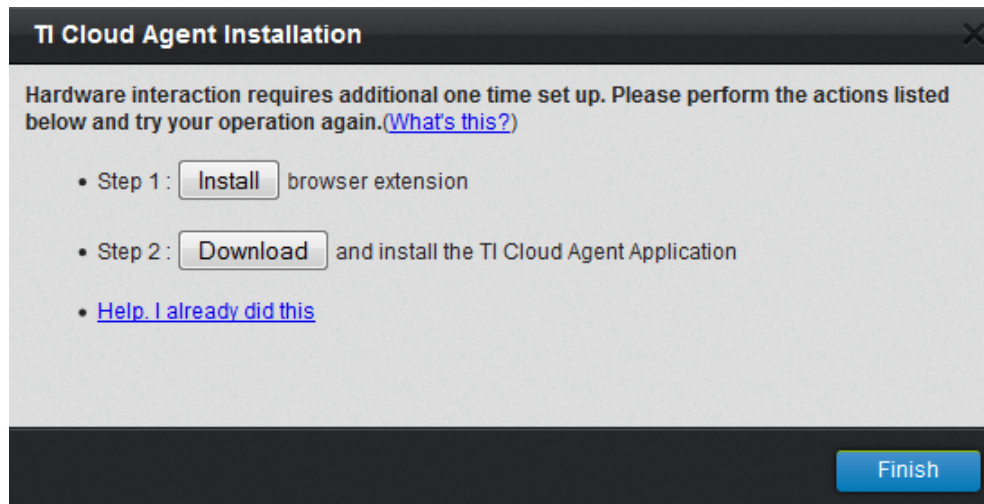


Figure 7. CCS Cloud Agent Installation

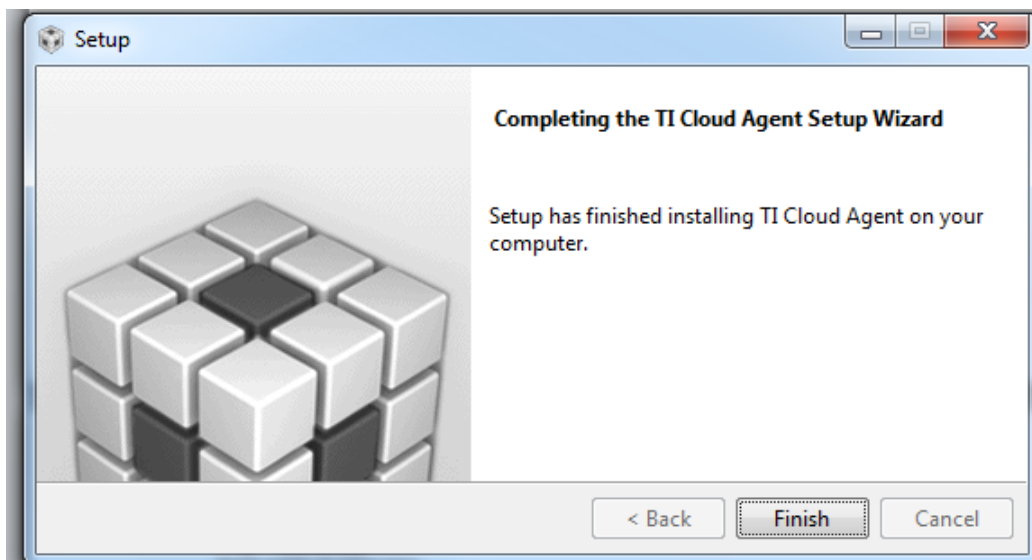


Figure 8. Successful CCS Cloud Agent Installation

After the successful Agent installation, download the application by clicking the Flash or Debug button in CCS Cloud.

5 Debug Probes Hardware and Software

This section includes all specifications and features of all MSP debug probes. The debug probe hardware and different debug mode configuration and setting are described.

Figure 9 is an overview of the MSP ecosystem showing the relations between IDE and debug probe and the MSP device itself.

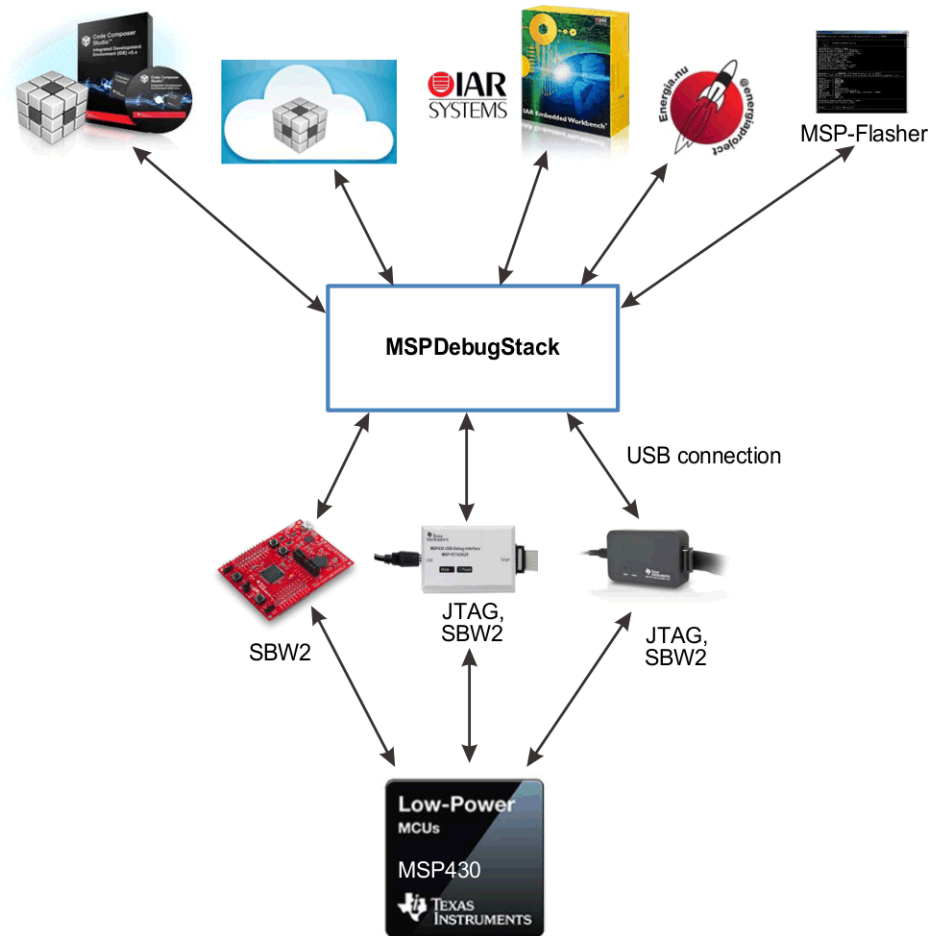


Figure 9. MSP Ecosystem

5.1 **MSPDebugStack**

The [MSPDebugStack](#) is the host side interface to all MSP debug probes. It is a library for controlling and debugging Texas Instruments MSP ultra-low power microcontrollers during software development phase.

For this purpose the MSP microcontroller is controlled by the MSPDebugStack using the MSP device's JTAG interface. The MSPDebugStack provides device control (for example, run and stop), memory programming and debugging functionality (for example, breakpoints).

The MSPDebugStack supports these operating systems:

- Windows 10 32-bit or 64-bit
- Windows 8 32-bit or 64-bit
- Windows 7 32-bit or 64-bit
- Ubuntu 32-bit or 64-bit
- CentOS™ 6 64-bit
- CentOS 7 64-bit
- OS X 64-bit

The debug probe firmware for all field updatable tools is included in the MSPDebugStack. It automatically detects if an update of the debug probe is required.

For more details and information see www.ti.com/mspds.

5.2 **Ultra-Low-Power (ULP) Debug Support**

ULP debug support enables users to debug in the low-power modes that are used in their application software.

If this option is enabled during an active debug session in IAR EW430 or Code Composer studio, the target MSP430 device enters the low-power modes. Wake-up times can be measured on F5xx, F6xx, FR5xx, and FR6xx devices. For some MSP430 devices, special debug features are disabled in this mode; for example, setting breakpoints (hardware and software) while device is running in ULP mode.

NOTE: When debugging with EnergyTrace++ active, this mode must be used.

NOTE: Measured currents might be slightly higher than in stand-alone mode (EnergyTrace) due to the active debugger connection.

For more details and information, see the *MSP430 Ultra-Low-Power LPMx.5 Mode* section of the [IAR Embedded Workbench IDE for MSP430 user's guide](#) and [Code Composer Studio IDE for MSP430 user's guide](#).

5.3 **EnergyTrace™ Technology**

EnergyTrace technology is an energy-based code analysis tool that measures and displays the energy profile of an application, which helps to optimize it for ultra-low power consumption.

MSP devices with built-in **EnergyTrace+[CPU State]+[Peripheral States]** (or in short **EnergyTrace++**) technology allow real-time monitoring of many internal device states while user program code executes. EnergyTrace++ technology is supported on selected MSP devices and debuggers (see [Table 1](#)).

EnergyTrace mode (without the "++") is a fundamental part of **EnergyTrace technology** and enables analog energy measurement to determine the energy consumption of an application but does not correlate it to internal device information. The EnergyTrace mode is available for all MSP devices with selected debuggers, including CCS (see [Table 1](#)).

For more details about EnergyTrace technology, visit www.ti.com/tool/energytrace.

5.4 Unlimited Software Breakpoints in Flash, FRAM, and RAM

All MSP430 debug tools support the use of software breakpoints in Flash, FRAM, and RAM. Software breakpoints let the user set an unlimited number of breakpoints during an active debug session.

Without software breakpoints enabled, the number of breakpoints that can be set is limited to the number of hardware breakpoints available by the specific MSP MCU. All MSP debug tools prefer the use of hardware breakpoints as much as possible. However, if the MSP breakpoint logic runs out of hardware breakpoints, software breakpoints are used automatically (if enabled in the IDE).

NOTE: When the debug session is closed, all software breakpoints are erased and the original memory content is restored.

For more details about the software breakpoints and their IDE-specific use, see the *Breakpoint Types* section in [IAR Embedded Workbench IDE for MSP430 user's guide](#) and [Code Composer Studio IDE for MSP430 user's guide](#).

For a practical example of different breakpoint types, see [Advanced debugging using the enhanced emulation module \(EEM\) with Code Composer Studio IDE](#).

5.5 JTAG Access Protection (Fuse Blow)

Different MSP430 devices implement different methods to prevent JTAG debug access to the MSP430 target device.

NOTE: Only the MSP-FET and the MSP-FET430UIF support JTAG access protection to disable JTAG access.

For more details how the JTAG access protection mechanism is implemented see the "JTAG Access Protection" section in [MSP430 programming with the JTAG interface](#).

JTAG fuse

- Available on 1xx, 2xx, and 4xx families (except FRxx and I20xx devices)
- Applying a high voltage to test the TEST pin of the MSP430 target device blows an actual physical polyfuse and disables the JTAG interface.

JTAG lock without password (eFuse/"soft" fuse)

- Available on 5xx, 6xx, and FRxx families
- A certain lock pattern is written into the MSP430 target memory to disable the JTAG interface.

JTAG lock with password

- Available only FRxx families
- A user-defined password can disable JTAG access to the MSP430 target device.
- Using CCS, EW430, or the MSP Flasher, applying the configured password to the MSP430 target restores JTAG access

Memory protection by custom startup code (SUC)

- Available on only the i20xx family (for example, the MSP430i2040 device)
- Custom startup code can enable or disable JTAG access to the MSP430i20xx target device.

DAP (Debug Access Port) lock

- Available on MSP432P401x family – Locks JTAG/SWD connection to MSP432P401x device
- Execute a Factory Reset to unlock the Debug Access port.

5.6 MSP-FET Stand-Alone Debug Probe

The MSP-FET (see [Figure 10](#) and [Figure 11](#)) is a powerful debug probe for application development supporting all MSP430 microcontrollers.

The MSP-FET provides a USB interface to program and debug the MSP430 devices in-system through the JTAG interface or the pin-saving Spy-Bi-Wire (2-wire JTAG) protocol. Furthermore, the USB interface can be used for Backchannel UART and MSP target BSL communication. UART BSL and I²C BSL communication modes are supported.

The MSP-FET development tool supports development with all MSP430 devices and is designed for use with PCBs that contain MSP430 devices; for example, the MSP430 target socket boards.



Figure 10. MSP-FET Top View



Figure 11. MSP-FET Bottom View

5.6.1 General Features

The MSP-FET debug probe includes the following features:

- MSP-FET first generation (v1.2):
 - Has no CE sticker or label on the case, and no W at the end of the version number
 - Is supported since:
 - CCS v6.0.0
 - IAR EW430 v5.60.7 and IAR EWARM v6.10.1
- MSP-FET second generation (v2.04, v2.05, and v2.06):
 - Has a CE sticker or label on the case, or a W at the end of the version number
 - Is supported since:
 - CCS v7.0
 - IAR EW430 7.1 and IAR EWARM 8.10
- Operating systems: OS X, Linux, Windows
- Software configurable supply voltage between 1.8 V and 3.6 V at 100 mA

NOTE: The MSP-FET supply voltage is generated by an DC/DC converter, which creates a voltage ripple on the target supply line. This ripple can affect the performance of the analog modules of the MSP device (for example, the ADC and the DAC). If necessary, connect an low-ripple external power supply to the target application.

- External voltage detection
- Supports JTAG security fuse blow to disable debugging
- Supports all MSP430 boards with JTAG header
- Supports both JTAG and Spy-Bi-Wire (2-wire JTAG) debug protocols

- EnergyTrace Technology (MSP430 and MSP432 devices), EnergyTrace+ (MSP432 devices only), and EnergyTrace++ (MSP430 devices only) support
- EnergyTrace technology accuracy
 - Current < 25 μ A: Error range is typically \pm 500 nA.
 - Current \geq 25 μ A: Error range is typically \pm 2% to \pm 4%.
- Software breakpoints in flash, FRAM, and RAM
- MSPDS application backchannel UART included
- Target BSL communication mode available
- Flash and FRAM programming support
- Debug probe firmware field update is supported ⁽¹⁾
- Supports all MSP432P401x boards with Arm® 20-pin and 10-pin connectors using the [MSP432 Adapter for MSP-FET](#)
- Supports JTAG and SWD MSP432 debug protocols

NOTE: The MSP-FET does not support the MSP432E4 family of devices.

5.6.2 Backchannel UART

The MSP-FET supports the Backchannel UART functionality only when using an MSPDebugStack v3.4.1.0 or higher for the MSP-FET connection.

The baud rates that are supported depend on the target configuration and the debug settings. [Table 2](#) shows which baud rates are supported with certain configuration combinations.

✓ means that the corresponding baud rate is supported without any data loss with the specified combination of settings.

✗ means that the corresponding baud rate is not supported (data loss is expected) with the specified combination of settings.

Table 2. MSP-FET Backchannel UART Implementation

Target MCLK Frequency:	1 MHz		8 MHz		1 MHz		8 MHz	
Debugger:	Active				Inactive			
Flow Control:	No	Yes	No	Yes	No	Yes	No	Yes
4800 baud	✓	✓	✓	✓	✓	✓	✓	✓
9600 baud	✓	✓	✓	✓	✓	✓	✓	✓
19200 baud	✓	✓	✓	✓	✓	✓	✓	✓
28800 baud	✗	✓	✓	✓	✓	✓	✓	✓
38400 baud	✗	✓	✗	✓	✗	✓	✗	✓
57600 baud	✗	✓	✗	✓	✗	✓	✗	✓
115200 baud	✗	✗	✗	✓	✗	✗	✗	✓

NOTE: Due to the bandwidth being shared between the debug interface and the backchannel UART, TI recommends that you disable EnergyTrace technology when using the backchannel UART. If EnergyTrace technology is enabled, the UART communication channel can experience significant latencies.

⁽¹⁾ Enable new device support by in field firmware updates

5.6.2.1 UART Backchannel Activation Commands

The MSP-FET supports two different Backchannel UART modes, one with flow control and one without. The different modes can be selected by opening the corresponding COM port with a dedicated baud rate. See [Table 3](#) for the specific baud rates for each command.

NOTE: The baud rates used by these activation commands cannot be used for communication.

NOTE: The Backchannel UART is disabled until the COM port is opened with a valid baud rate.

If none of the specified commands are transferred before setting the communication baud rate, communication starts with the default settings: 3.3-V target V_{CC} , no flow control mechanism, no parity.

Table 3. MSP-FET Backchannel UART Activation Commands

Baud Rate	Command
9620	Set all backchannel UART pins to high impedance – no current flow into target device
9621	Configure backchannel UART communication without handshake (default start behavior)
9622	Configure backchannel UART communication with handshake
9623	Voltage configuration command. When this command is received, target V_{CC} is set to 3.3 V. After target V_{CC} is configured, it is switched through to the target device.
9625	Configure backchannel UART communication without handshake and even parity (available starting with MSPDebugStack version 3.8.0.2)

5.6.3 Target BSL Connection and BSL-Scripter Support

The MSP-FET can be used for communication with the target device bootloader (BSL) through the I²C and UART protocols. The activation of the different protocols is equivalent to the MSP-FET backchannel UART. See [Table 4](#) for command details.

The [BSL-Scripter software](#) implements support for these activation commands and performs the correct sequence according to the communication interface (UART, I²C) that is specified in the script.

In MSP-FET BSL communication mode, flow control is not available, because this is not supported by the MSP target device BSL.

UART BSL: The MSP-FET BSL UART mode supports the following baud rates: 9600, 14400, 19200, 28800, 38400, 56000, 57600, and 115200. For the BSL UART, 8 + 1 + even parity is used.

I²C BSL: The MSP-FET is always the I²C master, and the target device BSL is always the I²C slave. 7-bit I²C addressing mode is used with a fixed I²C slave address of 0x48.

NOTE: If the MSP-FET is configured to support BSL communication, debugger functionality is disabled. To switch to debugger mode, either perform a power cycle (unplug the USB cable) or configure the baud rate to 8001. The BSL mode is disabled until sending a BSL entry baud rate command.

NOTE: MSP-FET BSL I²C pullup resistors must not exceed 2-k Ω resistance.

The maximum I²C clock rate is 55 kHz.

Table 4. MSP-FET MSP Target BSL Activation Commands

Baud Rate	Command
9620	Set all UART or I ² C pins to high impedance – no current flow into target device
9601	BSL entry sequence and power up 3.3 V (UART BSL) – debugger is disabled
100000 or 100001	BSL entry sequence and power up 3.3 V (I ² C BSL) – debugger is disabled
400000 or 400001	BSL entry sequence and power up 3.3 V (I ² C BSL) – debugger is disabled
9623	Power up 3.3 V
8001	Activate debugger
100002 or 400002	Configure communication and power up 3.3 V (MSP432 I ² C BSL) – debugger is disabled, no BSL entry sequence
9602	Configure communication and power up 3.3 V (MSP432 UART BSL) – debugger is disabled, no BSL entry sequence

NOTE: The MSP-FET I²C interface is a software I²C implementation, which always runs with a speed of approximately 55 kHz. The four different speed configurations are supported for compatibility purposes with BSL-Scripter and the BSL-Rocket.

5.6.4 LED Signals





















The MSP-FET shows its operating states using two LEDs, one green and one red. Table 5 lists all available operation modes. An  or  icon indicates that the LED is off, an  or  icon indicates that the LED is on, and an  or  icon indicates that the LED flashes.

Table 5. MSP-FET LED Signals

Power LED	Mode LED	Function
		MSP-FET not connected to PC or MSP-FET not ready; for example, after a major firmware update. Connect or reconnect MSP-FET to PC.
		MSP-FET connected and ready
		MSP-FET waiting for data transfer
		Ongoing data transfer – during active debug session
		An error has occurred; for example, target V _{CC} over current. Unplug MSP-FET from target, and cycle the power off and on. Check target connection, and reconnect MSP-FET.
		Firmware update in progress. Do not disconnect MSP-FET while both LEDs are blinking slowly.
		FPGA update in progress. Do not disconnect MSP-FET while both LEDs are blinking rapidly.

5.6.5 Hardware

This section includes MSP-FET hardware descriptions like the JTAG connector, schematics, and power-up states of the MSP-FET JTAG pins.

5.6.5.1 JTAG Target Connector

Figure 12 shows the pinout of the MSP-FET JTAG connector.

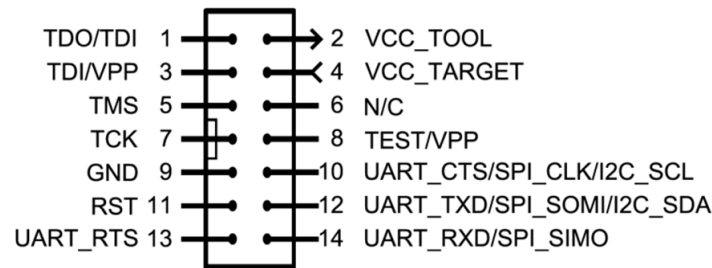


Figure 12. MSP-FET 14-Pin JTAG Connector

5.6.5.2 MSP-FET Pin States After Power Up

Table 6 describes the electrical state of every JTAG pin after debug probe power up.

Table 6. MSP-FET Pin States

Pin	Name	After Power up	When JTAG Protocol is Active	When Spy-Bi-Wire Protocol is Active
1	TDO/TDI	Hi-Z, pulled up to 3.3 V	In, TDO	In and Out, SBWTDIO (RST pin)
2	VCC_TOOL	3.3 V	Target V _{CC}	Target V _{CC}
3	TDI/VPP	Hi-Z, pulled up to 3.3 V	Out, TDI	Hi-Z, pulled up to V _{CC}
4	VCC_TARGET	In, external V _{CC} sense	In, external V _{CC} sense	In, external V _{CC} sense
5	TMS	Hi-Z, pulled up to 3.3 V	Out, TMS	Hi-Z, pulled up to V _{CC}
6	N/C	N/C	N/C	N/C
7	TCK	Hi-Z, pulled up to 3.3 V	Out, TCK	Out, SBWTCK
8	TEST/VPP	Out, Ground	Out, TEST	Hi-Z, pulled up to V _{CC}
9	GND	Ground	Ground	Ground
10	UART_CTS/SPI_CLK/I2C_SCL	Hi-Z, pulled up to 3.3 V	Out, Target UART Clear-To-Send Handshake input	Out, Target UART Clear-To-Send Handshake input
11	RST	Out, V _{CC}	Out, RST	Ground
12	UART_TXD/SPI_SOMI/I2C_SDA	Hi-Z, pulled up to 3.3 V	In, Target UART TXD output	In, Target UART TXD output
13	UART_RTS	Hi-Z, pulled up to 3.3 V	In, Target UART Ready-to-Send Handshake output	In, Target UART Ready-to-Send Handshake output
14	UART_RXD/SPI_SIMO	Hi-Z, pulled up to 3.3 V	Out, Target UART RXD input	Out, Target UART RXD input

NOTE: To enable the UART, I²C, or SPI pins, the correct invalid baud rate activation command must be sent (see Table 3 and Table 4). After this, the pins switch to the states in Table 6.

NOTE: MSP430BSL-SPI support is currently not available using the MSP-FET. The pin names used in Table 6 are the same as the names that are printed on the back of the MSP-FET.

5.6.5.3 MSP-FET HID Cold Boot

If the MSP-FET does not respond to software commands or firmware updates, a cold boot is the last option to bring it back to operation. A cold boot is performed by connecting VBUS to the PUR signal of the MSP-FET host device (MSP430F6638) with a serial resistor.

To execute this procedure, the MSP-FET cover must be opened by unscrewing the four screws on its back (see [Figure 13](#)). Make sure that the USB cable is disconnected from the computer.



Figure 13. Open MSP-FET Cover

Next connect a cable or jumper to J5 (see [Figure 14](#)).



Figure 14. Jumper J5

Plug in the USB cable while the jumper is on J5. After boot, remove the jumper from J5. The MSP-FET is recognized by the device manager of the OS as an HID-compliant device. The green LED should be on.

Start the IDE while the MSP-FET is in recovery (HID) mode. When prompted (see [Figure 15](#)), confirm the request to recover the firmware and all following firmware update requests.

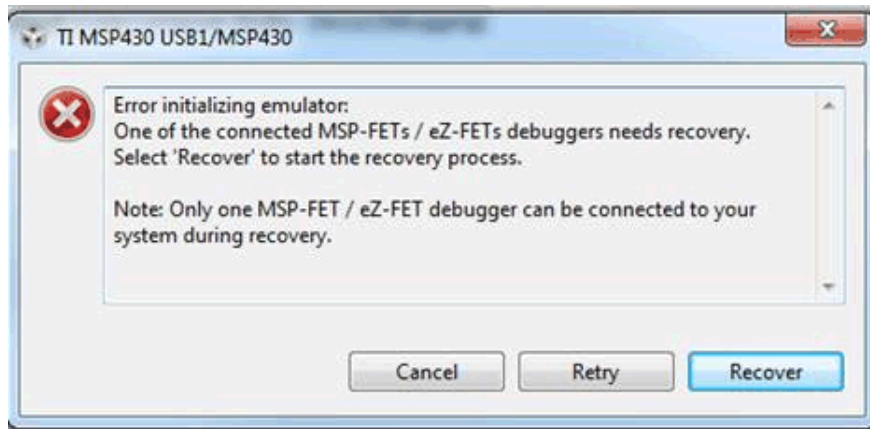


Figure 15. Recovery Confirmation

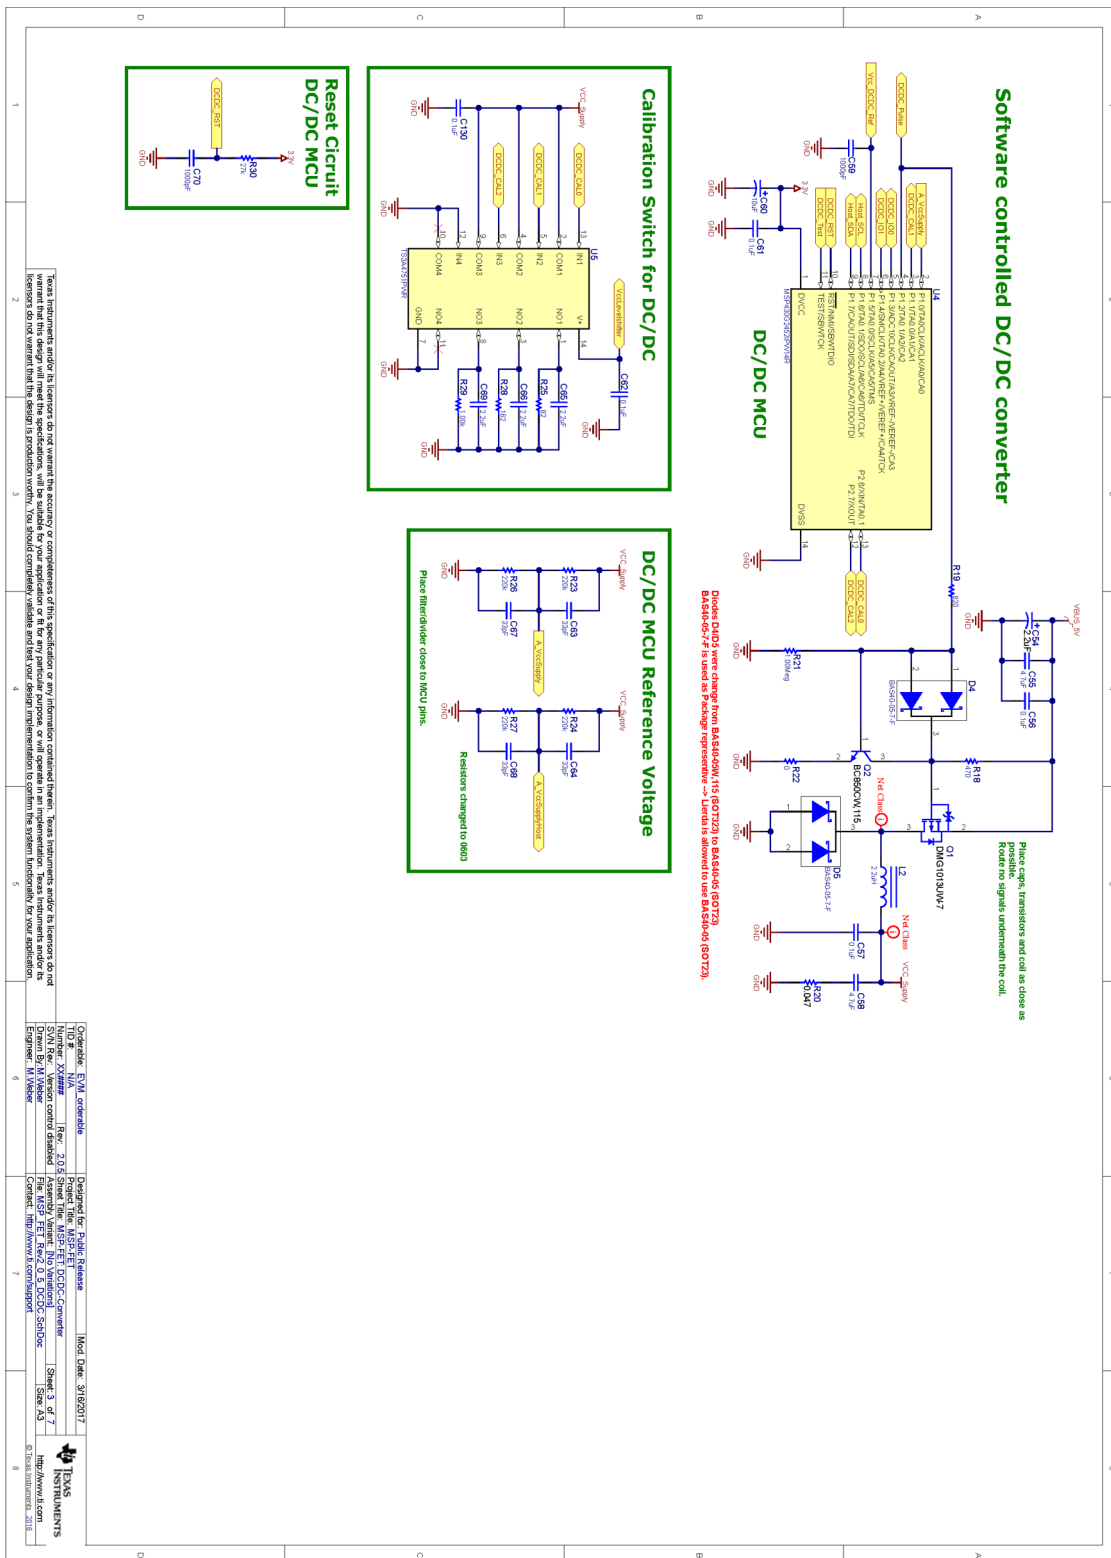


Figure 18. MSP-FET USB Debugger, Schematic (3 of 6)

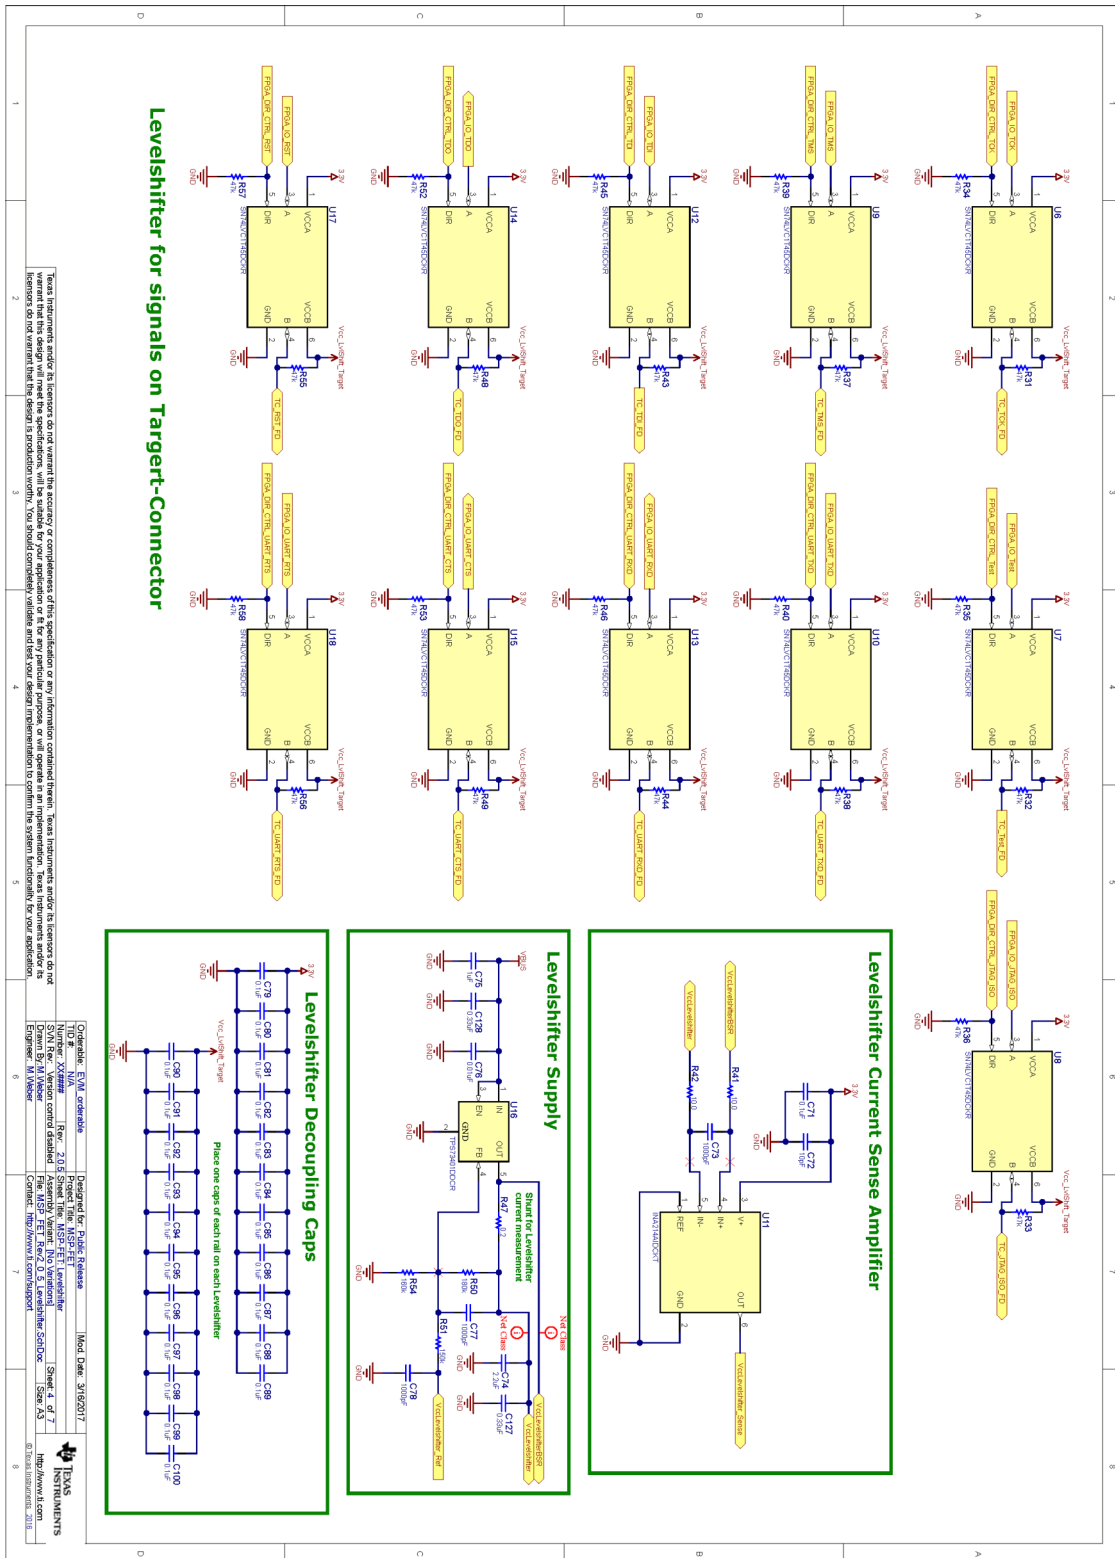


Figure 19. MSP-FET USB Debugger, Schematic (4 of 6)

5.6.6 Specifications

This section includes the MSP-FET specifications.

5.6.6.1 Hardware

Table 7 lists the mechanical and interface specifications for the MSP-FET.

Table 7. Mechanical and Interface Specifications

Mechanical		
Size (without cables)	80 mm x 50 mm x 20 mm	
Interfaces		
USB interface	USB 2.0, full speed	
Target interface	JTAG 14-pin	See Figure 12 for pinout
JTAG cable length	20 cm (max)	

5.6.6.2 MSP430 MCUs

Table 8 lists the specifications for the MSP-FET interface to MSP430 microcontrollers.

Table 8. JTAG and Spy-Bi-Wire Interface Specifications

JTAG and Spy-Bi-Wire Interface, Electrical		
Power supply	USB powered, 200 mA (max)	
Target output voltage VCC_TOOL	1.8 V to 3.6 V	Selectable in 0.1-V steps. VCC_TOOL available from JTAG pin 2.
Target output current	100 mA (max)	Current supplied through JTAG pin 2
Target output overcurrent detection level	160 mA (max)	
JTAG signal overcurrent detection level	30 mA (max)	Total current supplied through JTAG pins 1, 3, 5, 7, 8, 10, 11, 12, 13, 14
External target supply	Supported (1.8 V to 3.6 V)	Connect external target voltage VCC_TARGET to JTAG pin 4. JTAG and SBW signals are regulated to external target voltage ± 100 mV.
Fuse blow	Supported	For devices with poly-fuse
JTAG and Spy-Bi-Wire Interface, Timing		
JTAG clock speed	8 MHz (max)	Protocol speed selectable by software
SBW clock speed	8 MHz (max)	Protocol speed selectable by software. System limitations due to external RC components on reset pin might apply.
JTAG and Spy-Bi-Wire Interface, Speed		
Flash write speed (JTAG)	Up to 20 kB/s	
Flash write speed (SWB)	Up to 7 kB/s	
FRAM write speed (JTAG)	Up to 50 kB/s	
FRAM write speed (SWB)	Up to 14 kB/s	

5.6.6.3 SimpleLink MSP432 MCUs

Table 9 lists the specifications for the MSP-FET interface to MSP432 microcontrollers.

Table 9. JTAG and SWD Interface Specifications

JTAG and SWD Interface, Electrical		
Power supply	USB powered, 200 mA (max)	
Target output voltage VCC_TOOL	1.8 V to 3.6 V	Selectable in 0.1-V steps. VCC_TOOL available from JTAG pin 2.
Target output current	100 mA (max)	Current supplied through JTAG pin 2
Target output overcurrent detection level	160 mA (max)	
JTAG signal overcurrent detection level	30 mA (max)	Total current supplied through JTAG pins 1, 3, 5, 7, 8, 10, 11, 12, 13, 14
External target supply	Supported (1.8 V to 3.6 V)	Connect external target voltage VCC_TARGET to JTAG pin 4. JTAG and SBW signals are regulated to external target voltage ± 100 mV.
JTAG and SWD Interface, Timing		
JTAG clock speed	10 MHz (max)	Protocol speed selectable by software
SWD clock speed	3 MHz (max)	Protocol speed selectable by software. System limitations due to external RC components on reset pin might apply.
JTAG and SWD Interface, Speed		
Flash write speed (JTAG)	Up to 70 kB/s	
Flash write speed (SWD)	Up to 22 kB/s	

5.7 MSP-FET430UIF Stand-Alone Debugger

The MSP-FET430UIF is a powerful debug probe for application development on MSP430 microcontrollers. This is a legacy debugger being replaced by MSP-FET.

The MSP-FET430UIF provides a USB interface to program and debug the MSP430 devices in-system through the JTAG interface or the pin-saving Spy-Bi-Wire (2-wire JTAG) protocol.

The MSP-FET430UIF development tool supports development with all MSP430 devices and is designed for use with PCBs that contain MSP430 devices; for example, the MSP430 target socket boards.

Two different version of the MSP-FET430UIF are available, version 1.3 and version 1.4a. There are limitations when using version 1.3. See [Section 5.7.1](#) for more details.



Figure 22. MSP-FET430UIF Version 1.4a Top and Bottom Views



Figure 23. MSP-FET430UIF Version 1.3 Top and Bottom Views

5.7.1 General Features

The following features are provided by the MSP-FET430UIF debug probe.

Features:

- Operating systems: OS X, Linux, Windows

NOTE: OS X El Capitan is not supported using the MSP-FET430UIF.

- Software configurable supply voltage between 1.8 V and 3.6 V at 100 mA
- External voltage detection
- Supports JTAG security fuse blow to protect code
- Supports all MSP430 boards with JTAG header
- Supports both JTAG and Spy-Bi-Wire (2-wire JTAG) debug protocols
- Software breakpoints in flash, FRAM, and RAM support
- Flash and FRAM programming support
- Software field update is possible (enable new device support by in field firmware updates)

NOTE: The MSP-FET430UIF version 1.3 does not support Spy-Bi-Wire connection for MSP430 devices with 1- μ F capacitance on the reset line.

5.7.2 LED Signals



















The MSP-FET430UIF shows its operating states using two LEDs, one green and one red. Table 10 lists all available operation modes. An  or  icon indicates that the LED is off, an  or  icon indicates that the LED is on, and an  or  icon indicates that the LED flashes.

Table 10. MSP-FET430UIF LED Signals

Power LED	Mode LED	Function
		MSP-FET430UIF not connected to PC, or MSP-FET430UIF not ready; for example, after a major firmware update. Connect or reconnect MSP-FET430UIF to PC.
		MSP-FET430UIF connected and ready
		MSP-FET430UIF waiting for data transfer
		Ongoing data transfer – during active debug session
		An error has occurred; for example, target V_{CC} over current. Unplug MSP-FET430UIF from target, and cycle the power off and on. Check target connection, and reconnect MSP-FET430UIF.
		Firmware update in progress. Do not disconnect MSP-FET430UIF while both LEDs are blinking.

5.7.3 Hardware

This section includes MSP-FET430UIF hardware descriptions like the JTAG connector, schematic, and power up states of the JTAG pins.

5.7.3.1 JTAG Target Connector

Figure 24 shows the pinout of the MSP-FET430UIF JTAG connector.

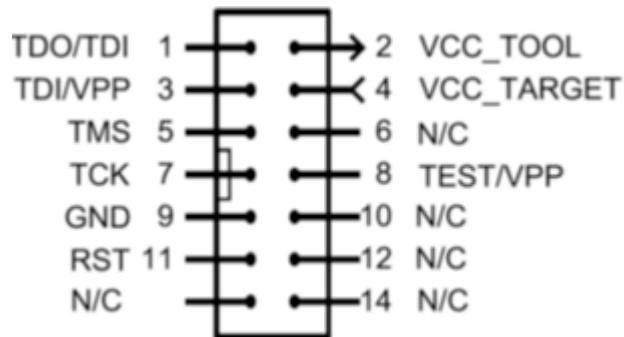


Figure 24. MSP-FET430UIF 14-Pin JTAG Connector

5.7.3.2 Pin States After Power Up

Table 11 describes the electrical state of every JTAG pin after debug probe power up.

Table 11. MSP-FET430UIF Pin States

Pin	Name	After Power-Up	When JTAG Protocol is Active	When Spy-Bi-Wire Protocol is Active
1	TDO/TDI	Hi-Z, pulled up to 3.3 V	In, TDO	In and Out, SBWTDIO
2	VCC_TOOL	3.3 V	Target V _{CC}	Target V _{CC}
3	TDI/VPP	Hi-Z, pulled up to 3.3 V	Out, TDI	Hi-Z, pulled up to V _{CC}
4	VCC_TARGET	In, external V _{CC} sense	In, external V _{CC} sense	In, external V _{CC} sense
5	TMS	Hi-Z, pulled up to 3.3 V	Out, TMS	Hi-Z, pulled up to V _{CC}
6	N/C	N/C	N/C	N/C
7	TCK	Hi-Z, pulled up to 3.3 V	Out, TCK	Out, SBWTCK
8	TEST/VPP	Out, Ground	Out, TEST	Hi-Z, pulled up to V _{CC}
9	GND	Ground	Ground	Ground
10	N/C	N/C	N/C	N/C
11	RST	Out, V _{CC}	Out, RST	Ground
12	N/C	N/C	N/C	N/C
13	N/C	N/C	N/C	N/C
14	N/C	N/C	N/C	N/C

5.7.3.3 Schematics

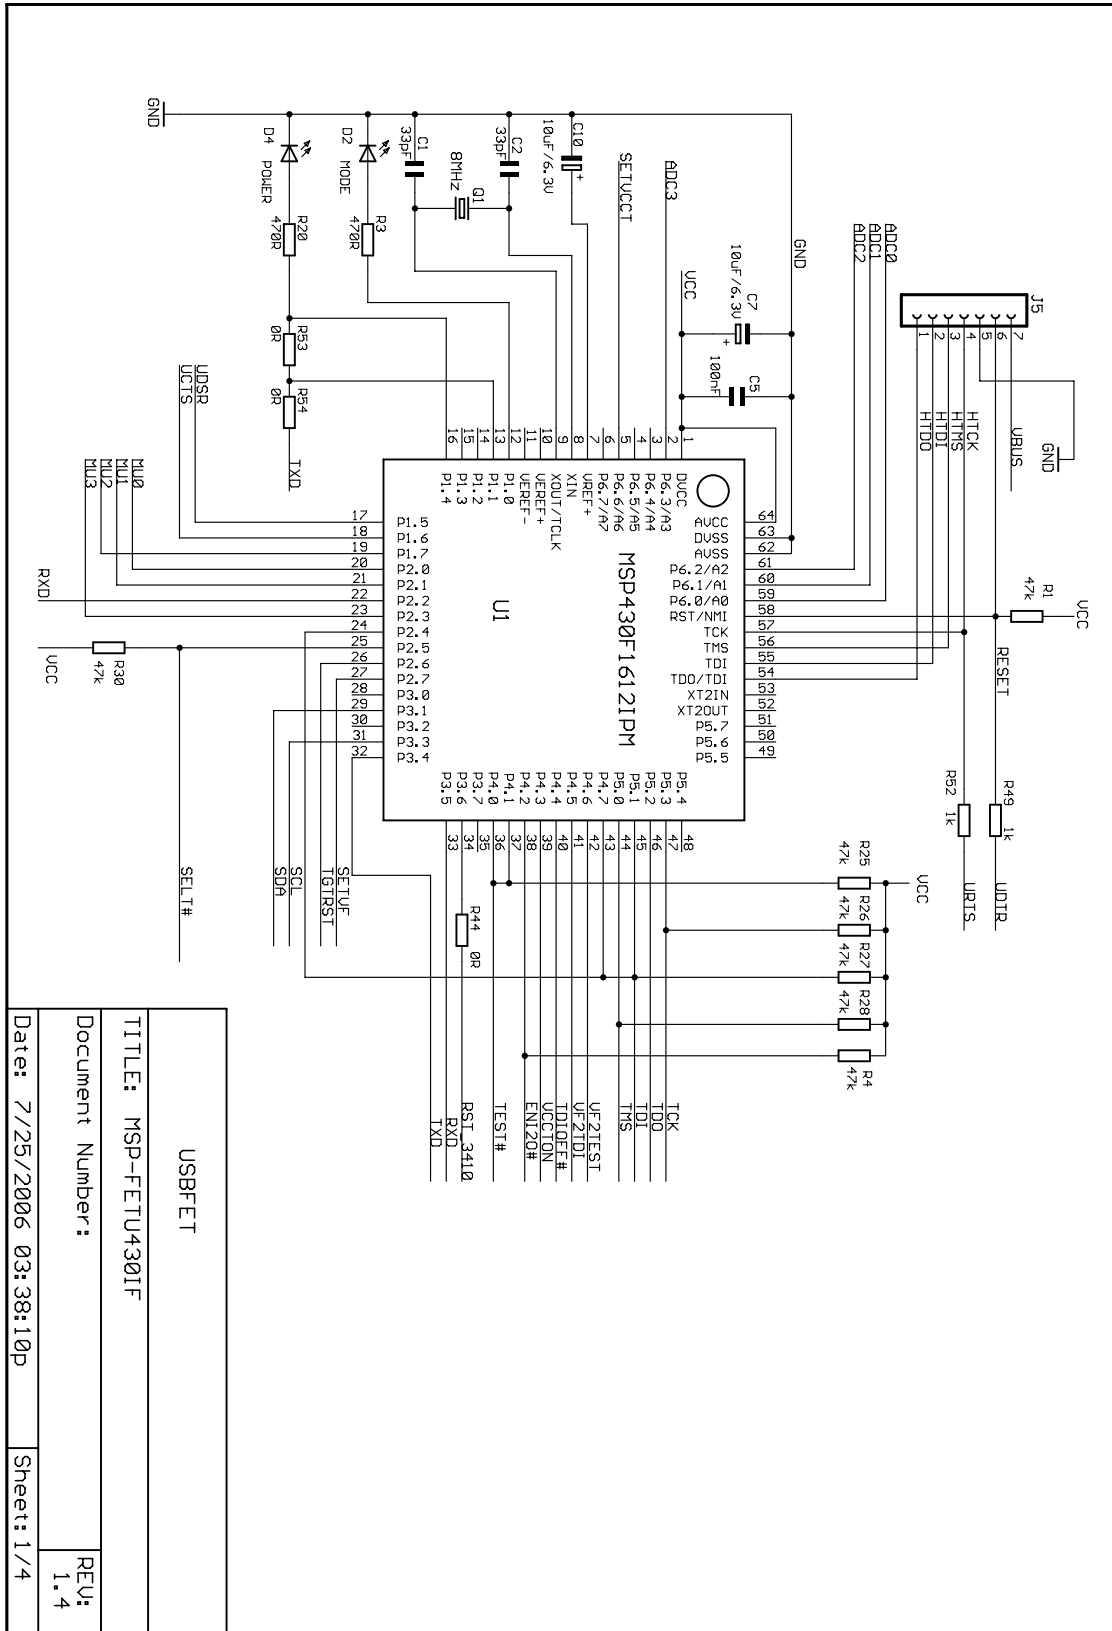


Figure 25. MSP-FET430UIF USB Interface, Schematic (1 of 4)

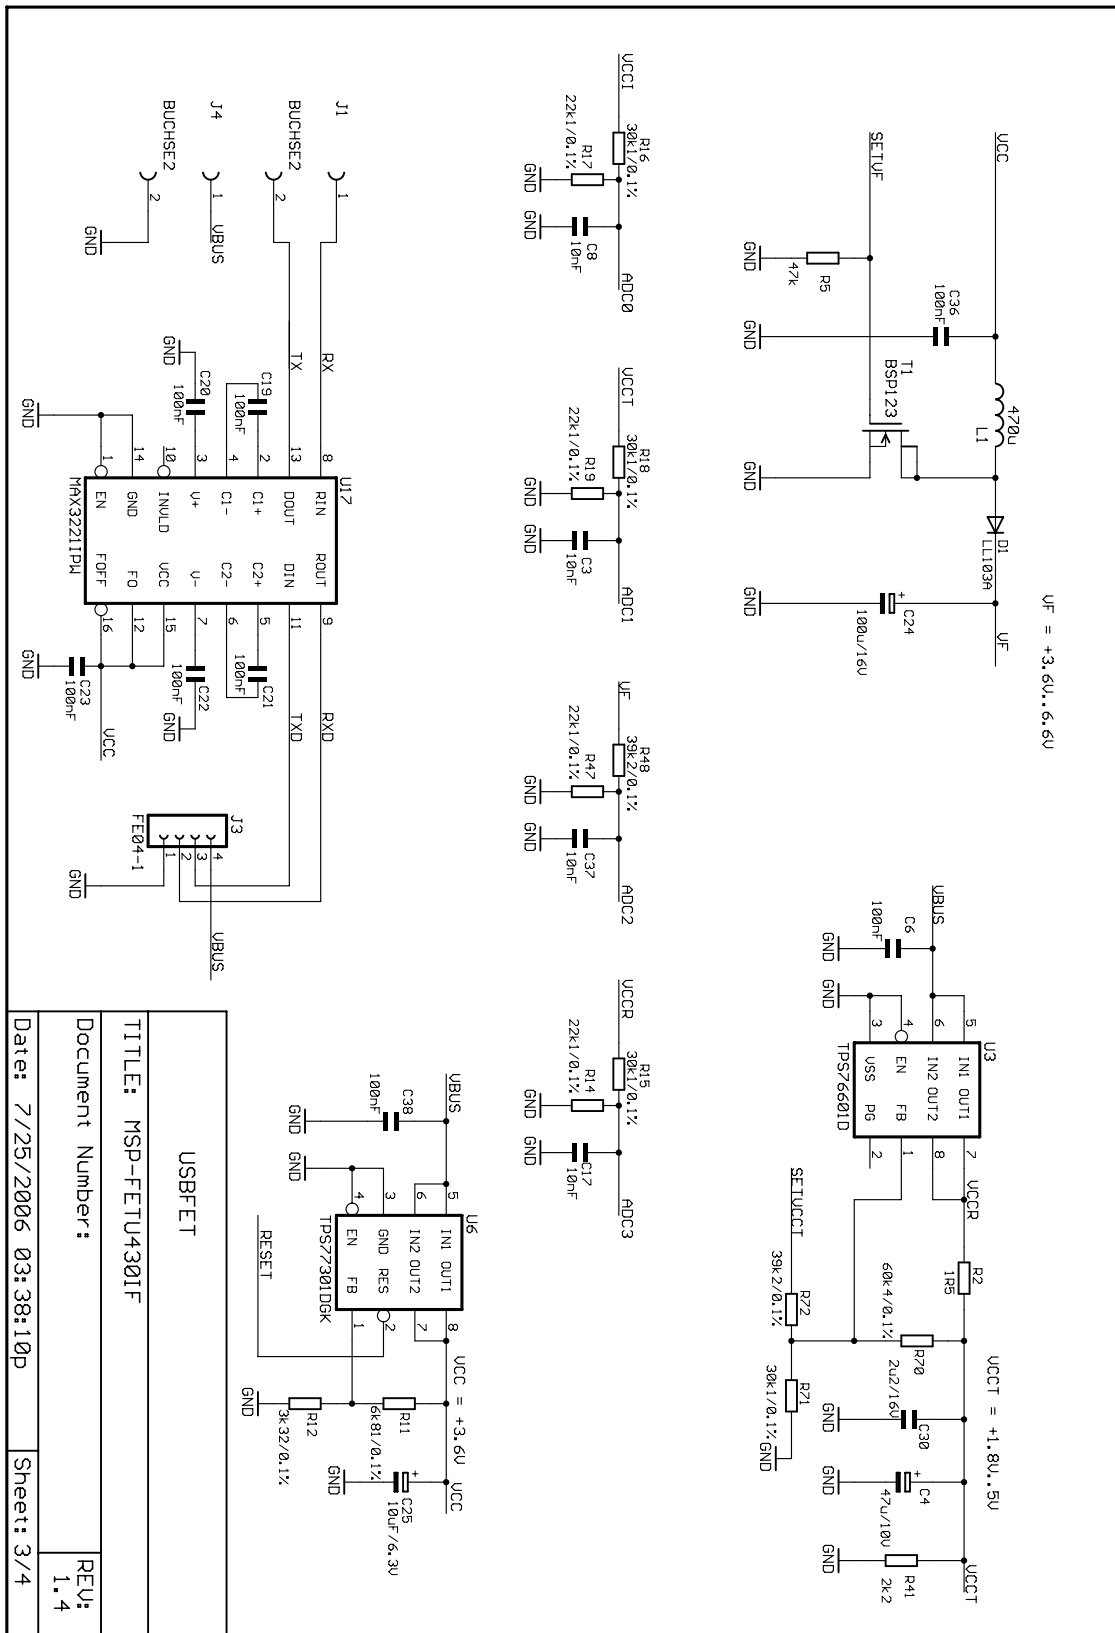


Figure 27. MSP-FET430UIF USB Interface, Schematic (3 of 4)

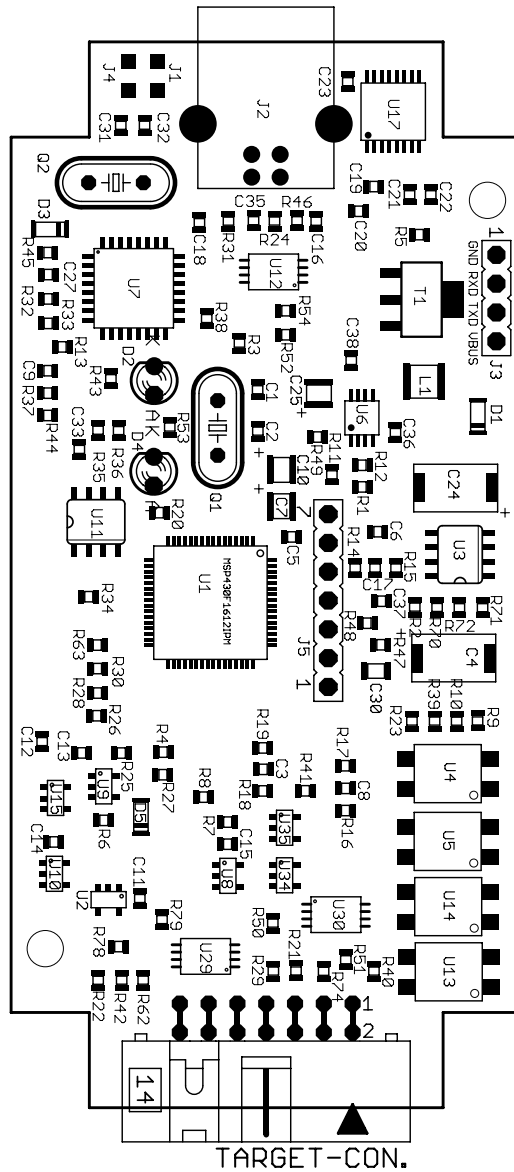


Figure 29. MSP-FET430UIF USB Interface, PCB

5.8 eZ-FET and eZ-FET Lite Onboard Emulation

The eZ-FET and eZ-FET Lite are powerful onboard flash emulation debug probes for application development on MSP430 microcontrollers (see [Figure 30](#)). The eZ-FET and eZ-FET Lite onboard emulation are the successors of the legacy eZ430.

Both eZ-FETs provide a USB interface to program and debug the MSP430 devices in-system through the pin-saving Spy-Bi-Wire (2-wire JTAG) protocol. Furthermore, the USB interface can be used for backchannel UART communication.

Both development tools support development with all MSP430 devices. They are designed as onboard emulation that is available on several LaunchPad kits. (Only MSP430 devices that implement the SBW2 protocol are supported.)

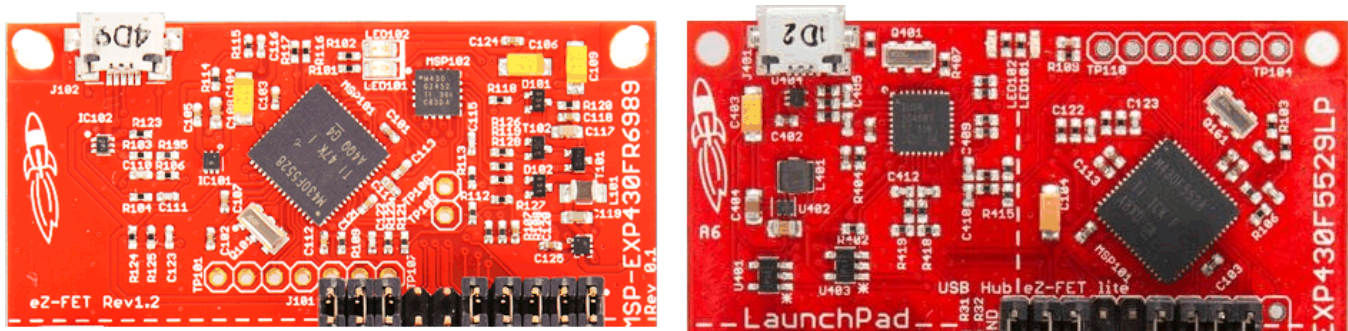


Figure 30. eZ-FET and eZ-FET Lite (Top View)

Figure 31 shows revision 1.3 of the eZ-FET.

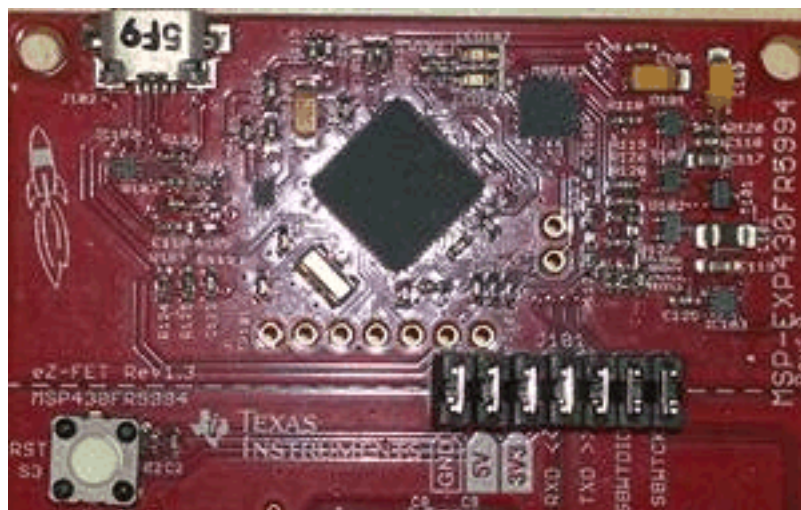


Figure 31. eZ-FET Rev1.3 (Top View)

5.8.1 General Features

The following features are provided by the eZ-FET and eZ-FET Lite debug probes.

Features:

- eZ-FET and eZ-FET Lite supported since:
 - CCS v5.4.0
 - IAR EW430 v5.52.1 and v5.51.6
- Operating systems: OS X, Linux, Windows
- Fixed supply voltage between 3.3 or 3.6 V at 75 mA
- Support Spy-Bi-Wire (2-wire JTAG) debug protocol
- Software breakpoint in flash, FRAM, and RAM support
- Flash and FRAM programming support
- Backchannel UART
- eZ-FET only – EnergyTrace and EnergyTrace++ support
- EnergyTrace technology accuracy
 - Current < 25 μ A: Error range = \pm 500 nA
 - Current \geq 25 μ A and \leq 75 mA: Error range = \pm 5%
- Software field update is possible

5.8.2 Backchannel UART

Supported baud rates depend on the target configuration and the debug settings. [Table 12](#) shows which baud rates are supported with certain configuration combinations.

✓ means that the corresponding baud rate is supported without any data loss with the specified combination of settings.

✗ means that the corresponding baud rate is not supported (data loss is expected) with the specified combination of settings.

Table 12. eZ-FET and eZ-FET Lite Backchannel UART Implementation

Target MCLK Frequency:	1 MHz		8 MHz		1 MHz		8 MHz	
Debugger:	Active				Inactive			
Flow Control:	No	Yes	No	Yes	No	Yes	No	Yes
4800 baud	✓	✓	✓	✓	✓	✓	✓	✓
9600 baud	✓	✓	✓	✓	✓	✓	✓	✓
19200 baud	✓	✓	✓	✓	✓	✓	✓	✓
28800 baud	✗	✓	✓	✓	✓	✓	✓	✓
38400 baud	✗	✓	✗	✓	✗	✓	✗	✓
57600 baud	✗	✓	✗	✓	✗	✓	✗	✓
115200 baud	✗	✗	✗	✓	✗	✗	✗	✓

5.8.2.1 eZ-FET and eZ-FET Lite UART Backchannel Activation Commands

The eZ-FET supports two different backchannel UART modes, one with flow control and one without. The different modes can be selected by opening the corresponding COM port with a dedicated baud rate. See [Table 13](#) for the specific baud rates for each command.

NOTE: The baud rates used by these commands cannot be used for communication.

If none of the specified commands are transferred before setting the communication baud rate, communication starts with these default settings: V_{CC} on, no flow control mechanism, no parity.

Table 13. eZ-FET and eZ-FET Lite Backchannel UART Activation Commands

Baud Rate	Command
9620	Set all backchannel UART pins to high impedance – no current flow into target device
9621	Configure backchannel UART communication without handshake (default start behavior)
9622	Configure backchannel UART communication with handshake NOTE: Available on Rev. 1.2 only.
9623	Voltage configuration command. When this command is received, target V_{CC} switched on.
9625	Configure backchannel UART communication without handshake and even parity (available starting with MSPDebugStack version 3.8.0.2)

5.8.3 LED Signals



















eZ-FET emulators show their operating states using two LEDs, one green and one red. Table 14 lists all available operation modes. An  or  icon indicates that the LED is off, an  or  icon indicates that the LED is on, and an  or  icon indicates that the LED flashes.

Table 14. eZ-FET LED Signals

Power LED	Mode LED	Function
		eZ-FET not connected to PC, or eZ-FET not ready; for example, after a major firmware update. Connect or reconnect eZ-FET to PC.
		eZ-FET connected and ready
		eZ-FET waiting for data transfer
		Ongoing data transfer – during active debug session
		An error has occurred; for example, target V_{CC} over current. Unplug eZ-FET from target, and cycle the power off and on. Check target connection, and reconnect eZ-FET.
		Firmware update in progress. Do not disconnect eZ-FET while both LEDs are blinking.

5.8.4 Hardware

This section describes the pinout of the eZ-FET and eZ-FET Lite debug connector. It includes a list of all debugger pin states after power up and the eZ-FET and eZ-FET Lite schematics.

5.8.4.1 JTAG Target Connector

Figure 32 shows the pinout of the eZ-FET debug connector.



Figure 32. eZ-FET or eZ-FET Lite Debug Connector

5.8.4.2 Connecting MSP-FET to LaunchPad Development Kit

Figure 33 and Figure 34 show how to connect an MSP-FET to the target MSP430 device that is solders onto the LaunchPad, using an F5529 LaunchPad as an example.

MSP-FET		'F5529 Launchpad (Isolation Jumper Block)	
Signal	Pin	Signal	Pin
GND	9	GND	JP3
VCC_TOOL	2	3V3	JP2
TDO/TDI	1	SBW_RST	JP4.2
TCK	7	SBW_TST	JP4.1

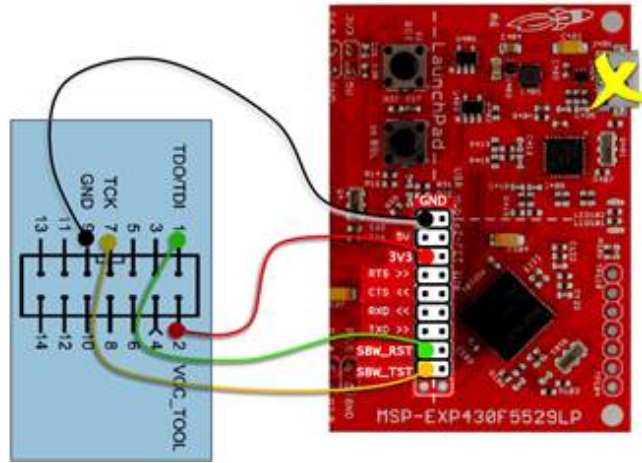


Figure 33. MSP-FET to LaunchPad Development Kit Pin Assignments

Figure 34. MSP-FET to LaunchPad Wiring Diagram

5.8.4.3 Pin States After Power Up

Table 15 describes the electrical state of every JTAG pin after debug probe power up.

Table 15. eZ-FET and eZ-FET Lite Pin States

Signal Name	After Power up	When Spy-Bi-Wire Protocol is Active
SBWTDIO	Hi-Z, pulled up to 3.3 V	In and Out, SBWTDIO
SBWTCK	Hi-Z, pulled up to 3.3 V	Out, SBWTCK
TXD	Hi-Z, pulled up to 3.3 V	In, Target UART TXD output
RXD	Hi-Z, pulled up to 3.3 V	Out, Target UART RXD input
CTS	Hi-Z, pulled up to 3.3 V	Out, Target UART Clear-To-Send Handshake input
RTS	Hi-Z, pulled up to 3.3 V	In, Target UART Ready-to-Send Handshake output
3V3	Target V _{CC}	Target V _{CC}
5V	USB V _{CC}	USB V _{CC}
GND	Ground	Ground

5.8.4.4 Schematics

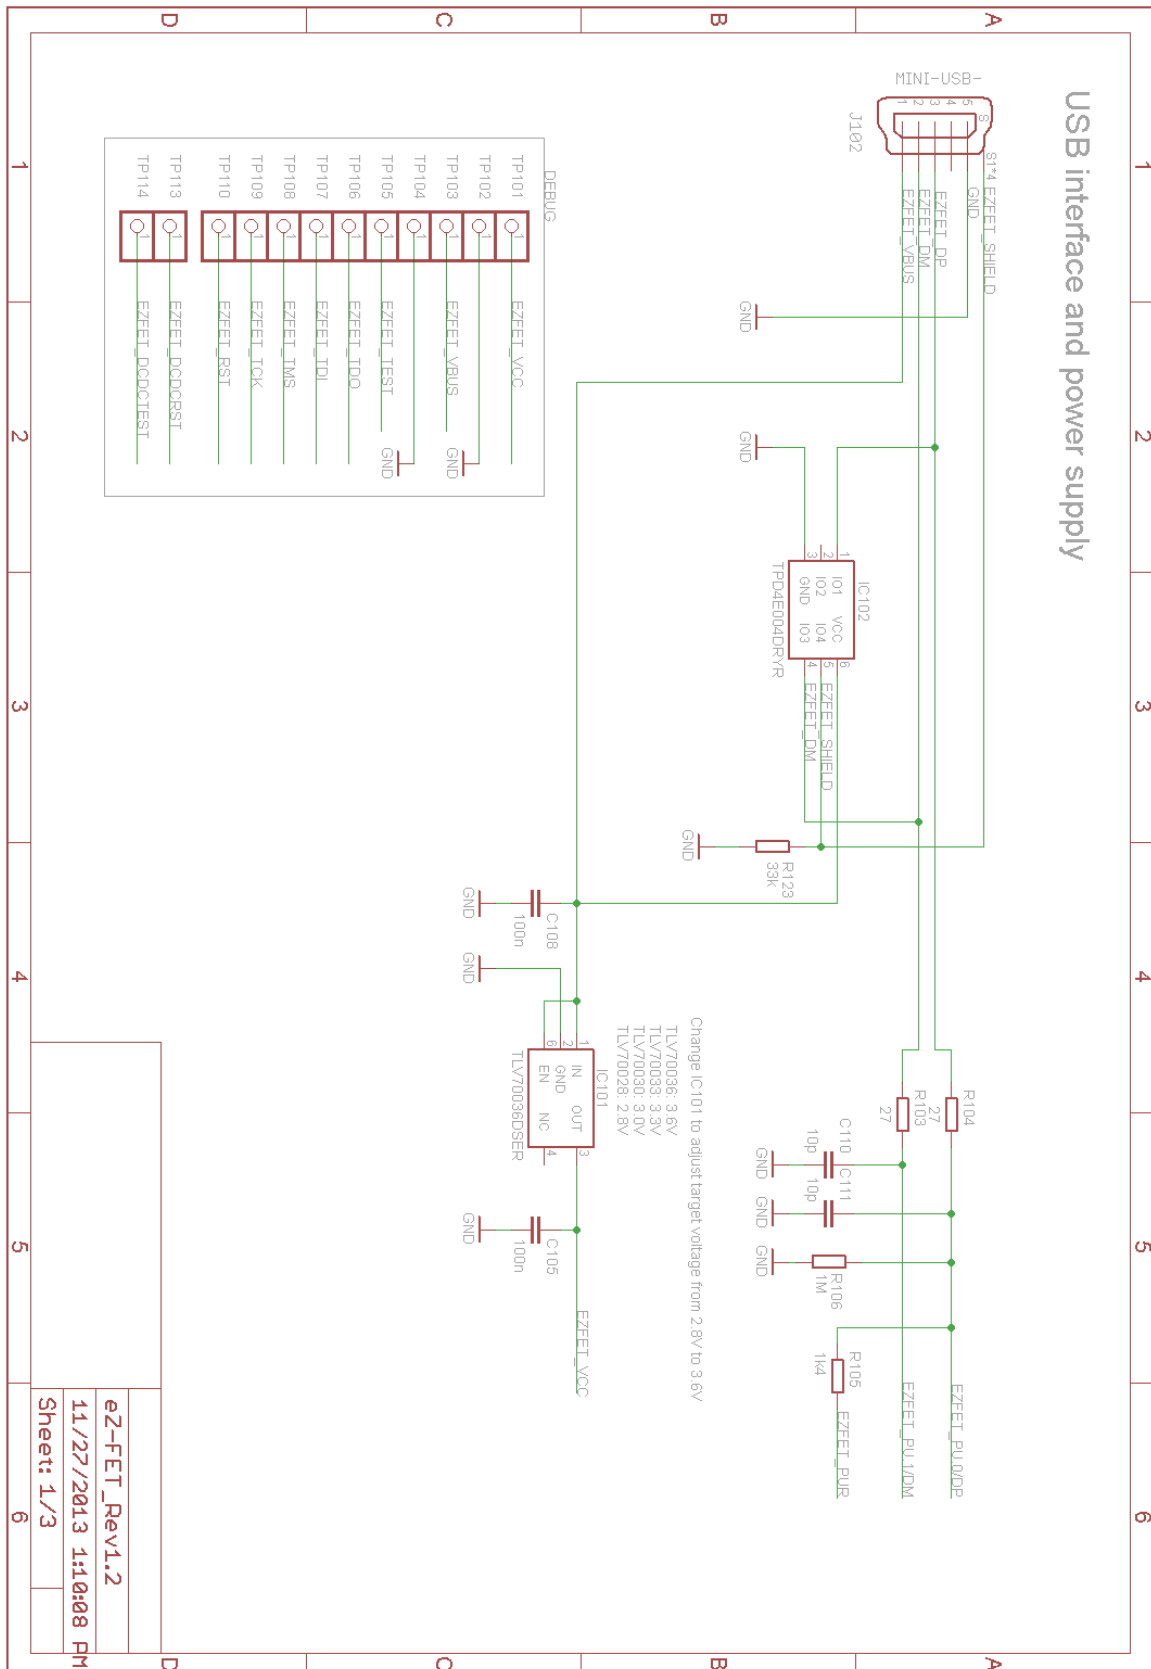


Figure 35. eZ-FET Schematic (USB Connection)

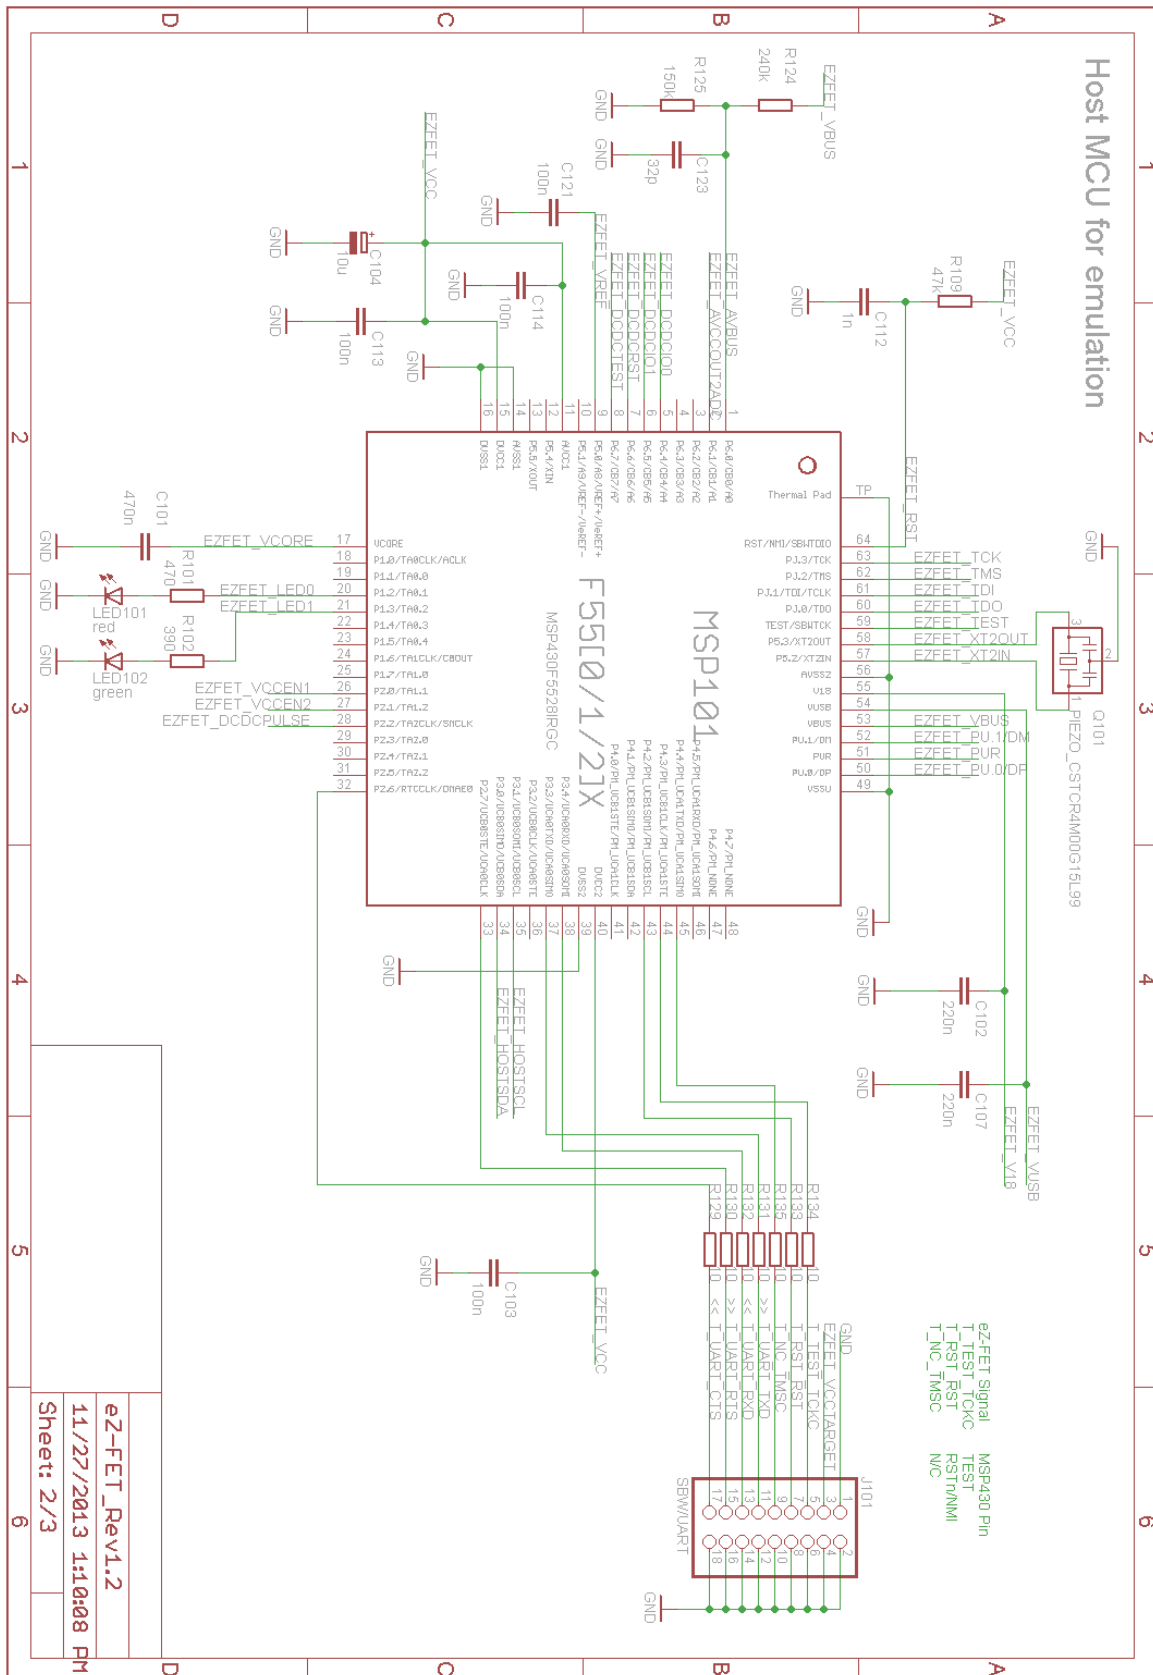


Figure 36. eZ-FET Schematic (Emulation MCU)

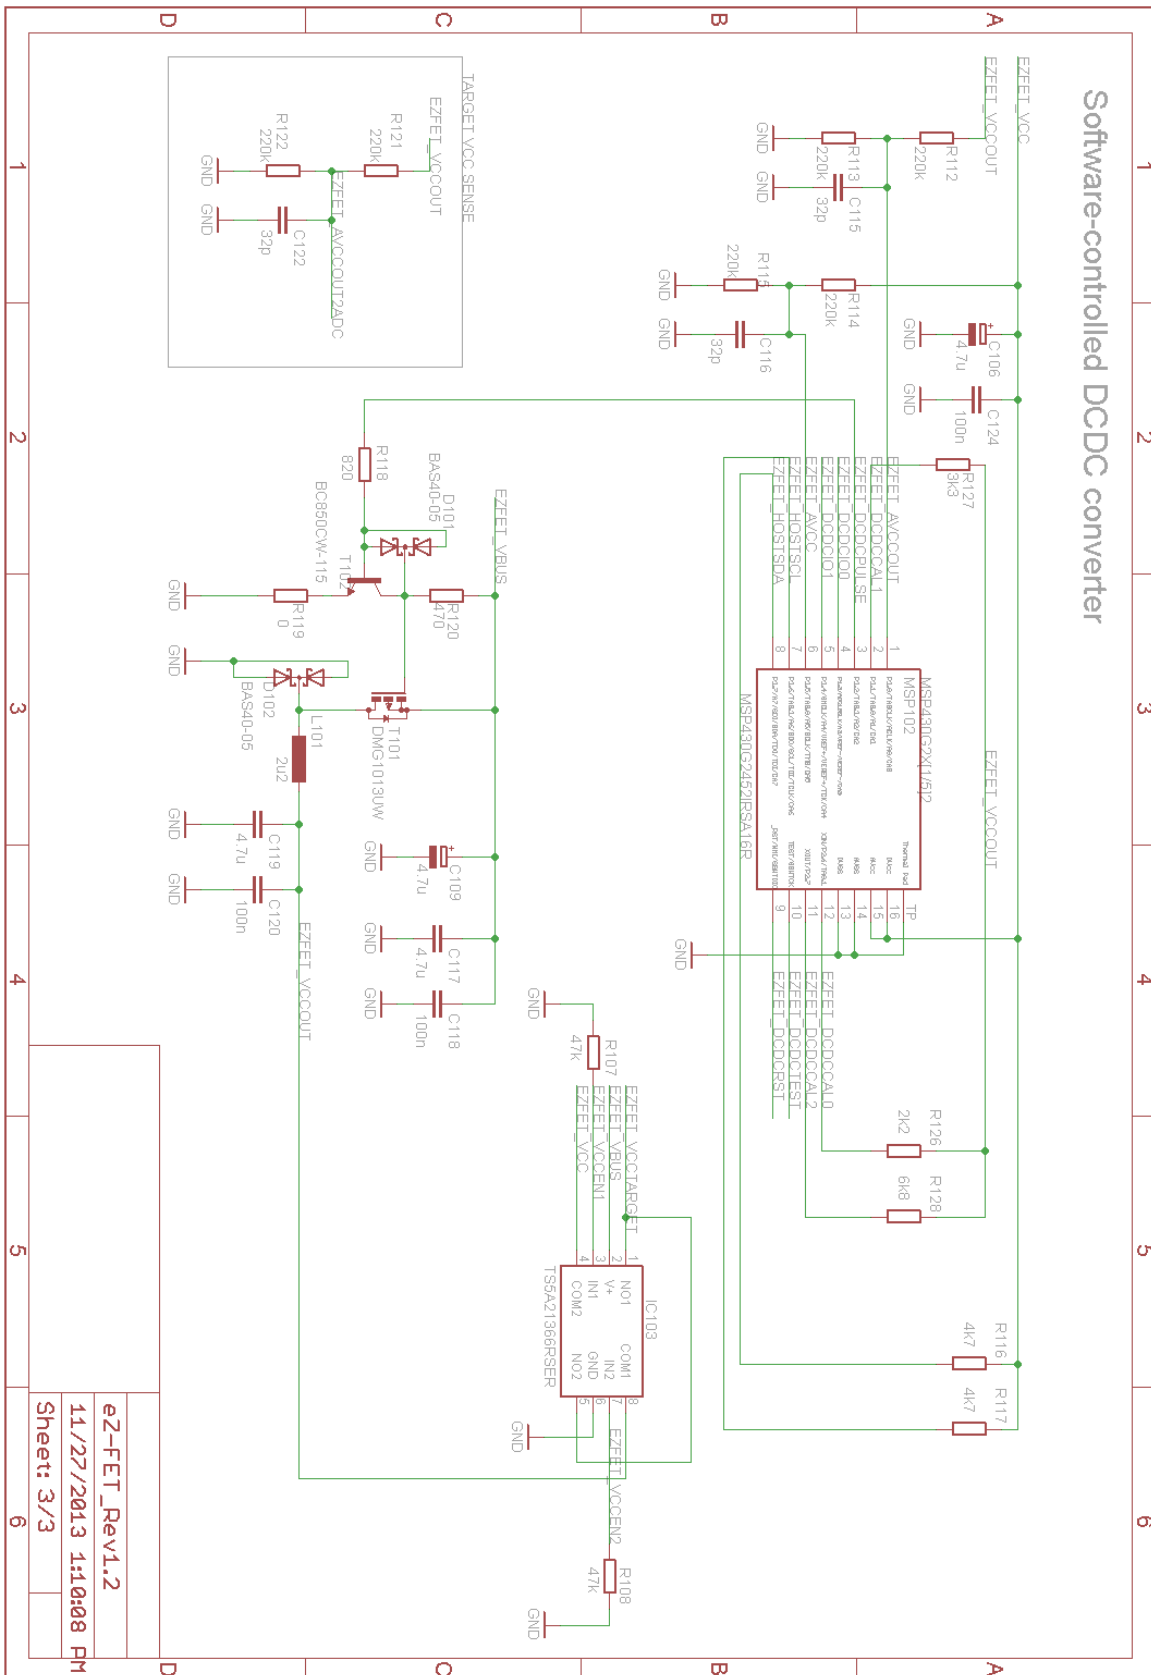


Figure 37. eZ-FET Schematic DCDC (No eZ-FET Lite)

5.9 eZ430 Onboard Emulation

The eZ430 onboard emulation is the legacy onboard flash emulation for application development on MSP430 microcontrollers. The eZ-FET and eZ-FET Lite onboard emulation are the successors of the legacy eZ430.

The eZ430 provides a USB interface to program and debug the MSP430 devices in-system through the pin-saving Spy-Bi-Wire (2-wire JTAG) protocol. Furthermore, the USB interface can be used for Backchannel UART communication.

NOTE: The eZ430 does not support all MSP430 device families. See [Table 1](#) for more details about device support.

The eZ430 onboard emulation and its backchannel UART might fail to enumerate on USB 3.0 computer ports. If enumeration fails, reconfigure the USB 3.0 port to USB 2.0 mode in your computer BIOS.

If the eZ430 onboard emulation is used with active software breakpoints, the RUN to MAIN function might fail. Disable software breakpoints to enable RUN to MAIN.



Figure 38. eZ430 Emulation

5.9.1 General Features

USB debug interface to connect a MSP430 MCU to a PC for real-time in-system programming and debugging.

Features:

- Operating systems: Windows
- Fixed supply voltage between 3.6 V at 75 mA
- Support Spy-Bi-Wire (2-wire JTAG) debug protocol
- Software Breakpoint in Flash, FRAM, and RAM support
- Flash and FRAM programming support
- Backchannel UART
- Software field update is **not** possible (see [Table 1](#) for device support details)
- Limited device support

5.9.2 Backchannel UART

The baud rates that are supported depend on the target configuration and the debug settings. [Table 16](#) shows which baud rates are supported with certain configuration combinations.

✓ means that the corresponding baud rate is supported without any data loss with the specified combination of settings.

✗ means that the corresponding baud rate is not supported (data loss is expected) with the specified combination of settings.

Table 16. eZ430 Backchannel UART Implementation

Target MCLK Frequency:	1 MHz	8 MHz
Debugger:	Active	Active
4800 baud	✓	✓
9600 baud	✓	✓
19200 baud	✗	✗
28800 baud	✗	✗
38400 baud	✗	✗
57200 baud	✗	✗
115200 baud	✗	✗

5.9.3 Hardware

This section describes the pinout of the eZ430 debug connector. It includes a list of all debugger pin states after power up and the ez430 schematics.

5.9.3.1 JTAG Target Connector

[Figure 39](#) shows the pinout of the eZ430 debug connector.



Figure 39. eZ430 Debug Connector on MSP-EXP430G2 LaunchPad

5.9.3.2 Pin States After Power Up

[Table 17](#) describes the electrical state of every JTAG pin after debug probe power up.

Table 17. eZ430 Pin States

Signal Name	After Power-Up	When Spy-Bi-Wire Protocol is Active
VCC	Target V _{CC}	Target V _{CC}
RST	In and Out, SBWTDIO	In and Out, SBWTDIO
TST	Out, SBWTCK	Out, SBWTCK
TXD	In, Target UART TXD output	In, Target UART TXD output
RXD	Out, Target UART RXD input	Out, Target UART RXD input

5.9.3.3 Schematics

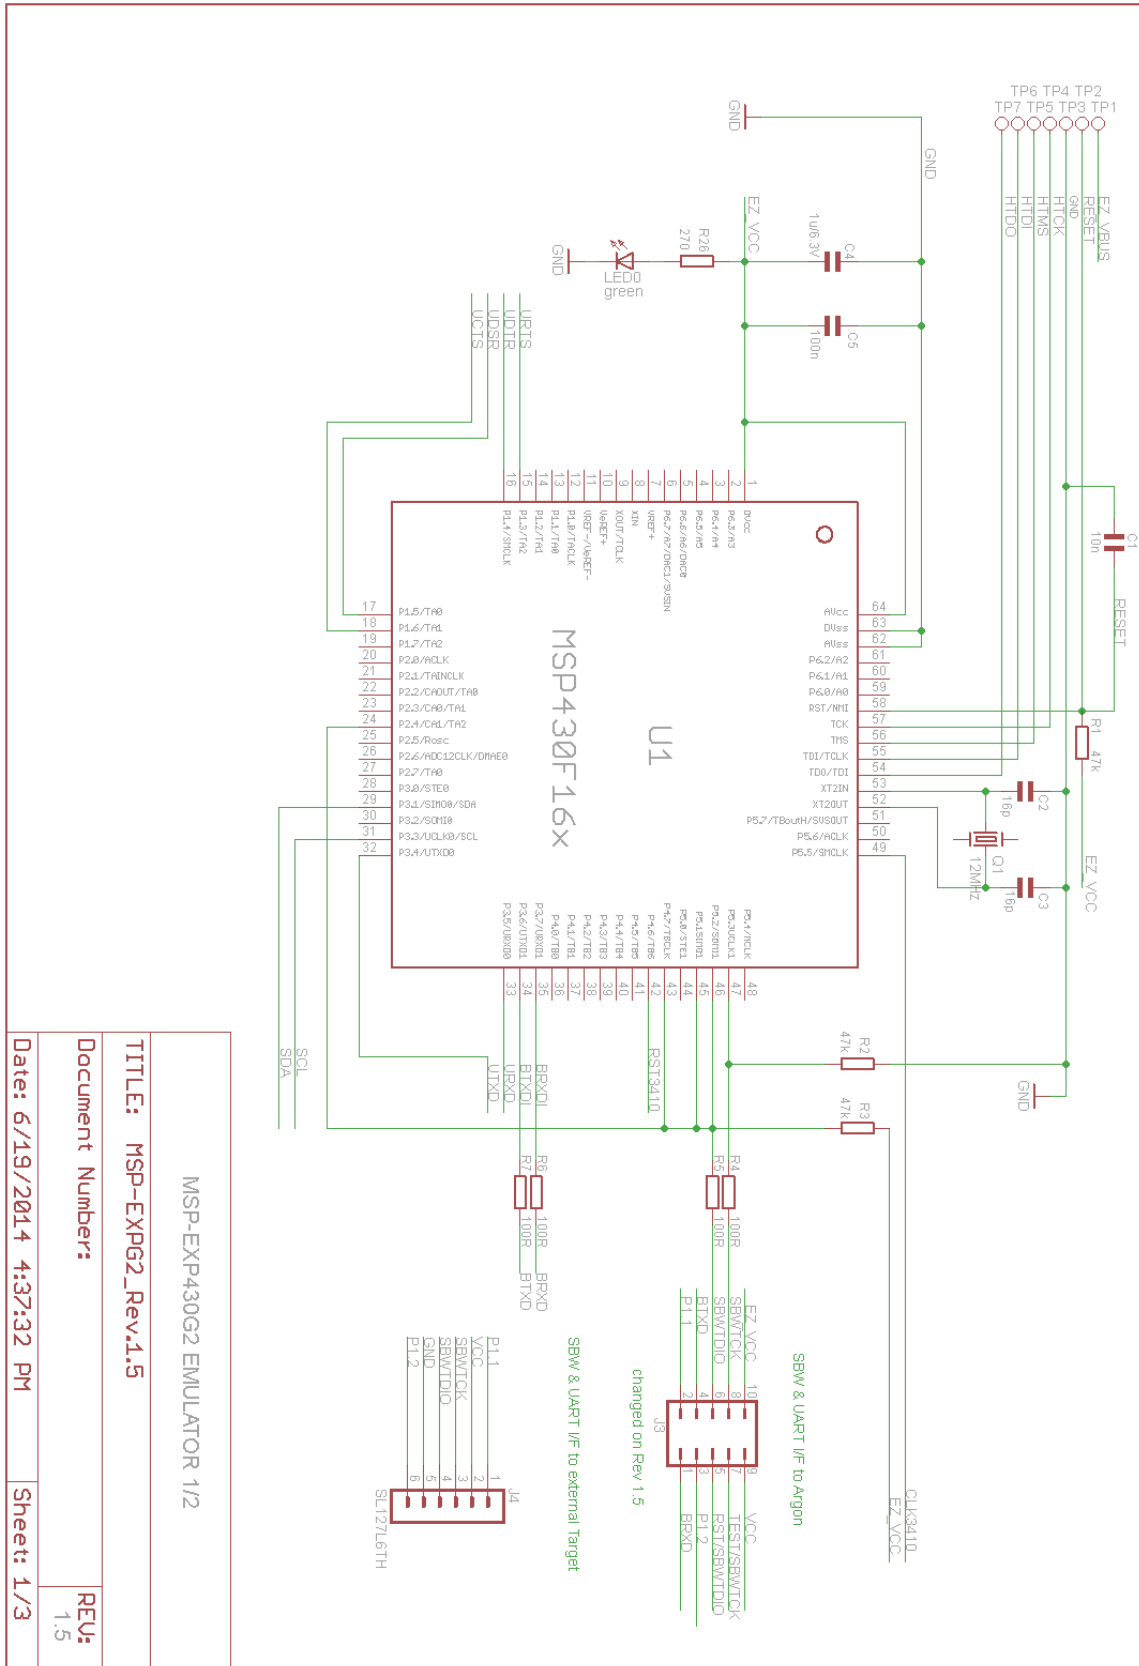


Figure 40. eZ430 Schematic (Emulation MCU)

5.10 MSP-FET430PIF

The MSP-FET430PIF is a parallel port interface that is used to program and debug MSP430 boards through the JTAG interface. This interface uses a parallel PC port to communicate with the IDE (CCS, EW430, or the MSP Flasher) running on the PC. The interface uses the standard 14-pin JTAG header to communicate with the MSP430 device using the standard JTAG protocol.

The flash memory can be erased and programmed in seconds with only a few keystrokes, and because the MSP430 flash is extremely low power, no external power supply is required. The tool has an integrated software environment and connects directly to the PC which greatly simplifies the setup and use of the tool.



Figure 42. MSP-FET430PIF

5.10.1 General Features

- Operating systems: Windows XP
- Fixed supply voltage between 3.3 V at 25 mA
- Software Breakpoint in Flash, FRAM, and RAM support
- Flash and FRAM programming support
- Supports JTAG protocol only ⁽²⁾

NOTE: The MSP-FET430PIF is for legacy device support only. This emulation tool does not support any devices released after 2011.

⁽²⁾ Spy-Bi-Wire (2-wire JTAG) is supported

Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from February 23, 2018 to February 27, 2019	Page
• Added the note that begins "Due to the bandwidth being shared..." in Section 5.6.2 , <i>Backchannel UART</i>	16

STANDARD TERMS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
2. *Limited Warranty and Related Remedies/Disclaimers:*
 - 2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after delivery, or of any hidden defects with ten (10) business days after the defect has been detected.
 - 2.3 TI's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.

WARNING

Evaluation Kits are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems.

User shall operate the Evaluation Kit within TI's recommended guidelines and any applicable legal or environmental requirements as well as reasonable and customary safeguards. Failure to set up and/or operate the Evaluation Kit within TI's recommended guidelines may result in personal injury or death or property damage. Proper set up entails following TI's instructions for electrical ratings of interface circuits such as input, output and electrical loads.

NOTE:

EXPOSURE TO ELECTROSTATIC DISCHARGE (ESD) MAY CAUSE DEGRADATION OR FAILURE OF THE EVALUATION KIT; TI RECOMMENDS STORAGE OF THE EVALUATION KIT IN A PROTECTIVE ESD BAG.

3 Regulatory Notices:

3.1 United States

3.1.1 Notice applicable to EVMs not FCC-Approved:

FCC NOTICE: This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

3.1.2 For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。
http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないものご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。日本テキサス・インスツルメンツ株式会社
東京都新宿区西新宿 6 丁目 2 4 番 1 号
西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_02.page
電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_02.page

3.4 European Union

3.4.1 *For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive):*

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

-
- 4 *EVM Use Restrictions and Warnings:*
 - 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
 - 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
 - 4.3 *Safety-Related Warnings and Restrictions:*
 - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
 - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
 - 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.
 5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.
 6. *Disclaimers:*
 - 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
 - 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.
 7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
-

8. *Limitations on Damages and Liability:*

8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS , REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.

8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMNITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, , EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.

9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.

10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2019, Texas Instruments Incorporated

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale (www.ti.com/legal/termsofsale.html) or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2019, Texas Instruments Incorporated