Instructions to install CTP GUIs and run in Windows 7
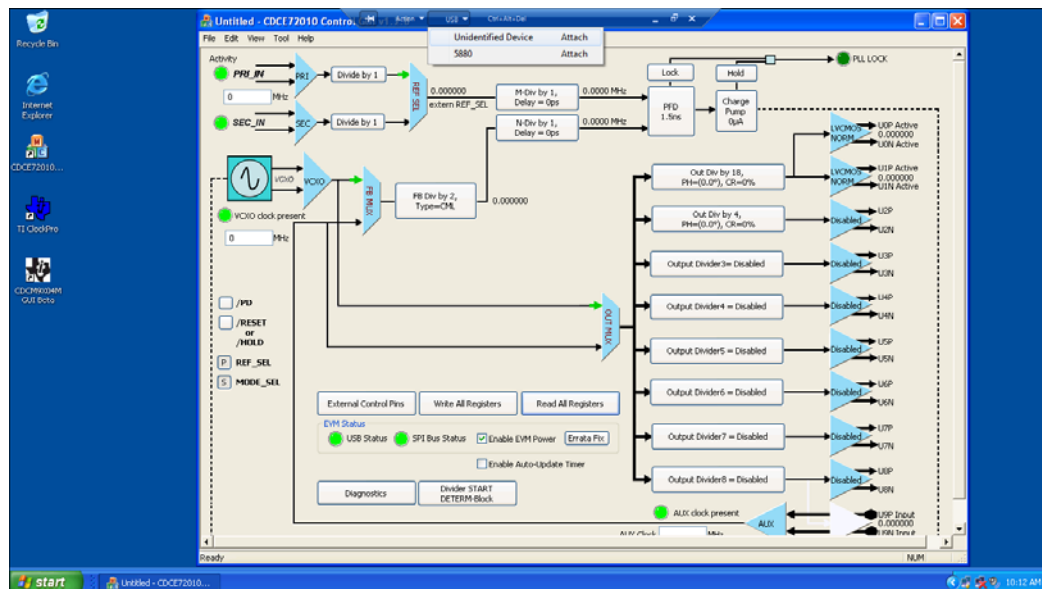
Step1. Install virtual PC:

http://www.microsoft.com/windows/virtual-pc/download.aspx
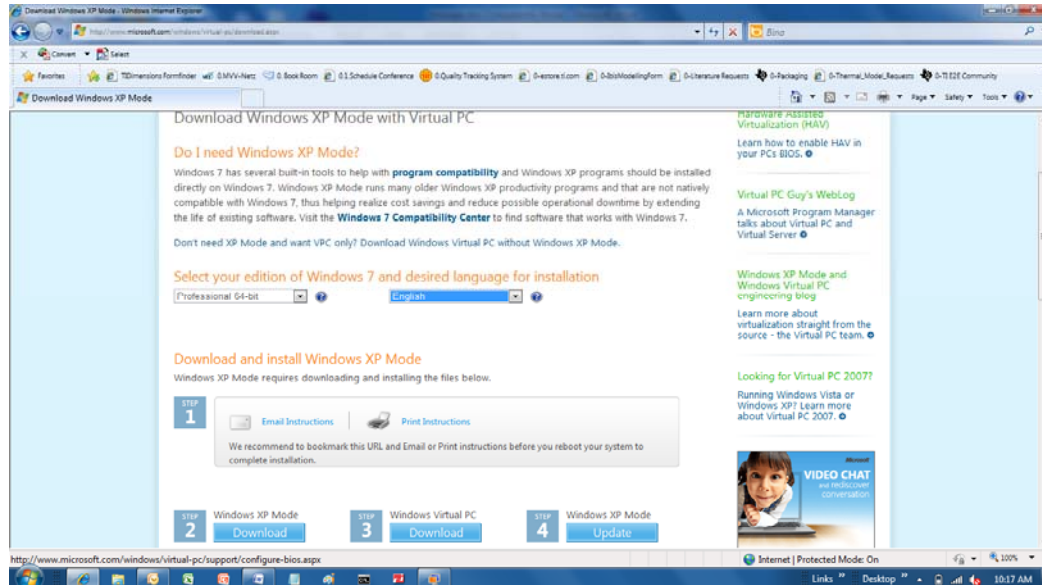
Step2. Install the GUI of interest in your Virtual PC

Step3. In order to communicate with the board, "Attach" the board to the virtual PC as shown in the picture below

Note. If you only need to run the GUIs in local mode, Virtual PC will not be necessary if you are administrator of your PC.

windows7GUI.doc
8/20/2011

In that case, install the software as administrator.
-Right click on the installer exe:
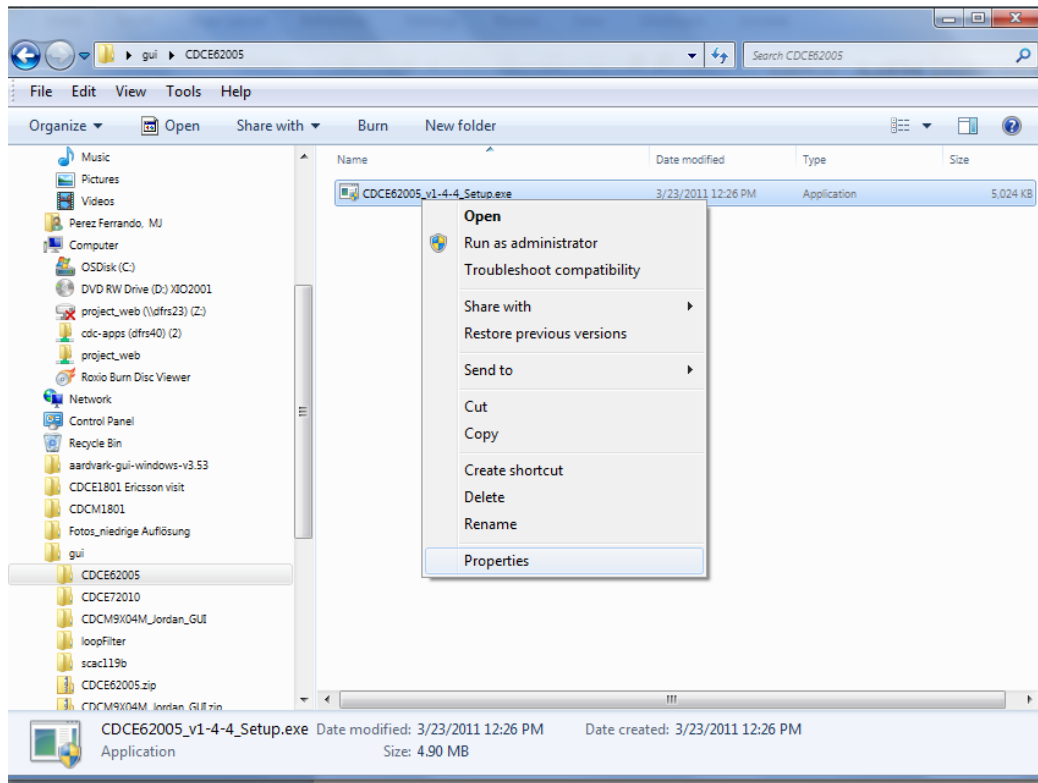
-Select Properties, and go to the Compatibility tab control, and configure it as in the image below.

CDCE62005_v1-4-4_Setup.exe Properties

General | Compatibility | Security | Details | Previous Versions

If you have problems with this program and it worked correctly on an earlier version of Windows, select the compatibility mode that matches that earlier version.

Help me choose the settings

Compatibility mode

☑ Run this program in compatibility mode for:

Windows XP (Service Pack 3)

Settings

☐ Run in 256 colors

☐ Run in 640 x 480 screen resolution

☐ Disable visual themes

☐ Disable desktop composition

☐ Disable display scaling on high DPI settings

Privilege Level

☑ Run this program as an administrator

🛡 Change settings for all users

OK   Cancel   Apply