Earphone Audio (PMIC)

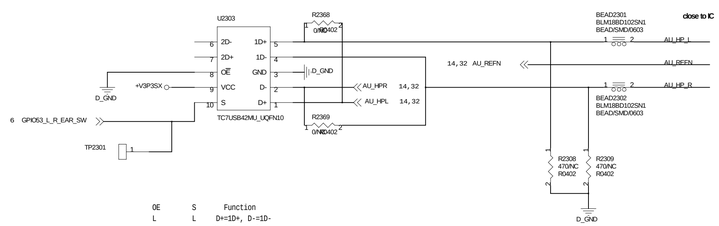

OE	S	Function
L	L	D+=1D+, D-=1D-
L	H	D+=2D+, D-=2D-
H	X	Disconnect

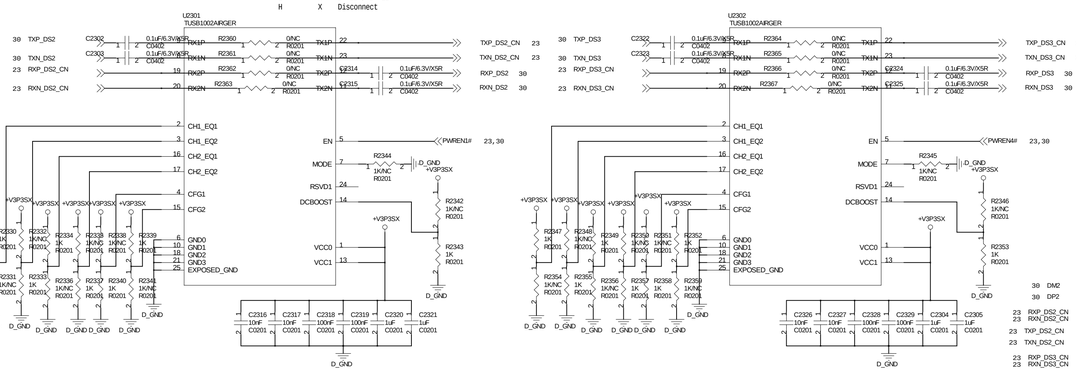

Earphone Microphone (PMIC)

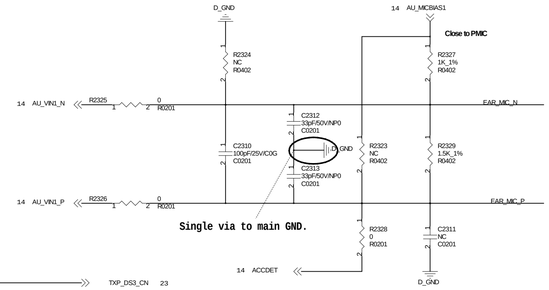

MSDC1 - SD CARD

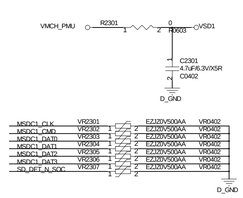

FINGER MODULE


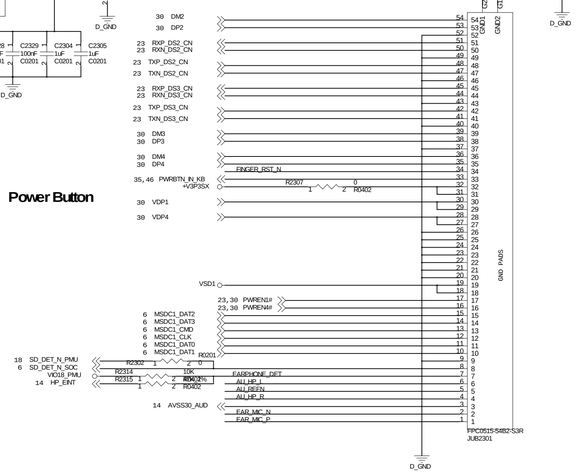
Power Button