



Step 1 : First Power off the board


Step :2 please check is the same sequence in on IBOOST

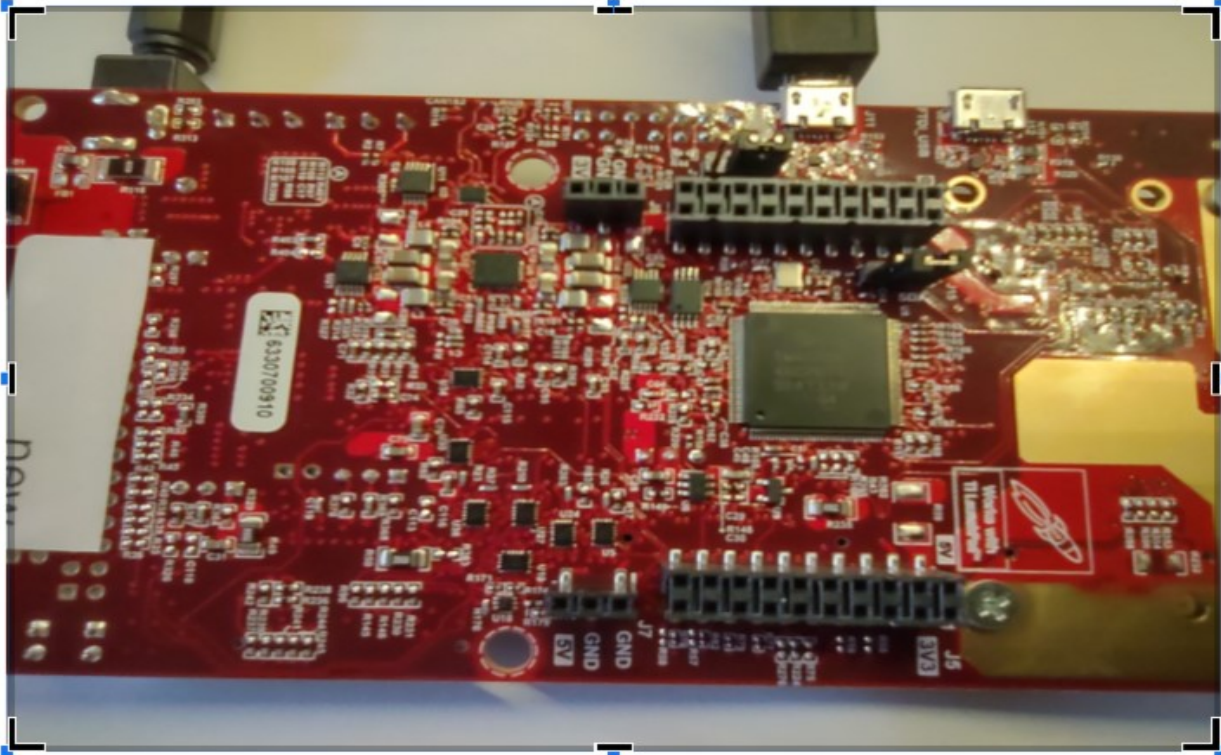

Please note: SDA 2-3 and SLC 1-2 in this set-up. Is that correct ?

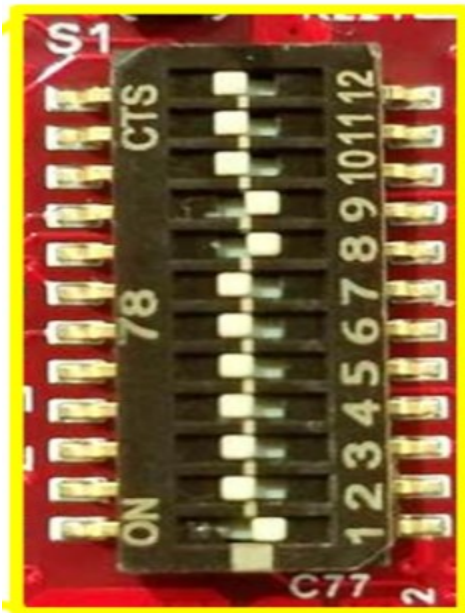


step 3 : Check ISK board switch

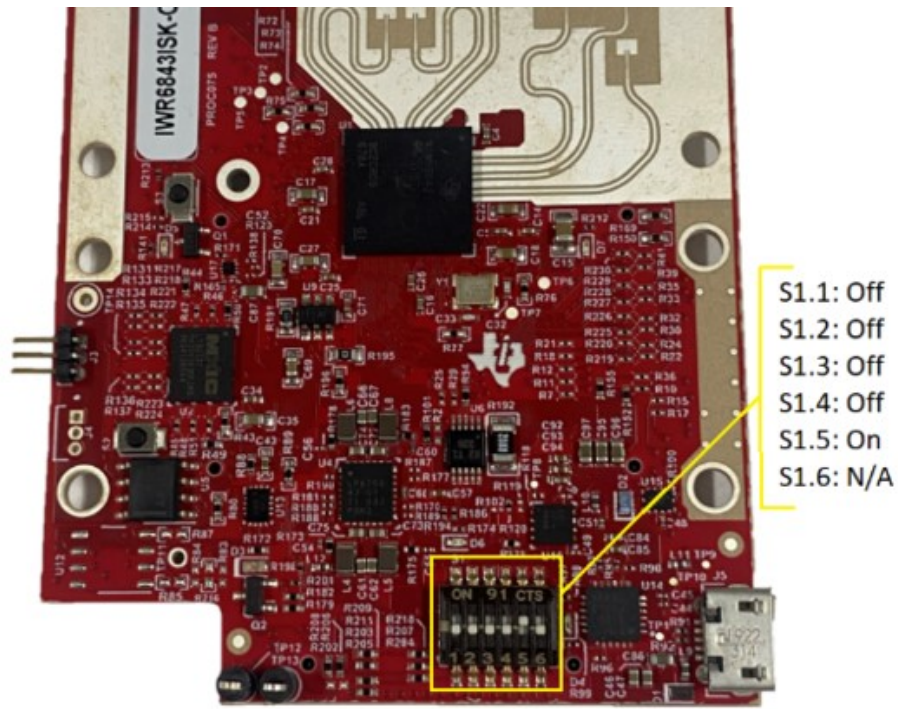

Step 4 : remove the jumper
SOP2 Jumper OPEN
SOP1 Jumper OPEN
SOP0 Jumper CLOSE (edited)

Step 5: Connect the USB AND Power supply and turn on Board

step 6: Do not turn off board
Set SOP Jumper

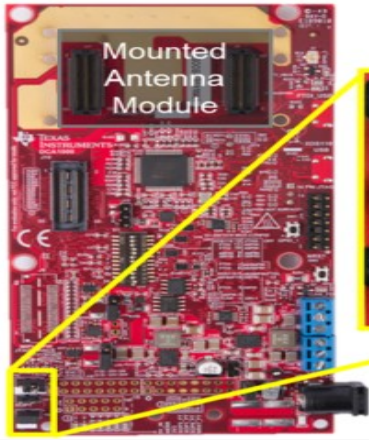

SOP ID	Position
SOP2	ON
SOP1	OFF
SOP0	ON

Step 7: Press the Reset for activate flash mode

