


Step by step guide on importing a project. Start with a new installation of the SDK


1)

Open IAR. I used the following version:

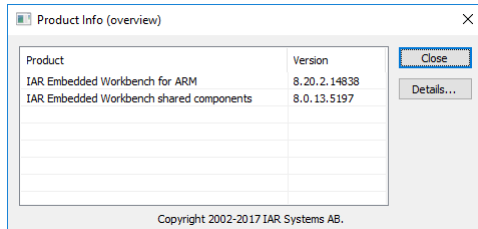


2)

Import the correct Arg. Variables from the simplelink_cc13x0_sdk_1_60_00_21 using the import button:

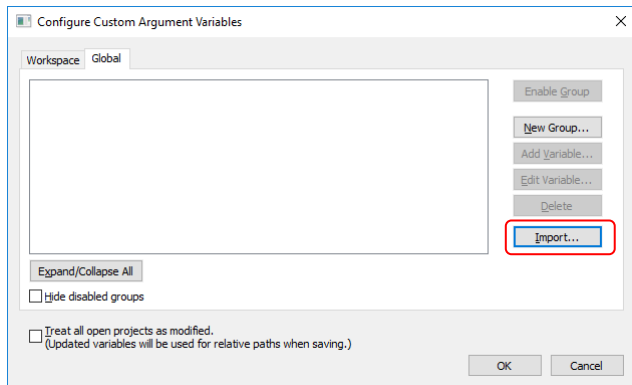

The Arg. Var.'s should be imported from here:

C:\ti\simplelink_cc13x0_sdk_1_60_00_21\tools\iar

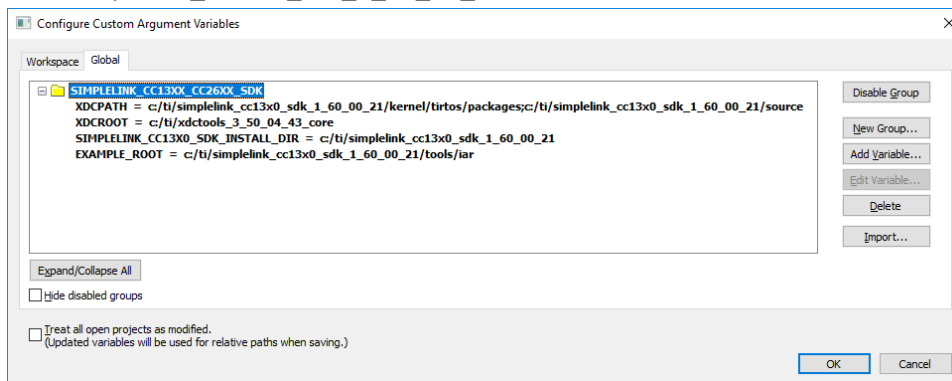

3)


Press OK.

4)

Close IAR and re-open it.


5)

Go to the Information Center:

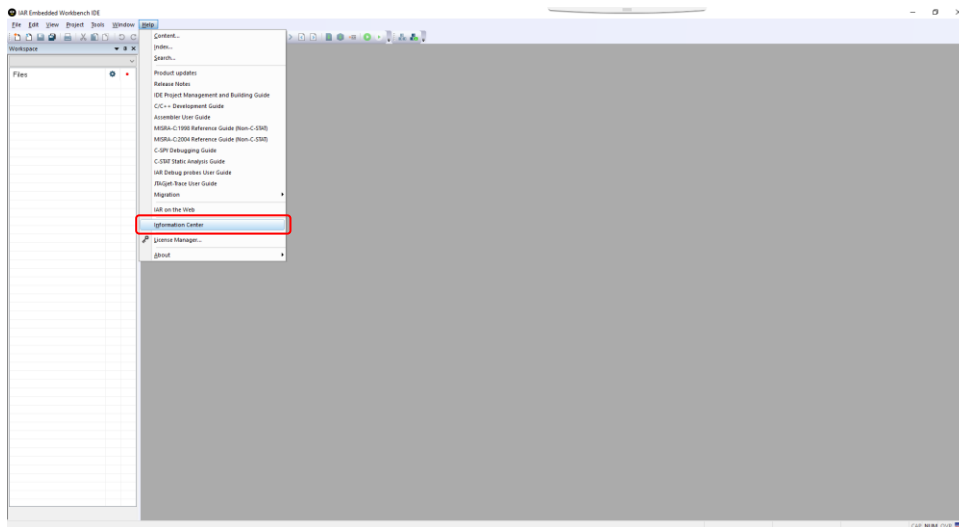


6)

Select Integrated Solutions:

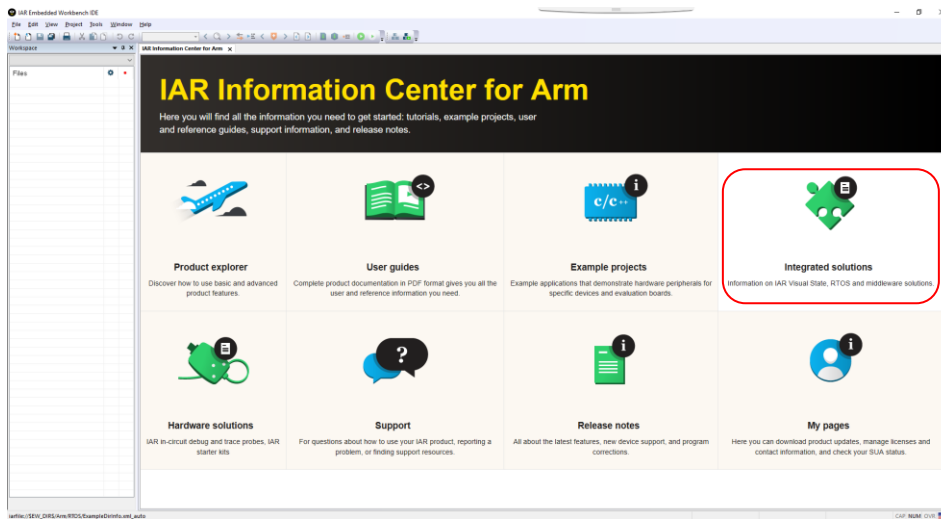


7)

Select Example projects from Texas Instruments

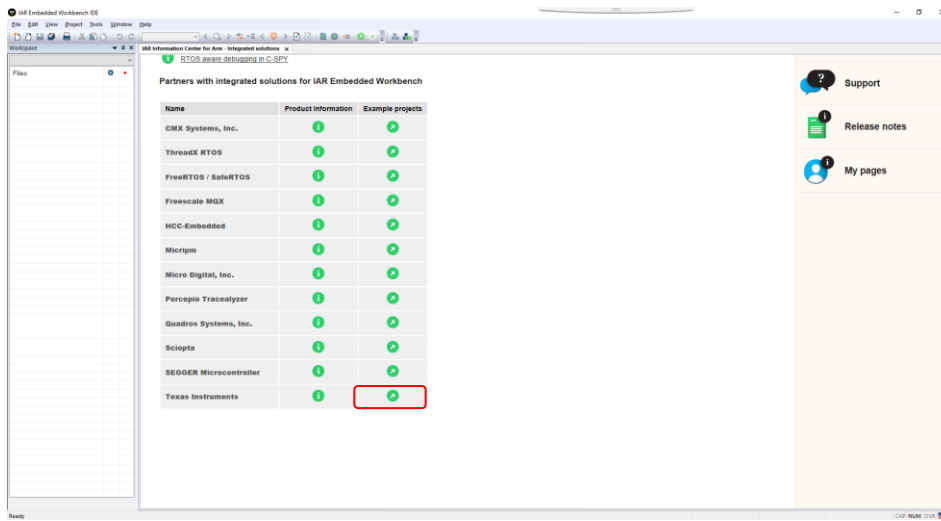


8)

Browse example applications

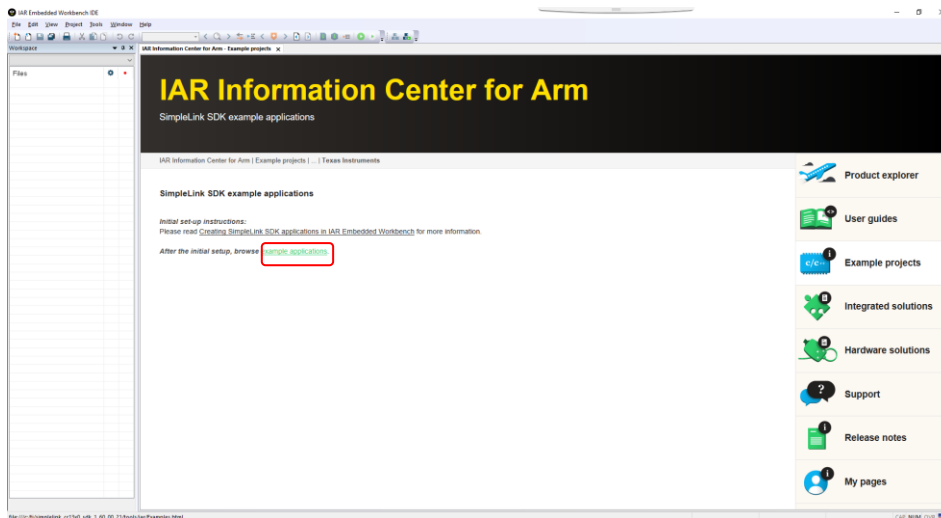


9)

and select the project you want to import:

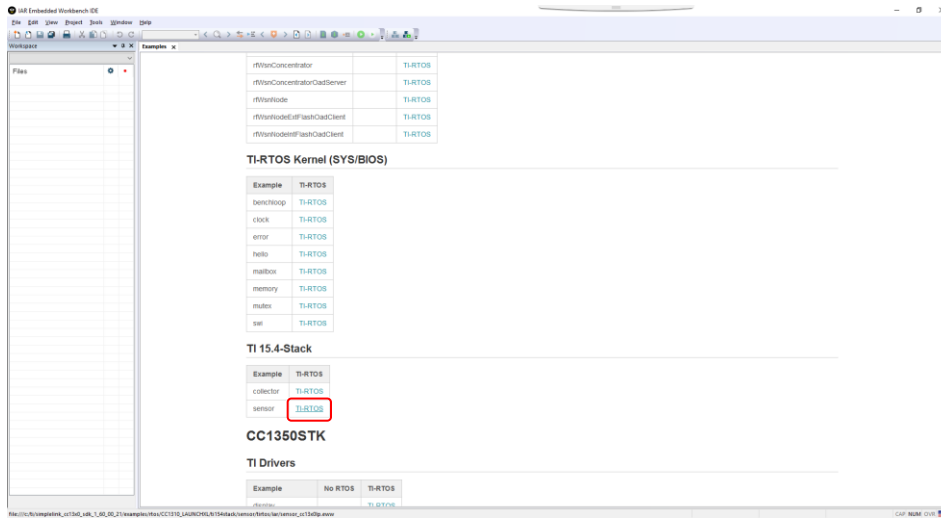

10) Press yes and save the project to a proper location

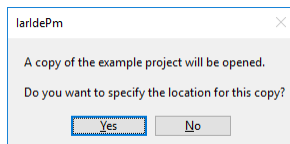

11)

Rebuild All

