


PWM Waveforms - Boost PFC

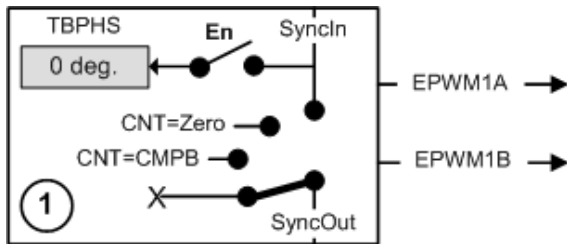

- 2-phase implementation needs only one PWM module
- Symmetrical mode time-base
- Interrupt on zero match
- CMPA & B control duty cycles

