

Figure 6.1 and Figure 6.2 show the load transient (0.5A to 1.5A) response of the output voltage.


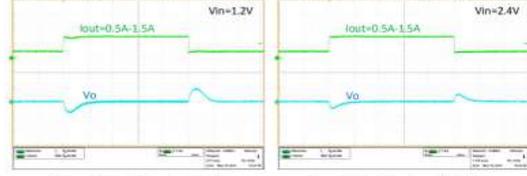


Figure 7 shows the efficiency versus load current.



Notel: R2=R3\*(Vout/1.212 - 1)

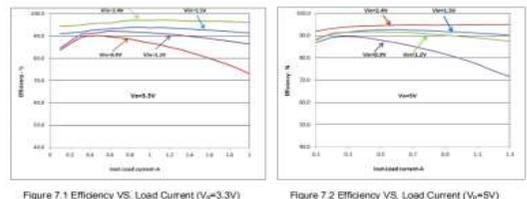