


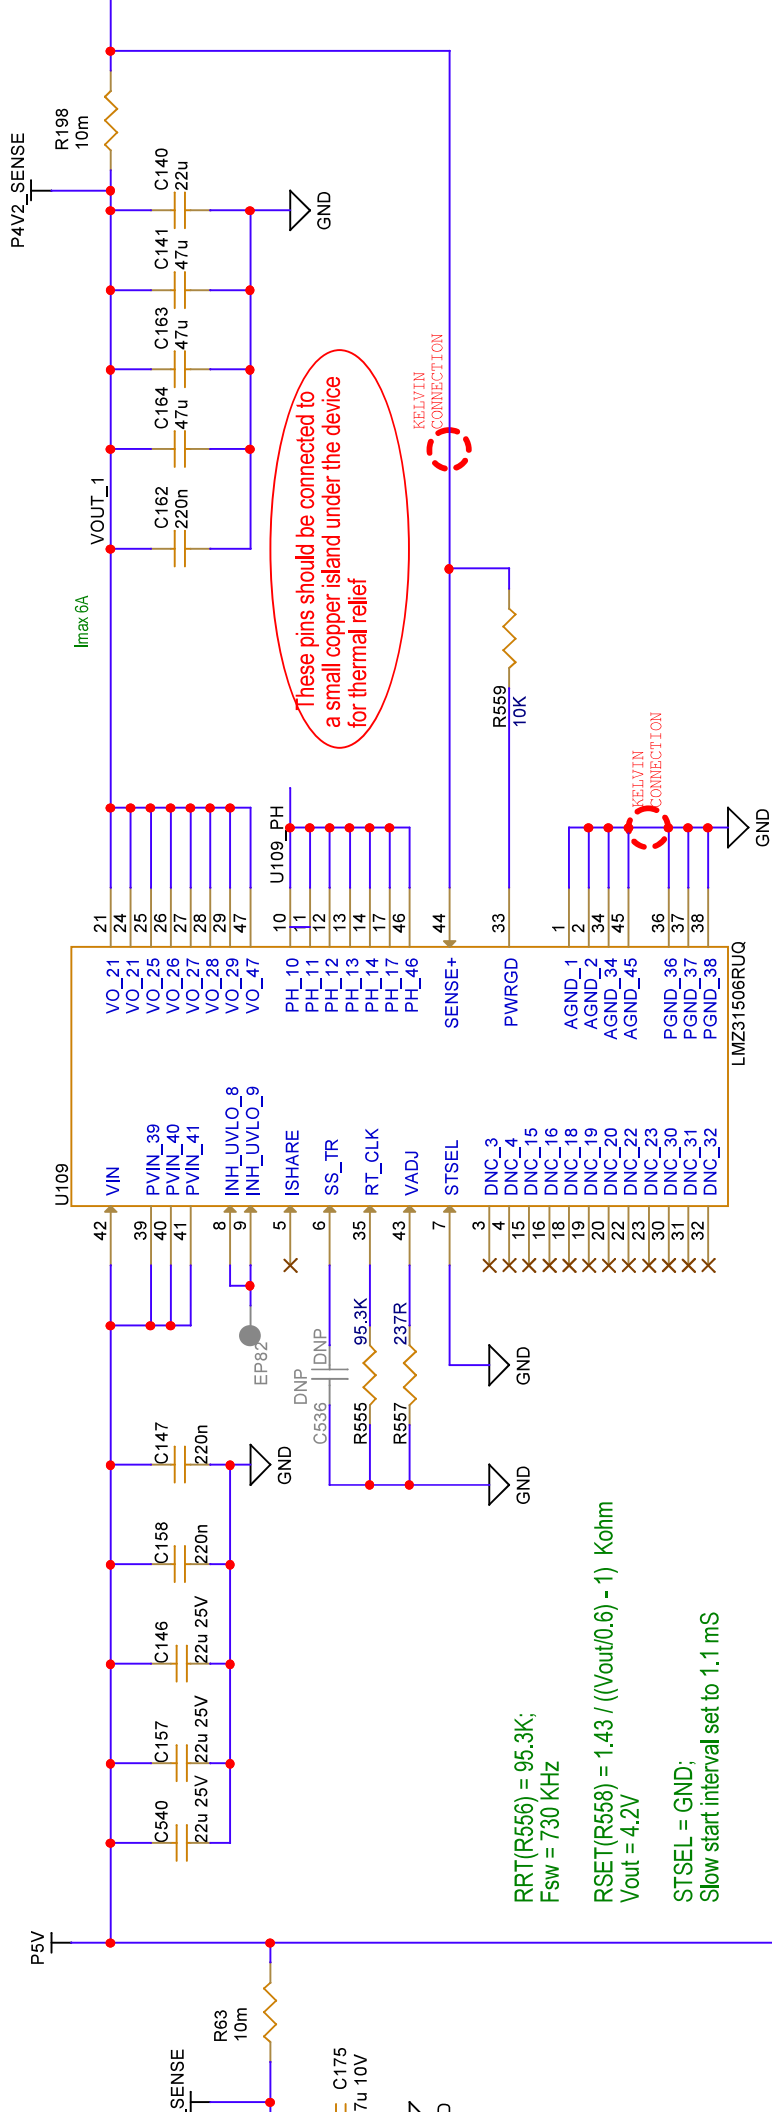

These pins should be connected to a small copper island under the device for thermal relief

$RRT(R556) = 95.3K;$
 $Fsw = 730 KHz$
 $RSET(R558) = 1.43 / ((Vout/0.6) - 1) Kohm$
 $Vout = 4.2V$
 $STSEL = GND;$
Slow start interval set to 1.1 ms

4.2V @ 6A MAX