


- ※ Voltage drops even with no load
- ※ IC-GND is also the same potential as VOUT

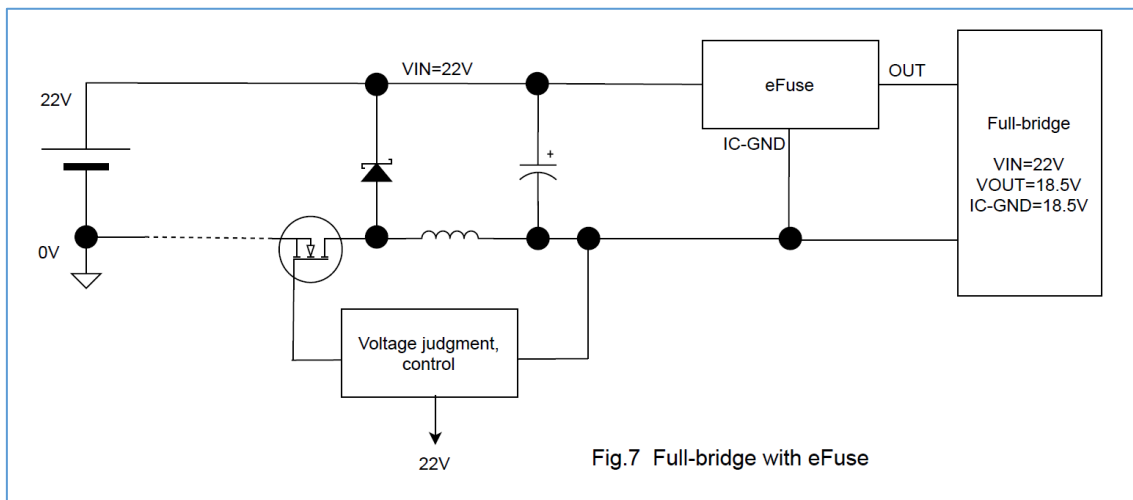

- ※ Same voltage as no load
- ※ IC-GND is also the same potential as VOUT

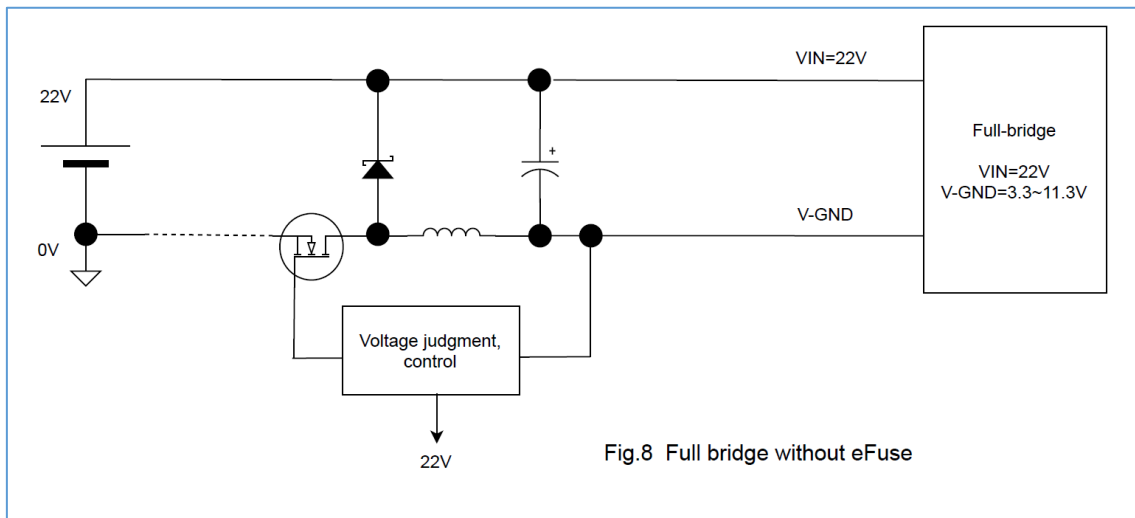


Fig.8a Full-bridge without eFuse  
(Yellow : VIN=22V、Pink : V-GND=3.3V~11.3V)

※ If you jumper eFuse, it will work normally.  
The potential of GND moves based on VIN.