



1. Close GUI, power cycle the board
2. Launch the UCD90xxx Device as shown below.

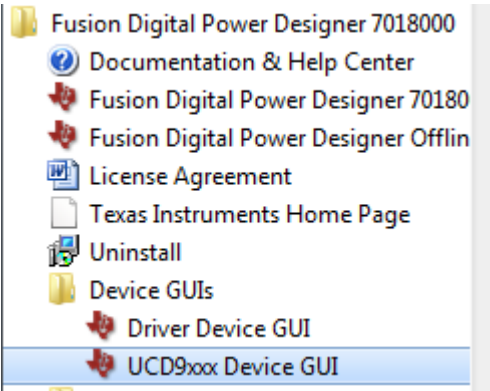

3. Click scan device in ROM mode

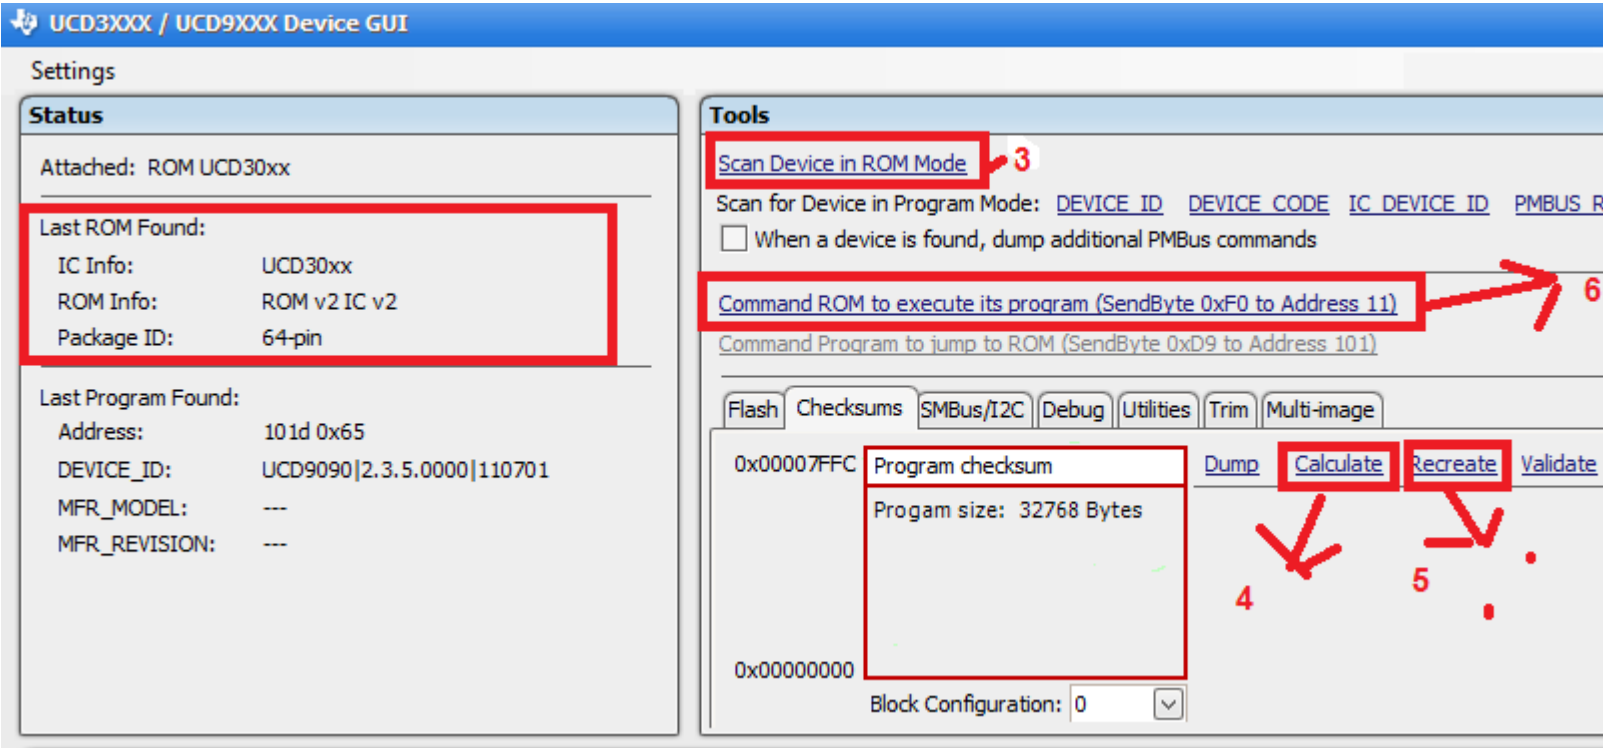

4. Click the calculate and expect to set 0x0031DBA8 as shown in the log section If you do see 0x0031DBA8

If you do not see 0x0031DBA8, Please stop here, do not proceed and contact your local TI sale representative for further help. Proceeding without 0x0031DBA8 will brick the device at own risk.

5. click the recreate to generate the checksum
6. The last step is to command ROM to execute its program.
7. After above step, the device shall function as normal.