
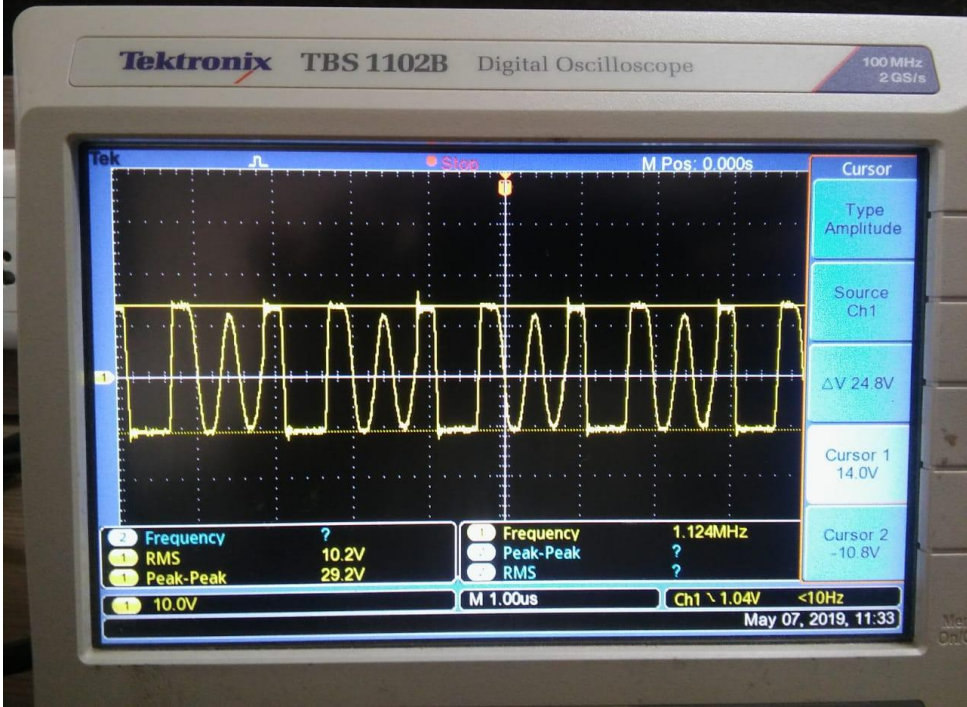




scope shots:

Below all waveforms are in AC coupling.

- 1. Below 2 are SW node waveforms. In 1st frequency measured and in 2nd p-p voltage shown at SW node.

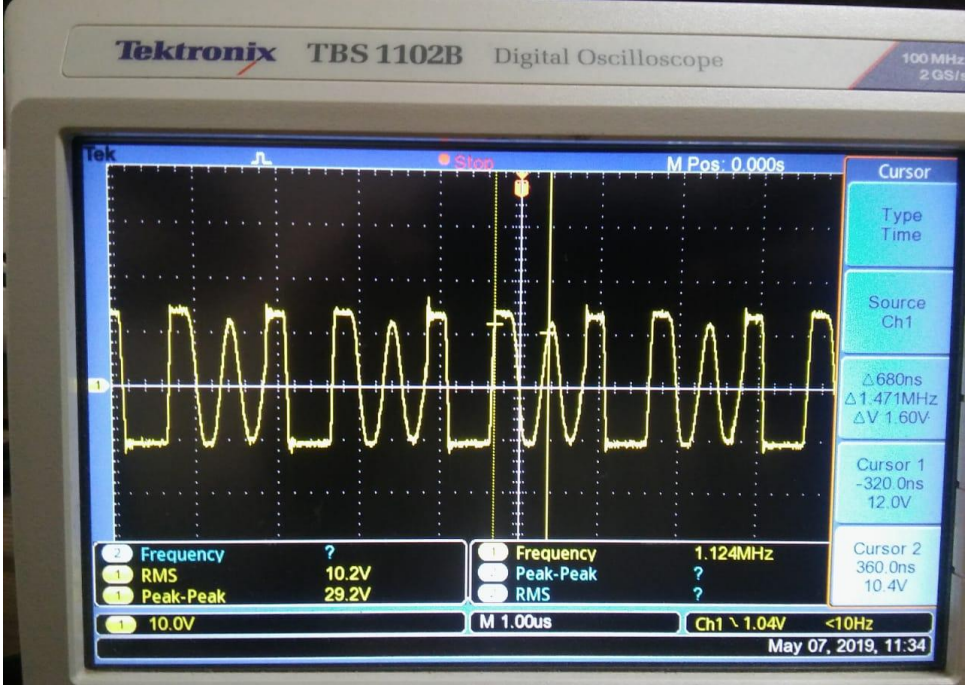

2. Below 2 are VOUT waveforms. 1st one is p-p voltage of switching noise and 2nd is switching frequency.

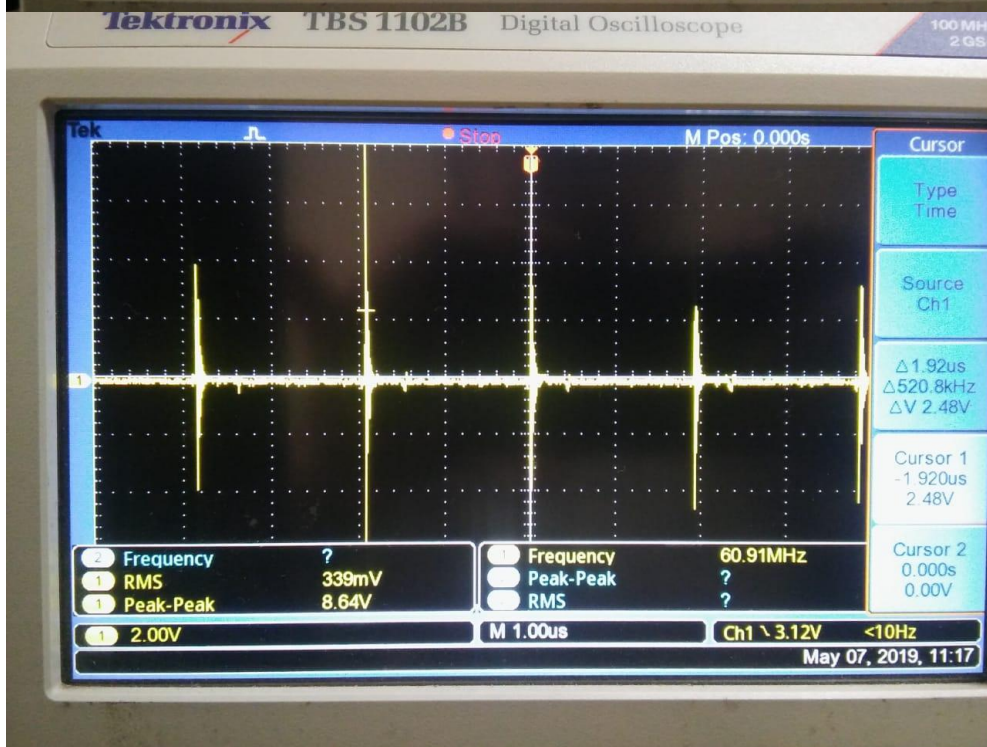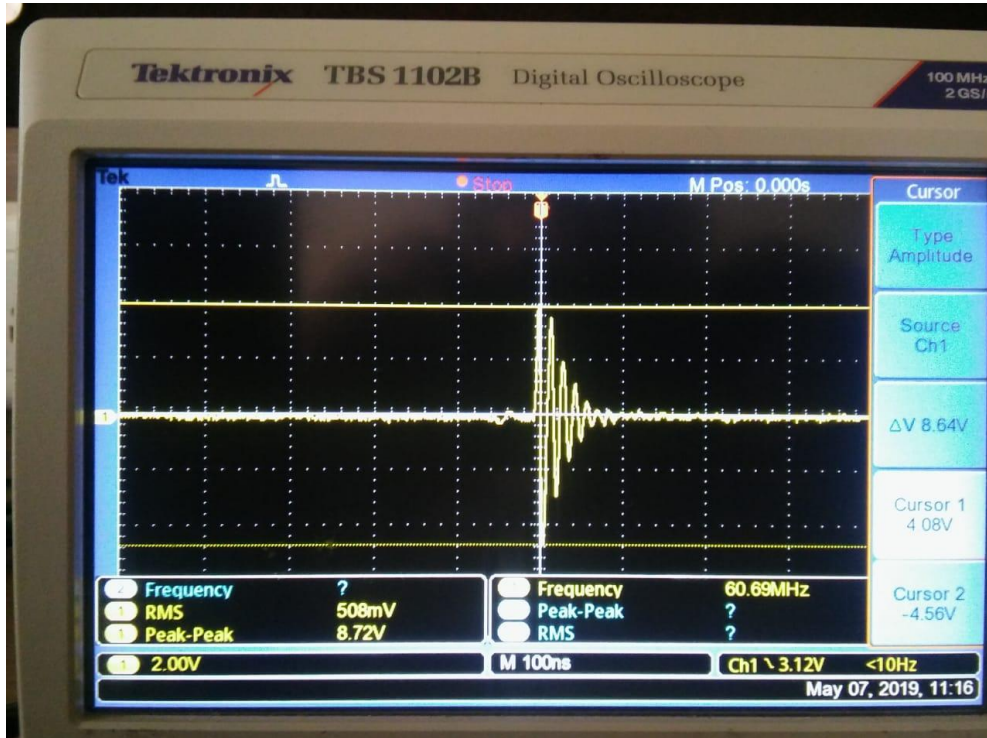

3. This is VIN waveform

