
Transient Thermal Resistance vs. Pulse Width

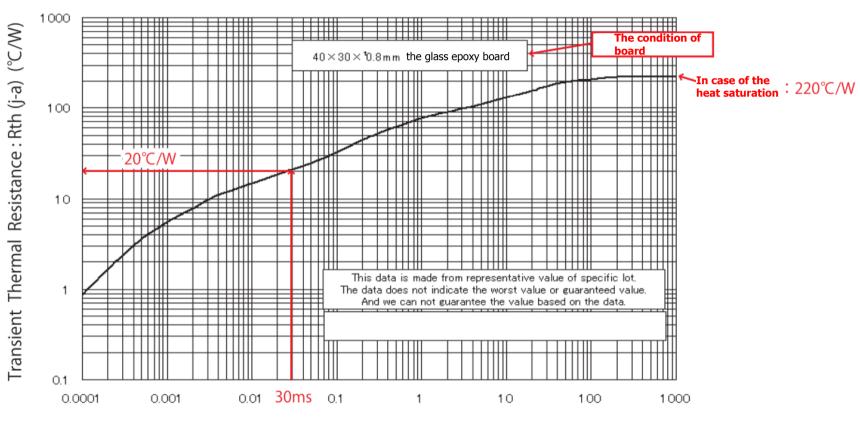

Pulse Width: Pw (S)