


U106 AD8686SIPZAR

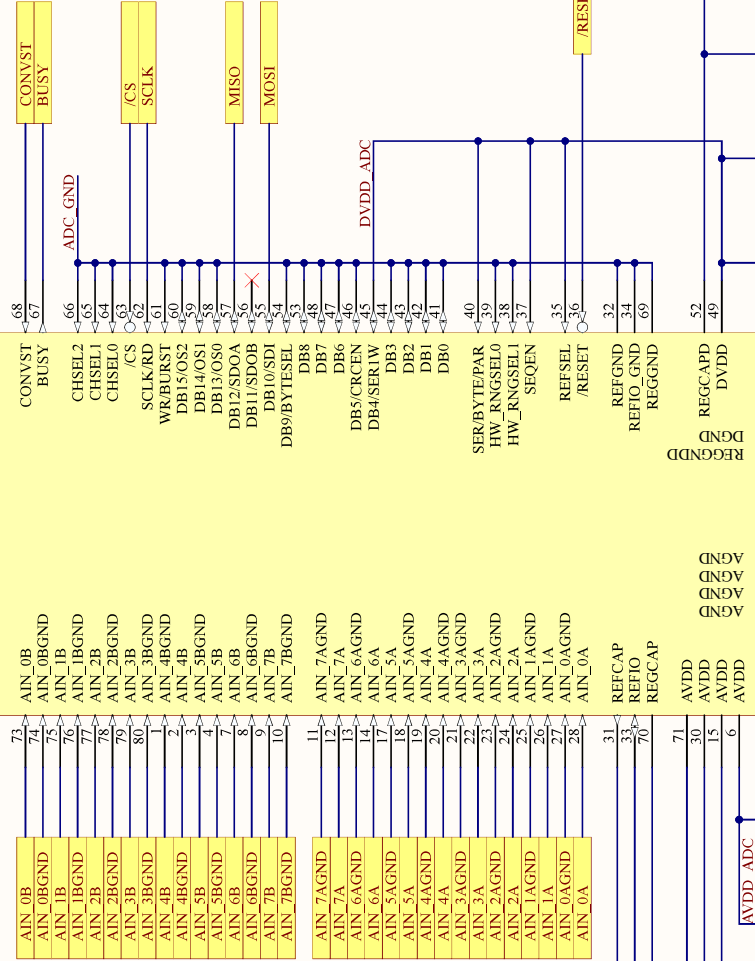

Layout Note: Place C120-C133 as close as possible to their associated pins

